

<https://daikin-p.ru>

**DAIKIN**

**Marine type**

**Container Refrigeration Unit**

---

**Service manual**

**Model**

**LKEN5BD4**

This manual describes the features, functions, operation, and maintenance of the container refrigeration unit. In addition, the manuals listed below are also available.

- Parts list
- Compressor disassembly & reassembly manual

Please refer also to these manuals.

## **DANGER**

Do not disconnect plug until power supply is shut off.

## **CAUTION**

Do not start the unit until plugs are connected and generator plant is operated.

## **NOTE**

- 1 . Confirm the function of the recorder when the chart paper is replaced with a new one. Do not mistake the recording pen of chilled cargo for that of frozen cargo.
- 2 . Accurately tighten the covers for the control box and the recorder.
- 3 . Confirm that the stop valves in the refrigeration circuits are opened before operation.


<b>1. Specification</b> .....	<b>4</b>
1.1 General specification .....	4
1.2 Outline .....	5
1.3 Construction .....	6
(1) Outside .....	6
(2) Inside .....	7
(3) Control box .....	8
1.4 Piping diagram .....	9
1.5 Wiring diagram .....	10
1.5.1 Sequence wiring .....	10
1.5.2 Actual wiring .....	11
<b>2. Operation</b> .....	<b>13</b>
2.1 Preparation and operation .....	13
2.2 Checking during operation .....	16
2.3 Maintenance after operation .....	17
<b>3. Operating modes and circuits</b> .....	<b>18</b>
3.1 Voltage selection system (switching over 200V and 400V class) .....	18
3.2 Air cooled and water cooled operation .....	19
3.3 Frozen operation .....	20
3.4 Chilled operation-capacity control .....	22
3.5 Heating operation .....	23
3.6 Defrost operation .....	24
3.7 High pressure control .....	24
3.8 Pilot lamps and monitoring circuit .....	25
<b>4. Major components and maintenance</b> .....	<b>26</b>
4.1 Components related with refrigeration circuit .....	26
4.1.1 Compressor .....	26
4.1.2 Air-cooled condenser and evaporator .....	26
4.1.3 Water-cooled condenser .....	26
4.1.4 Accumulator-receiver with heat exchanger .....	27
4.1.5 Expansion valve .....	27
4.1.6 Liquid/moisture indicator .....	28
4.1.7 Dryer .....	29
4.1.8 Solenoid valves .....	30
4.2 Components related with the air system .....	31
4.2.1 Fans and motors .....	31
4.2.2 Ventilator .....	32
4.3 Temperature control system .....	33
4.3.1 Electronic controller (DUE-DK82-101) .....	33
4.3.2 Modulating control valve (20M) .....	45
4.3.3 Recorder .....	46
4.4 Description on electrical and functional parts .....	49
4.4.1 Dual pressure switch (63HL) .....	49
4.4.2 High pressure control pressure switch (63CL) .....	50
4.4.3 Oil pressure switch (63QL) .....	51
4.4.4 Water pressure switch (63W) .....	52
4.4.5 Defrost thermistor (TH <sub>1</sub> ) .....	52
4.4.6 Over heat thermistor (TH <sub>2</sub> ) .....	52
4.4.7 Electric heaters .....	53

5. Set values of functional parts.....	54
6. Operating pressure and running current.....	55
7. Troubles and countermeasures.....	56
8. PTI (Pre Trip Inspection).....	58
9. How to maintenance.....	60
9.1 Handling method of the stop valve .....	60
9.2 Attaching or removing points of pressure gauge .....	61
9.3 Pump down .....	62
9.4 Charging and purging the refrigerant .....	63



## 1. Specification

### 1.1 General specification

Power supply	AC 200V	3 Phase 50/60Hz
	AC 220V	3 Phase 60 Hz
	AC 380 ~ 415V	3 Phase 50 Hz
	AC 440V	3 Phase 60 Hz
	(Dual voltage rating with voltage selector)	
Compressor	Semi hermetic type (3.75 kW)	
Evaporator	Cross finned coil type	
Air cooled condenser	Cross finned coil type	
Water cooled condenser	Hairpin-shaped tube-in-tube type	
Accumulator-receiver with heat exchanger	Vertical cylinder type	
Fan	Motor direct driven propeller type	
Fan motor	Single-phase squirrel-cage induction motor	
Defrost		
Heat source	Electric heater	
Initiation	Timer or manual switch.	
Termination	Sensing evaporator temperature by defrost thermistor	
Refrigerant control	Thermostatic expansion valve	
Capacity control	Hot gas bypass control with modulating control valve	
Protection devices	Circuit breaker, Over current relay, Dual pressure switch, Oil pressure switch, Fusible safety plug, Overheat thermistor, Compressor motor protection thermostat, Fan motor protection thermostat.	
Refrigerant	R-12: 4.5 (kg)/9.9 (lbs)	
Lubricant	SUNISO 3GS-DI : 2.3 (ℓ)	
Weight	Approx. 590 (kg)/1300 (lbs)	


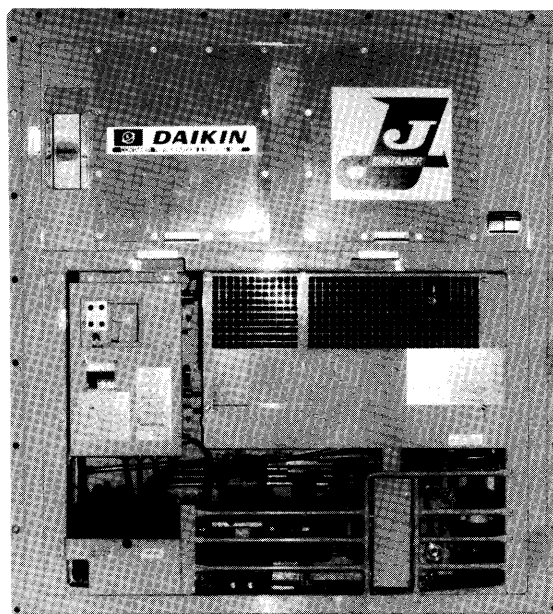


1.2 Outline

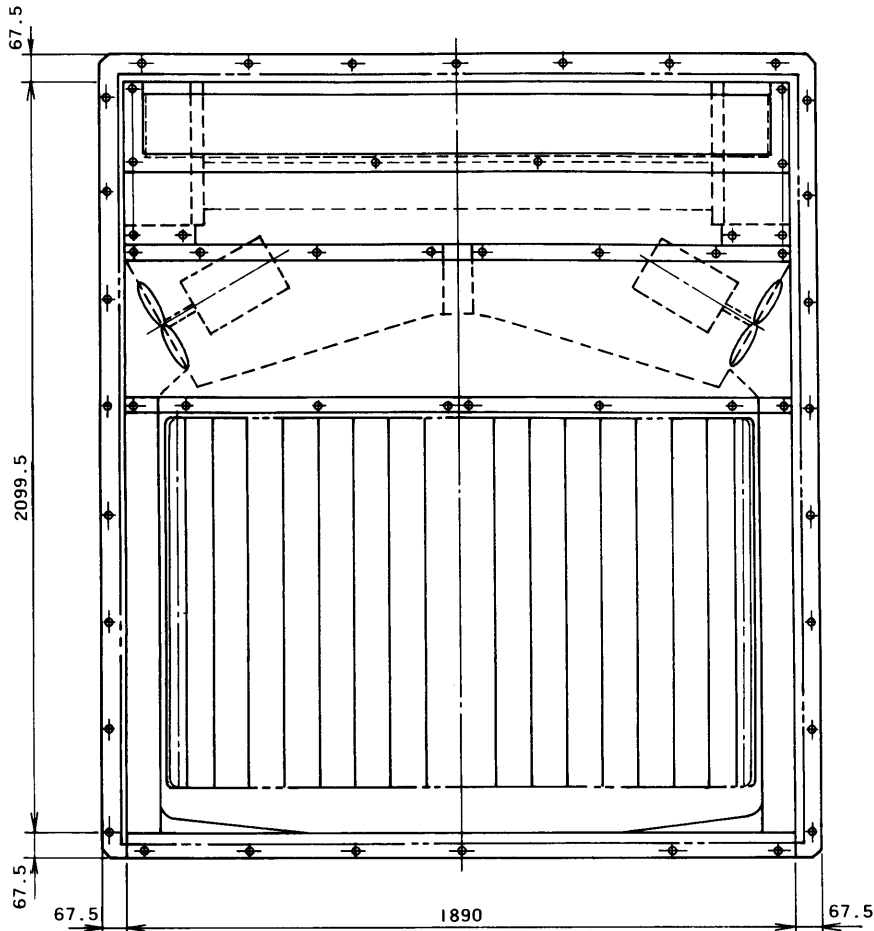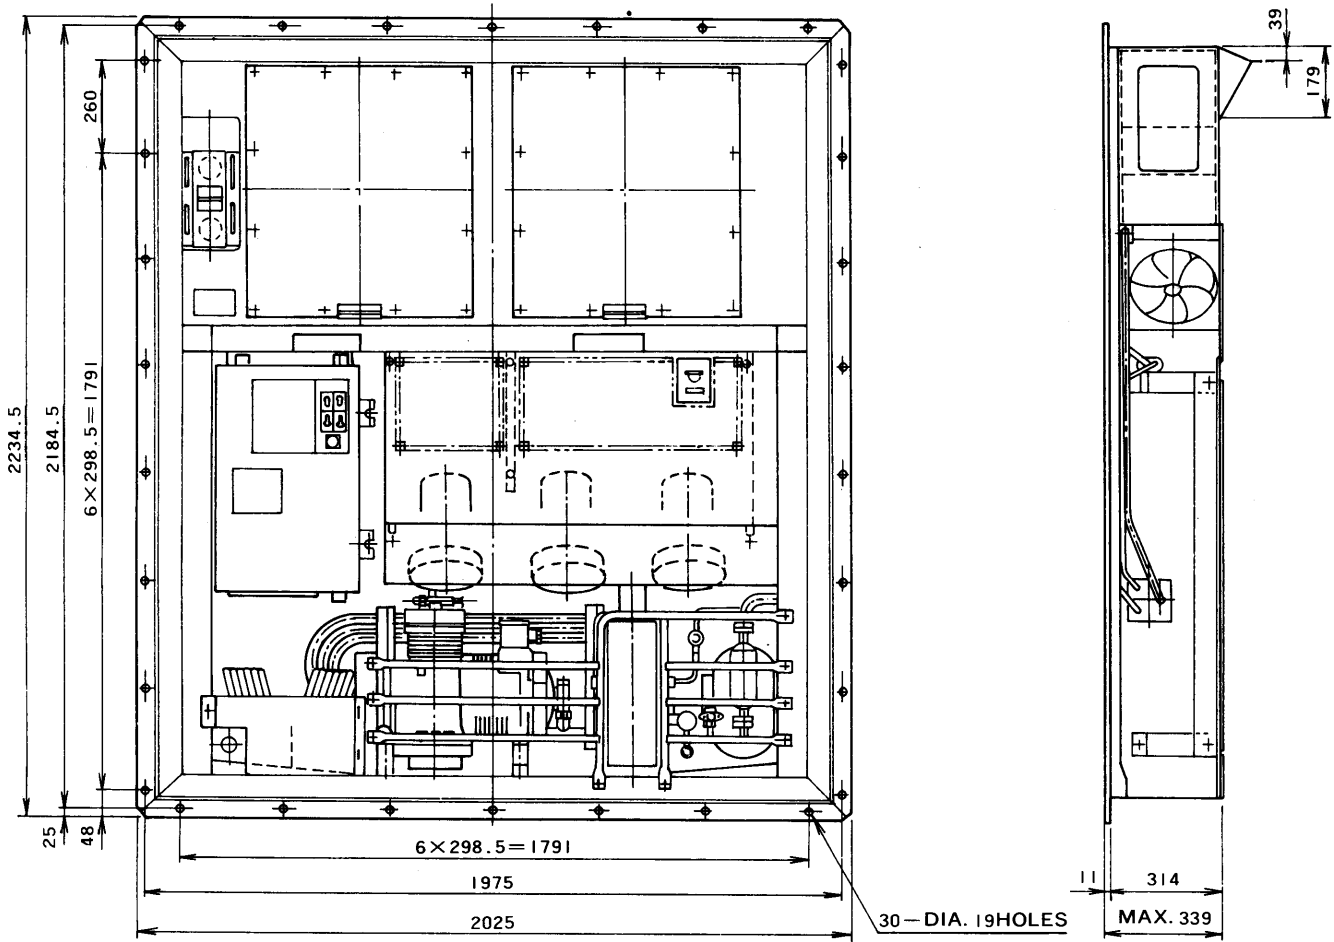


### 1.3 Construction

#### (1) Outside

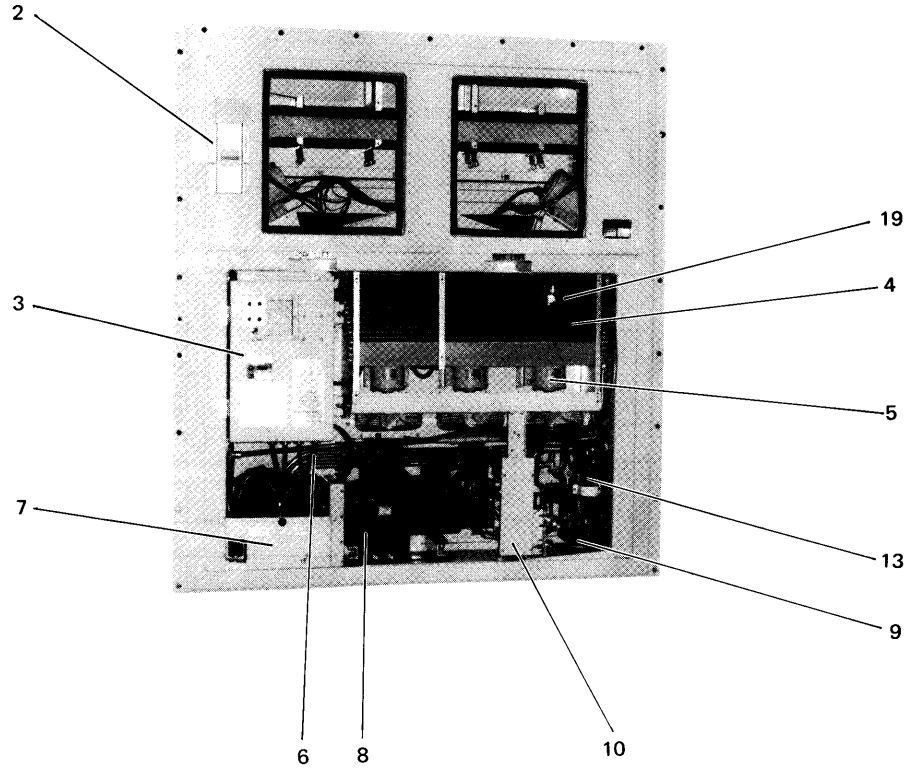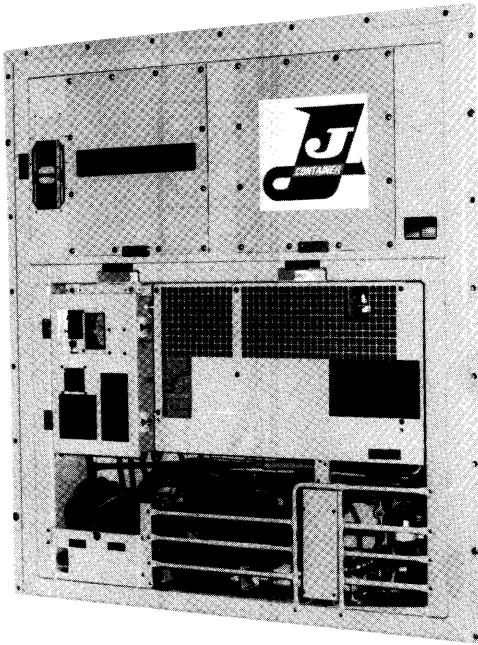


- 1 Access panel
- 2 Ventilator
- 3 Control box
- 4 Air cooled condenser
- 5 Condenser fan motor
- 6 Water cooled condenser
- 7 Cable stowage
- 8 Compressor
- 9 Accumulator-receiver with heat exchanger
- 10 Pressure switch box
  - 10 - 1 Dual pressure switch (63HL)
  - 10 - 2 Oil pressure switch (63QL)
  - 10 - 3 High pressure control switch (63CL)
  - 10 - 4 Water pressure switch (63W)
- 11 Water inlet coupling
- 12 Water outlet coupling
- 13 Dryer
- 14 Liquid/moisture indicator
- 15 Modulating control valve (20M)
- 16 Solenoid valve (20S<sub>1</sub> for main line)
- 17 Solenoid valve (20S<sub>2</sub> for liquid control)
- 18 Stop valve for hot gas line
- 19 Expansion valve

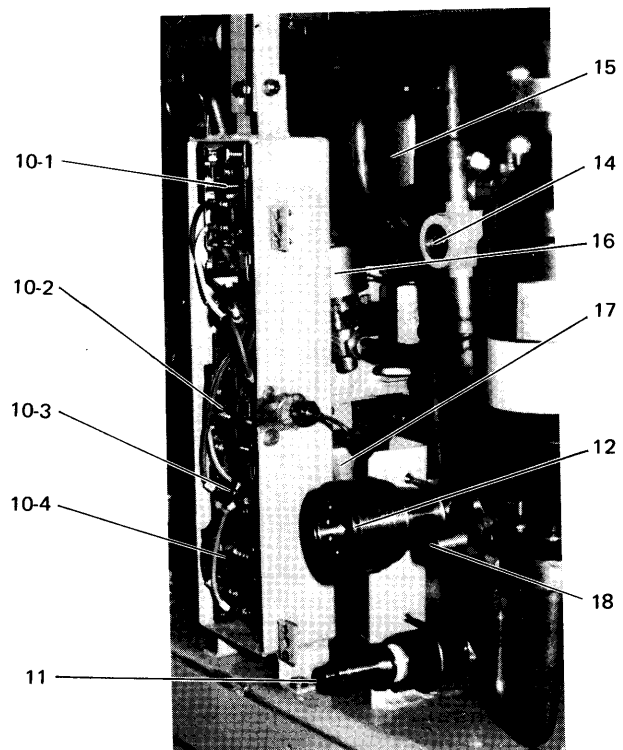





(2) Inside

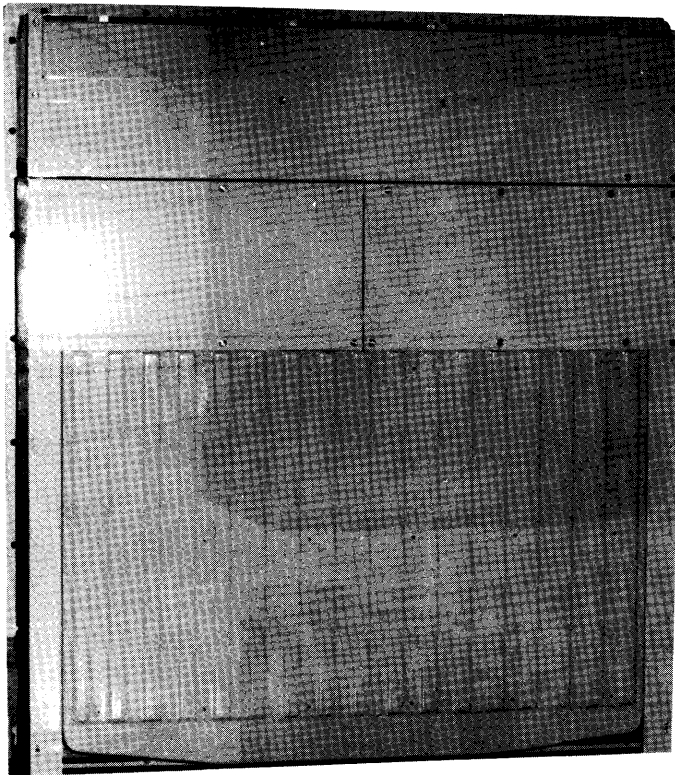


- 1 Evaporator
- 2 Evaporator fan motor
- 3 Defrost thermistor.
- 4 Overheat thermistor
- 5 Defrost heater
- 6 Drain port heater
- 7 Junction box
- 8 Return air sensor
- 9 Supply air sensor

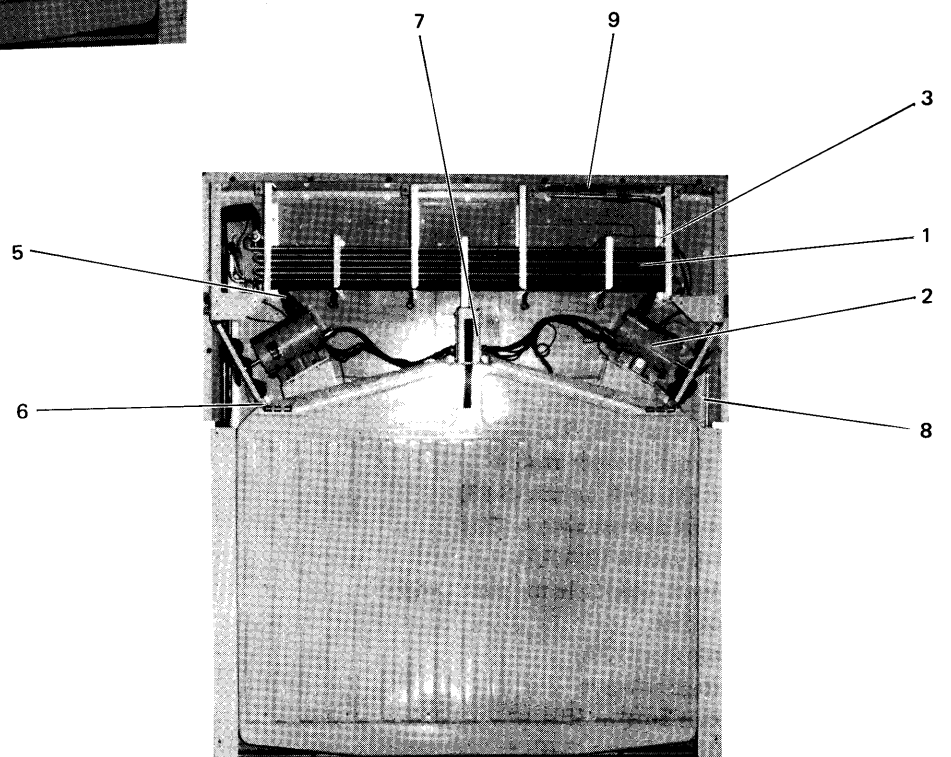


(3) Control box

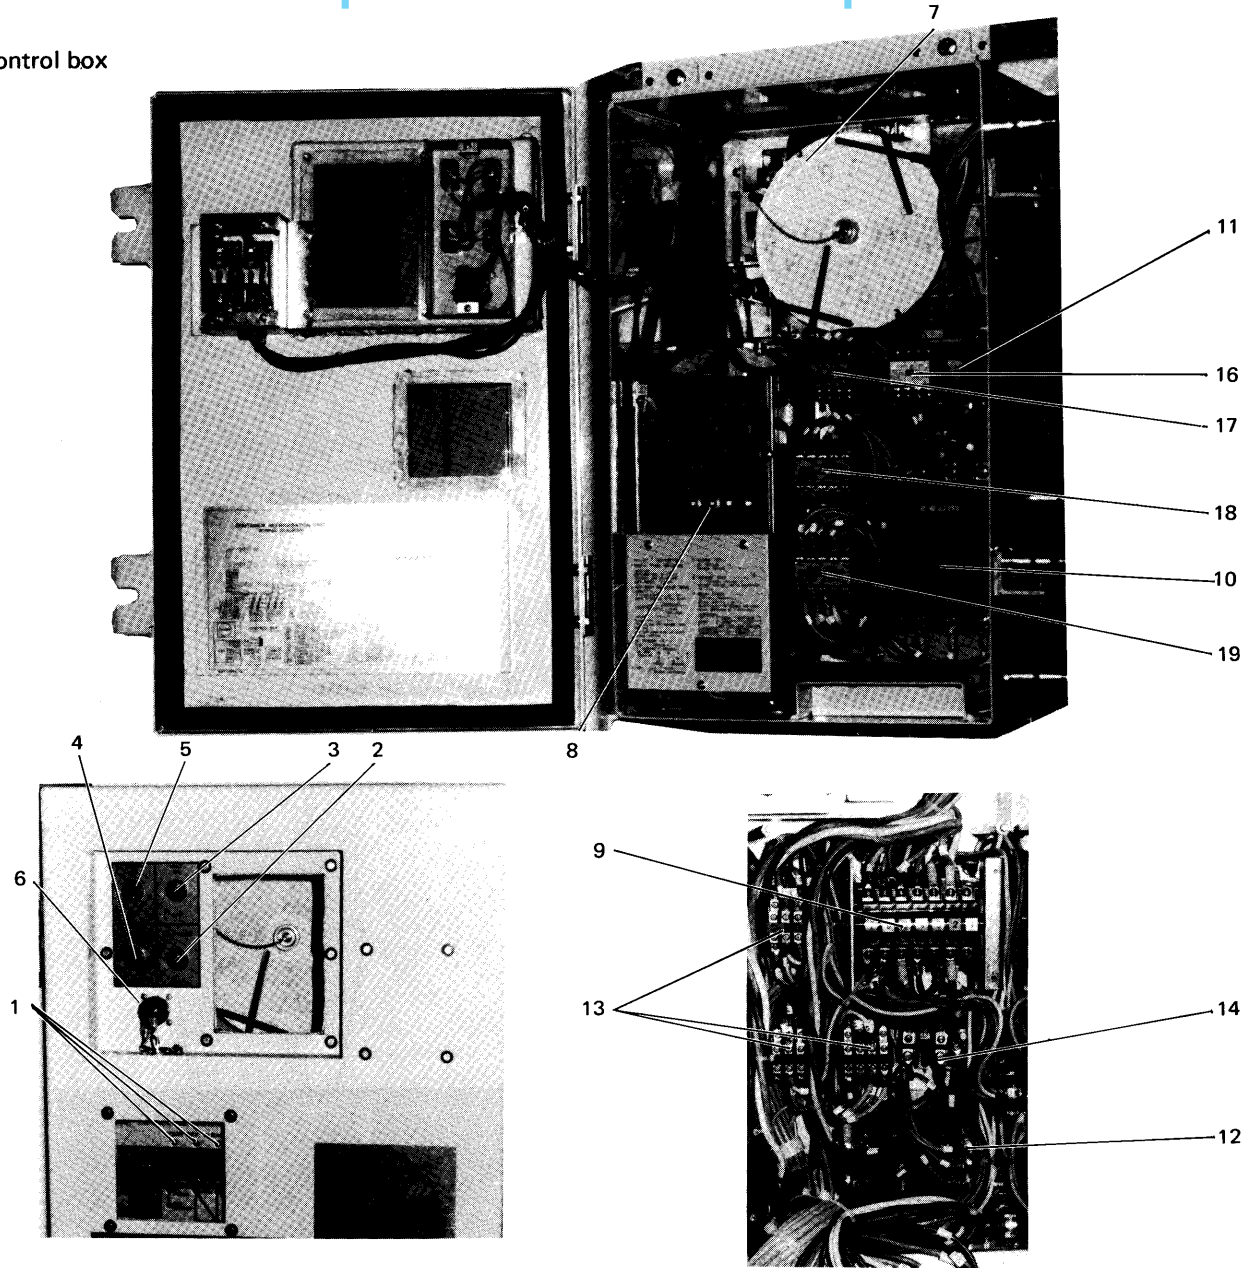

- 1 Pilot lamp (OL, RL, GL)
- 2 Oil pressure reset switch
- 3 Unit ON-OFF switch (3-88)
- 4 Manual defrost switch (3D)
- 5 Lamp switch (3-30L)
- 6 Cannon receptacle for pilot lamp
- 7 Recorder
- 8 Controller (23A)
- 9 Voltage selector
- 10 Circuit breaker (52C<sub>1</sub>)
- 11 Circuit breaker (52C<sub>2</sub>)
- 12 Transformer (Tr)
- 13 Voltage selector relay (2X<sub>1,2,3</sub>)
- 14 Over current relay (51C)
- 15 Capacitor (C<sub>1,2,3</sub>)
- 16 Evap. fan motor relay (88F)
- 17 Heater relay (88H<sub>1</sub>)
- 18 Heater relay (88H<sub>2</sub>)
- 19 Compressor relay (88C)

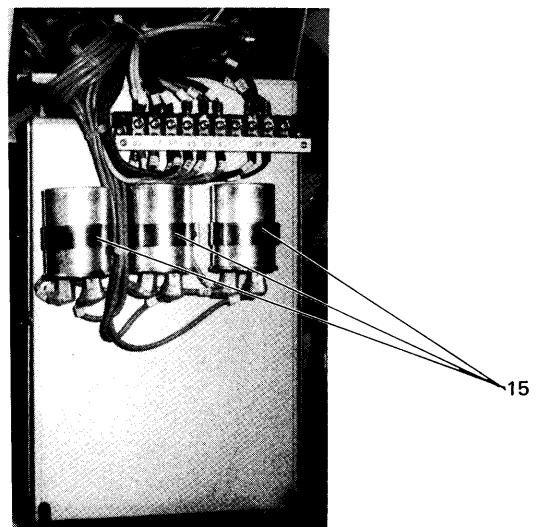

1.4 Piping diagram


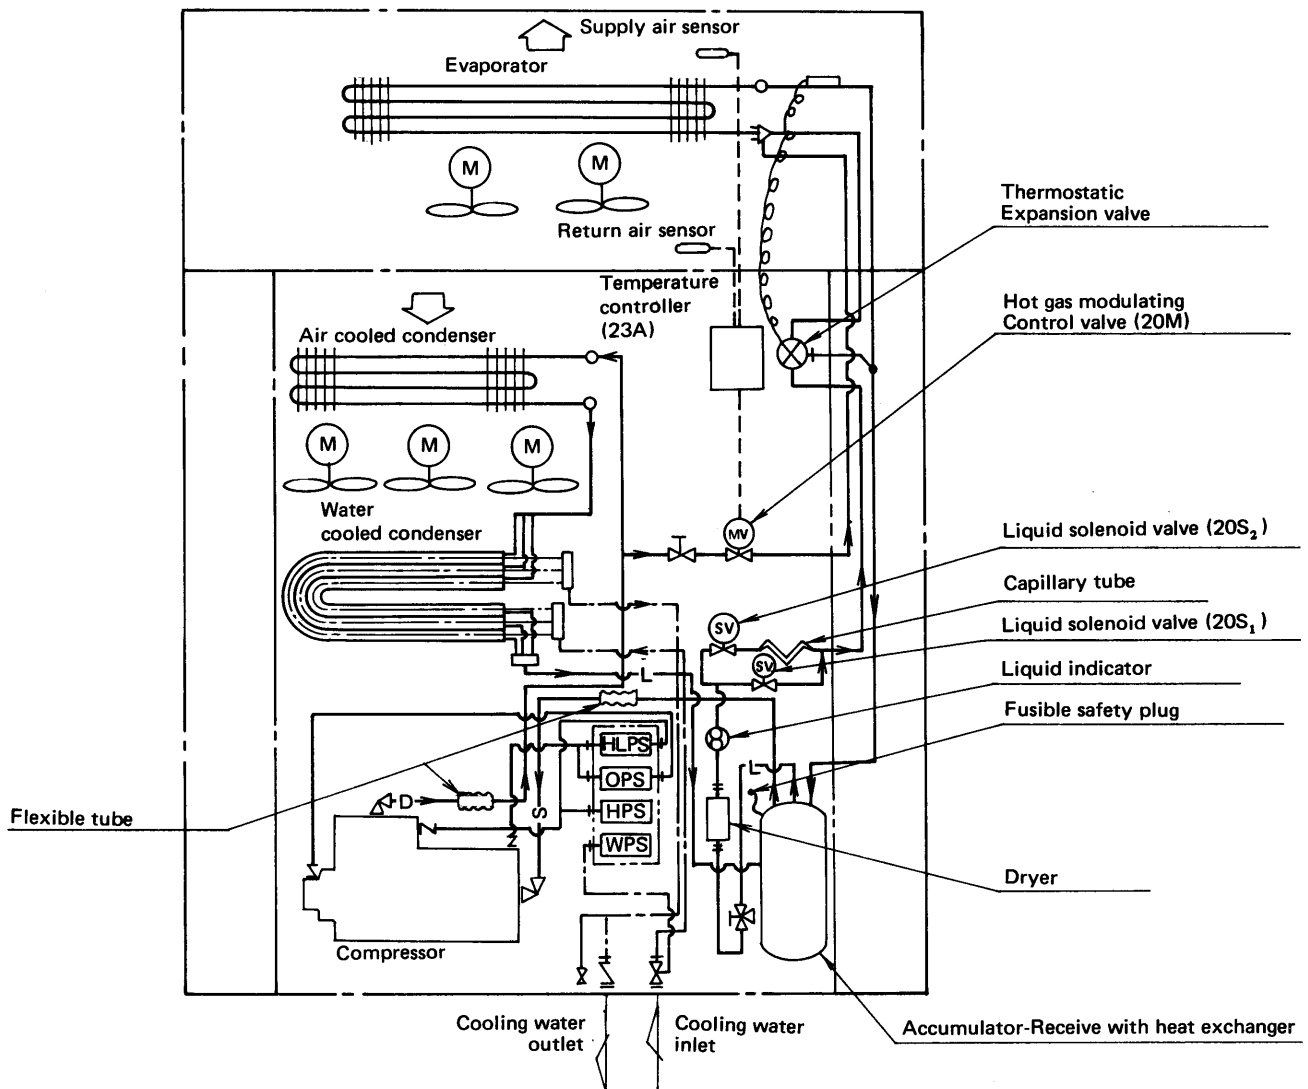


— L —	LIQUID PIPE
— S —	SUCTION PIPE
— D —	DISCHARGE PIPE
— H —	FLANGE CONNECTION
—   —	FLARE CONNECTION
— — —	REFRIGERANT PIPE
— · — ·	WATER PIPE
- - - - -	ELECTRIC WIRING

HLPF(63HL)	DUAL PRESSURE SWITCH
OPS (63QL)	OIL PRESSURE PROTECTION SWITCH
WPS (63W)	WATER PRESSURE SWITCH
HPS (63CL)	HIGH PRESSURE CONTROL SWITCH

1.5 Wiring diagram

1.5.1 Sequence wiring

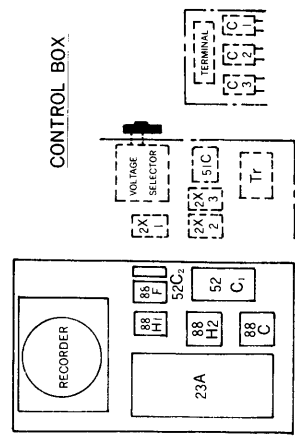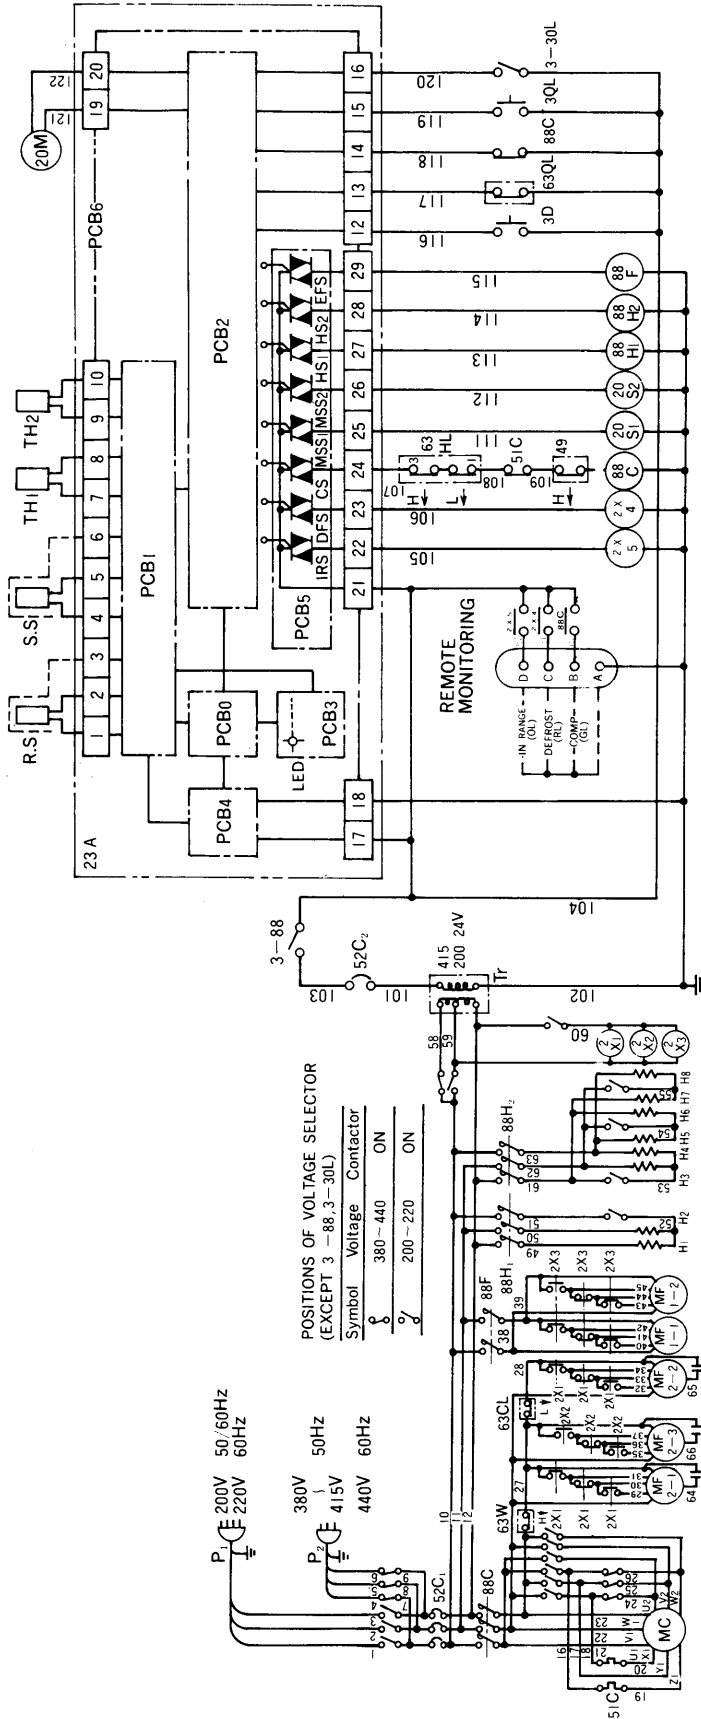


P	POWER PLUG	Tr	TRANSFORMER	23A	ELECTRONIC CONTROLLER
52C	CIRCUIT BREAKER	3-OL	OIL PRESSURE RESET SWITCH	PCB-0	CPU PCB
88C	MAGNETIC SWITCH FOR COMPRESSOR	3-88	ON-OFF SWITCH	PCB-1	ANALOG PCB
88F	MAGNETIC SWITCH FOR FAN MOTOR	3-30L	LAMP SWITCH	PCB-2	INPUT/OUTPUT PCB
88H	MAGNETIC SWITCH FOR HEATER	3D	MANUAL DEFROST SWITCH	PCB-3	DISPLAY PCB
2X	MAGNETIC RELAY	63W	WATER PRESSURE SWITCH	PCB-4	POWER SOURCE PCB
MC	COMPRESSOR MOTOR	63CL	HIGH PRESSURE CONTROL SWITCH	PCB-5	SOLID STATE RELAY PCB
MF1	EVAPORATOR FAN MOTOR	63HL	DUAL PRESSURE SWITCH	PCB-6	TERMINAL PCB
MF2	CONDENSER FAN MOTOR	63QL	OIL PRESSURE SWITCH	R.S	RETURN AIR SENSOR
H1, ~H6	EVAPORATOR COIL HEATER	51C	OVER CURRENT RELAY	S.S	SUPPLY AIR SENSOR
H7, ~8	DRAIN PORT HEATER	49	COMPRESSOR PROTECTOR	TH1	DEFROST THERMISTOR
20M	MODULATING VALVE	20S	SOLENOID VALVE	TH2	OVER HEAT THERMISTOR
C	CAPACITOR				

**CAUTION**  
Insulation test shouldn't be made to control circuit (Line No. 101 ~ 122).

1.5.2 Actual wiring  
CONTROL BOX COVER

CONTROL BOX


JUNCTION TERMINAL BOX

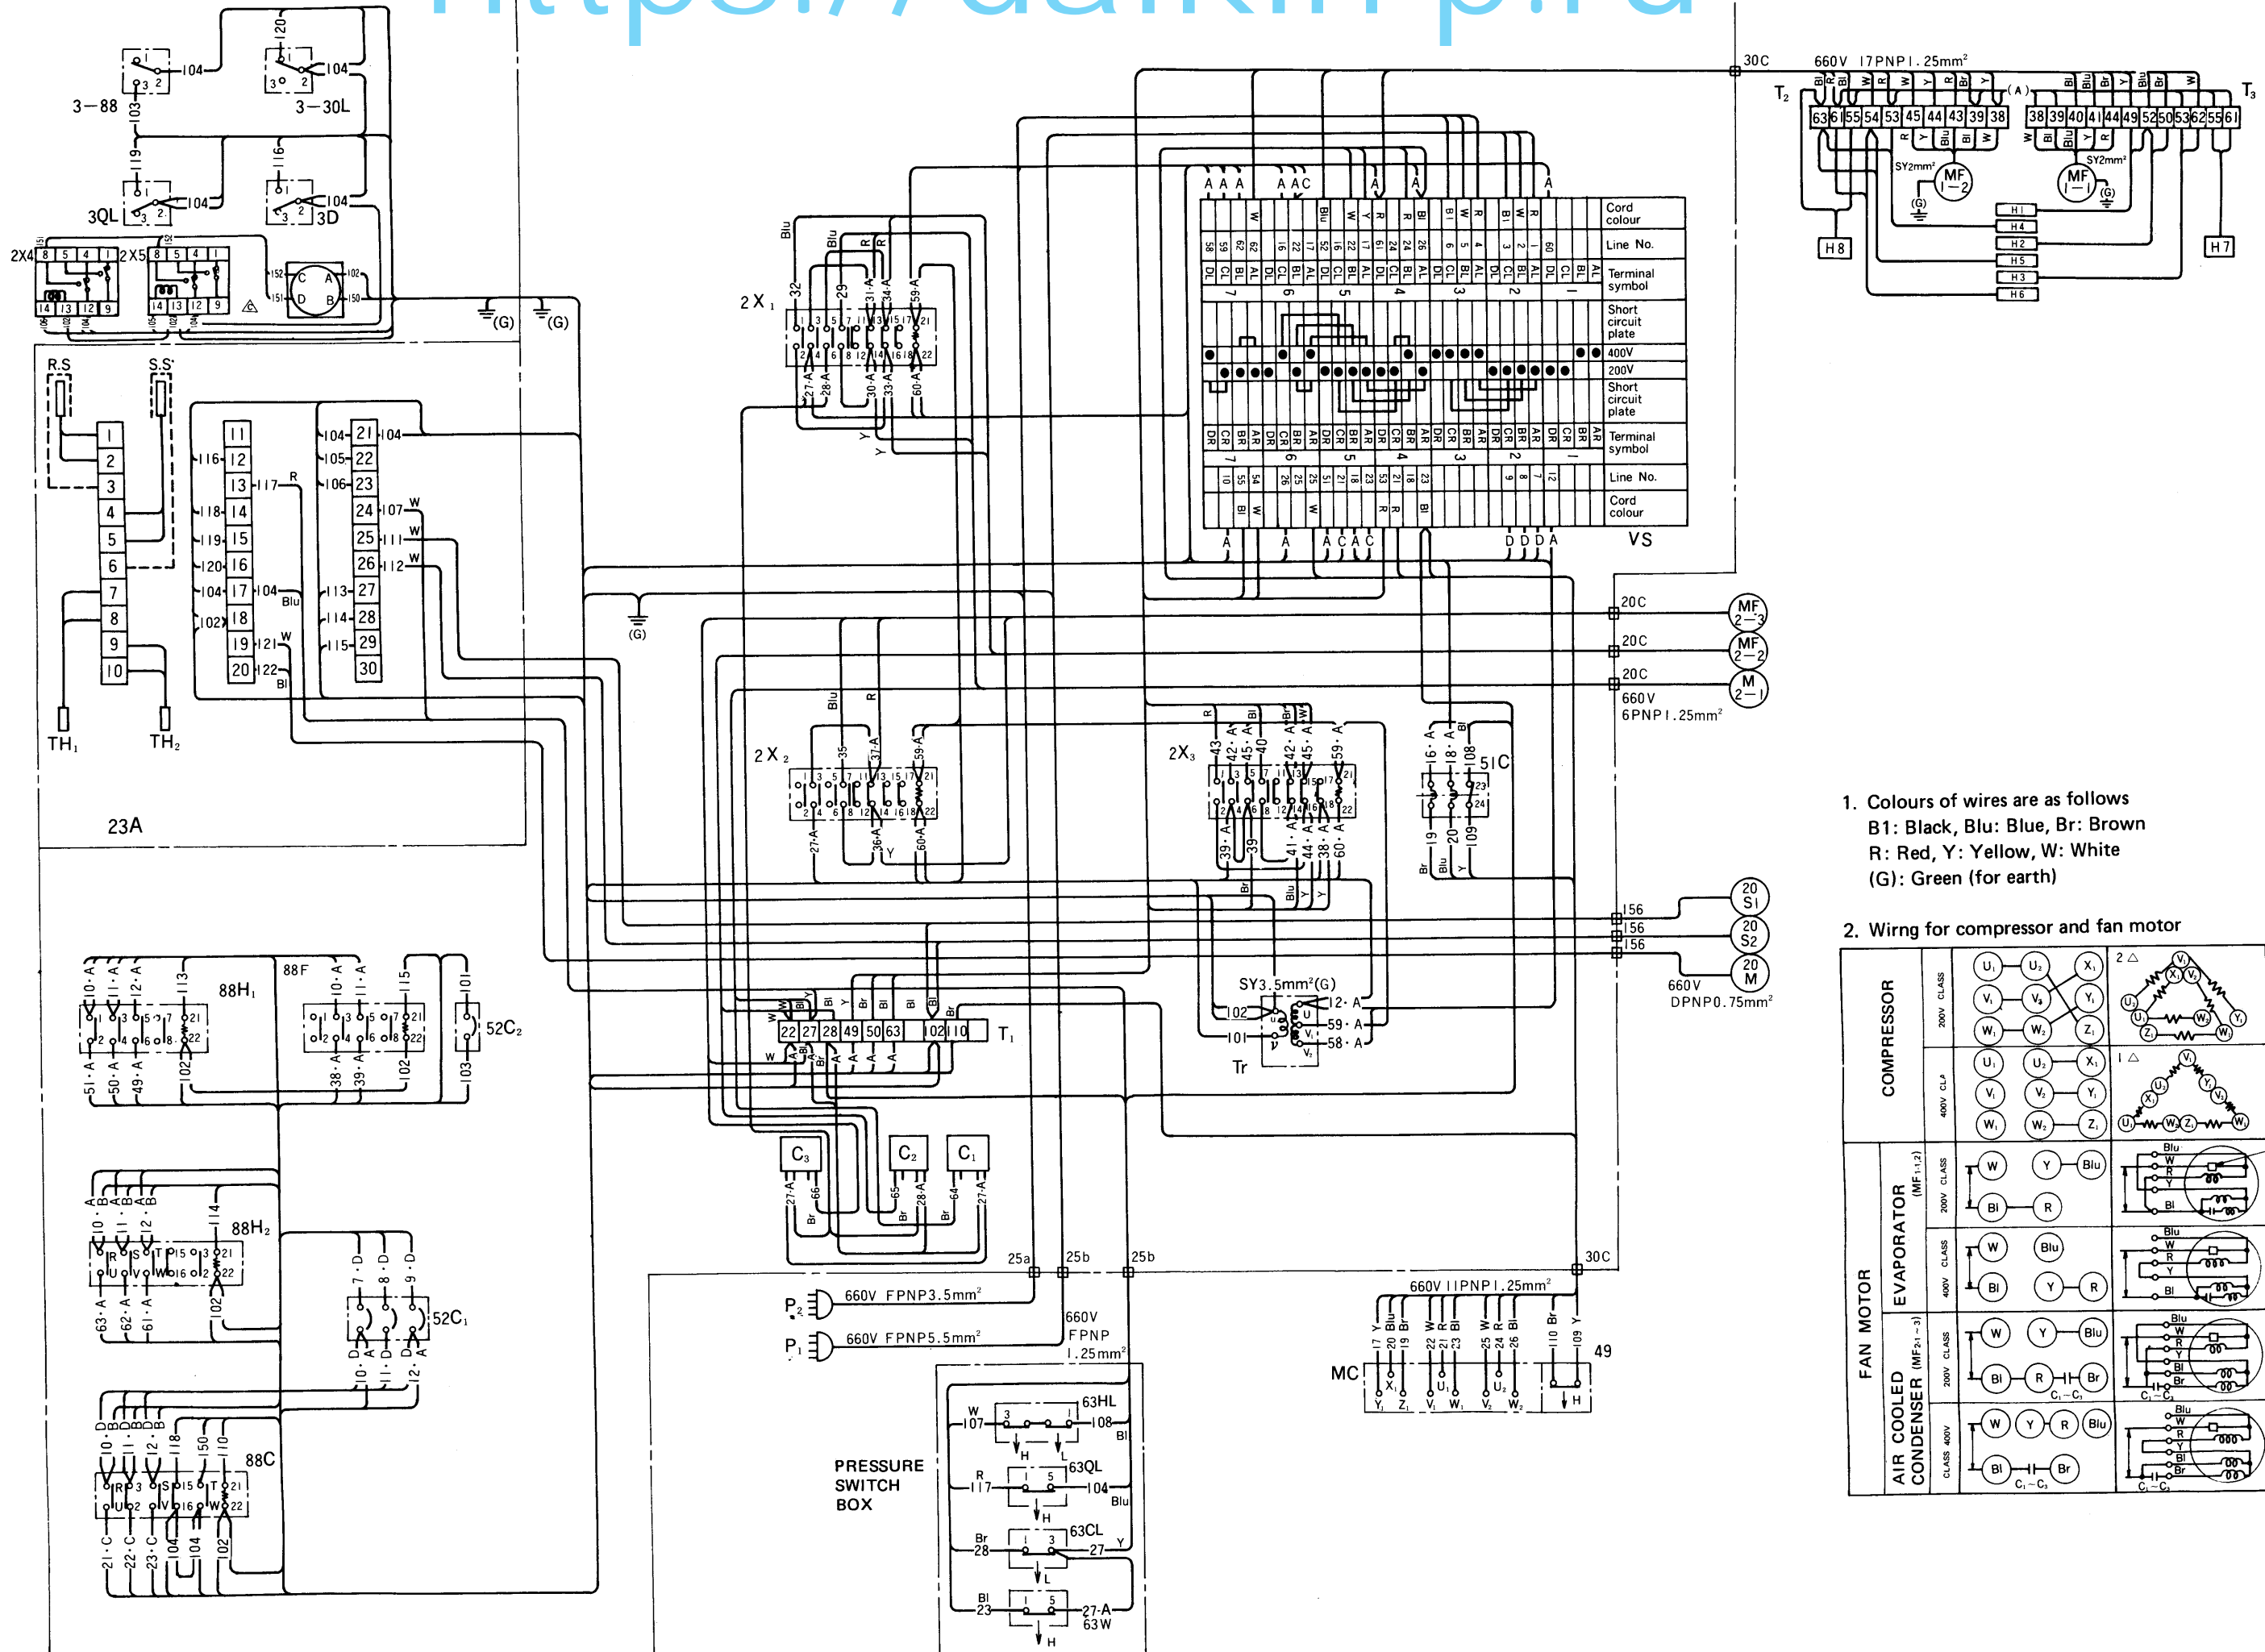


Line No.	Cord colour	Terminal symbol	Short circuit plate	Terminal symbol	Line No.	Cord colour
1	Blu	AR	400V	AR	1	Blu
2	Blu	AR	200V	AR	2	Blu
3	Blu	AR	Short circuit plate	AR	3	Blu
4	Blu	AR		AR	4	Blu
5	Blu	AR		AR	5	Blu
6	Blu	AR		AR	6	Blu
7	Blu	AR		AR	7	Blu
8	Blu	AR		AR	8	Blu
9	Blu	AR		AR	9	Blu
10	Blu	AR		AR	10	Blu
11	Blu	AR		AR	11	Blu
12	Blu	AR		AR	12	Blu
13	Blu	AR		AR	13	Blu
14	Blu	AR		AR	14	Blu
15	Blu	AR		AR	15	Blu
16	Blu	AR		AR	16	Blu
17	Blu	AR		AR	17	Blu
18	Blu	AR		AR	18	Blu
19	Blu	AR		AR	19	Blu
20	Blu	AR		AR	20	Blu
21	Blu	AR		AR	21	Blu
22	Blu	AR		AR	22	Blu
23	Blu	AR		AR	23	Blu
24	Blu	AR		AR	24	Blu
25	Blu	AR		AR	25	Blu
26	Blu	AR		AR	26	Blu
27	Blu	AR		AR	27	Blu
28	Blu	AR		AR	28	Blu
29	Blu	AR		AR	29	Blu
30	Blu	AR		AR	30	Blu
31	Blu	AR		AR	31	Blu
32	Blu	AR		AR	32	Blu
33	Blu	AR		AR	33	Blu
34	Blu	AR		AR	34	Blu
35	Blu	AR		AR	35	Blu
36	Blu	AR		AR	36	Blu
37	Blu	AR		AR	37	Blu
38	Blu	AR		AR	38	Blu
39	Blu	AR		AR	39	Blu
40	Blu	AR		AR	40	Blu
41	Blu	AR		AR	41	Blu
42	Blu	AR		AR	42	Blu
43	Blu	AR		AR	43	Blu
44	Blu	AR		AR	44	Blu
45	Blu	AR		AR	45	Blu
46	Blu	AR		AR	46	Blu
47	Blu	AR		AR	47	Blu
48	Blu	AR		AR	48	Blu
49	Blu	AR		AR	49	Blu
50	Blu	AR		AR	50	Blu
51	Blu	AR		AR	51	Blu
52	Blu	AR		AR	52	Blu
53	Blu	AR		AR	53	Blu
54	Blu	AR		AR	54	Blu
55	Blu	AR		AR	55	Blu
56	Blu	AR		AR	56	Blu
57	Blu	AR		AR	57	Blu
58	Blu	AR		AR	58	Blu
59	Blu	AR		AR	59	Blu
60	Blu	AR		AR	60	Blu
61	Blu	AR		AR	61	Blu
62	Blu	AR		AR	62	Blu
63	Blu	AR		AR	63	Blu
64	Blu	AR		AR	64	Blu
65	Blu	AR		AR	65	Blu
66	Blu	AR		AR	66	Blu
67	Blu	AR		AR	67	Blu
68	Blu	AR		AR	68	Blu
69	Blu	AR		AR	69	Blu
70	Blu	AR		AR	70	Blu
71	Blu	AR		AR	71	Blu
72	Blu	AR		AR	72	Blu
73	Blu	AR		AR	73	Blu
74	Blu	AR		AR	74	Blu
75	Blu	AR		AR	75	Blu
76	Blu	AR		AR	76	Blu
77	Blu	AR		AR	77	Blu
78	Blu	AR		AR	78	Blu
79	Blu	AR		AR	79	Blu
80	Blu	AR		AR	80	Blu
81	Blu	AR		AR	81	Blu
82	Blu	AR		AR	82	Blu
83	Blu	AR		AR	83	Blu
84	Blu	AR		AR	84	Blu
85	Blu	AR		AR	85	Blu

- Colours of wires are as follows  
B1: Black, Blu: Blue, Br: Brown  
R: Red, Y: Yellow, W: White  
(G): Green (for earth)

2. Wirng for compressor and fan motor

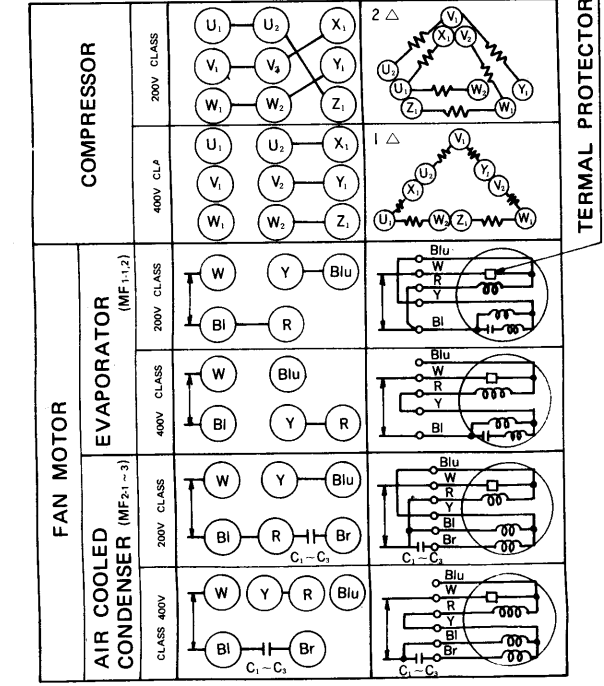

PRESSURE SWITCH BOX

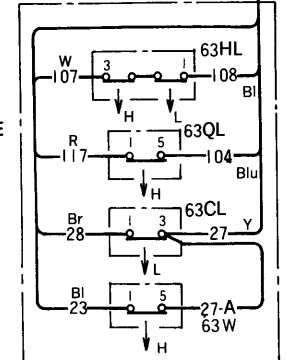



## 2. Operation

Operate the unit by the procedures given below.

- Preparation and operation
- Checking during operation
- Maintenance after operation

### 2.1 Preparation and operation

- (1) Confirm that supply power is off.  
Confirm that the power source, the circuit breaker and unit ON-OFF switch are turned off before checking for safety's sake.

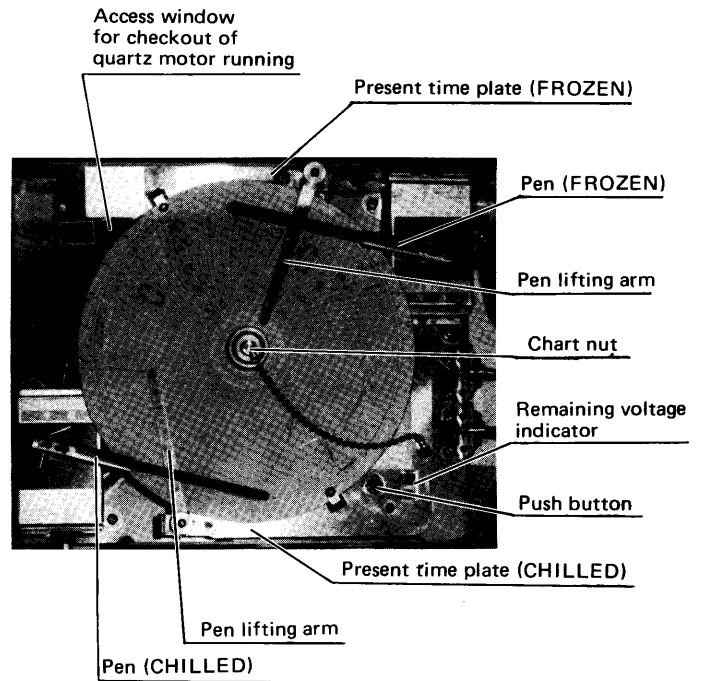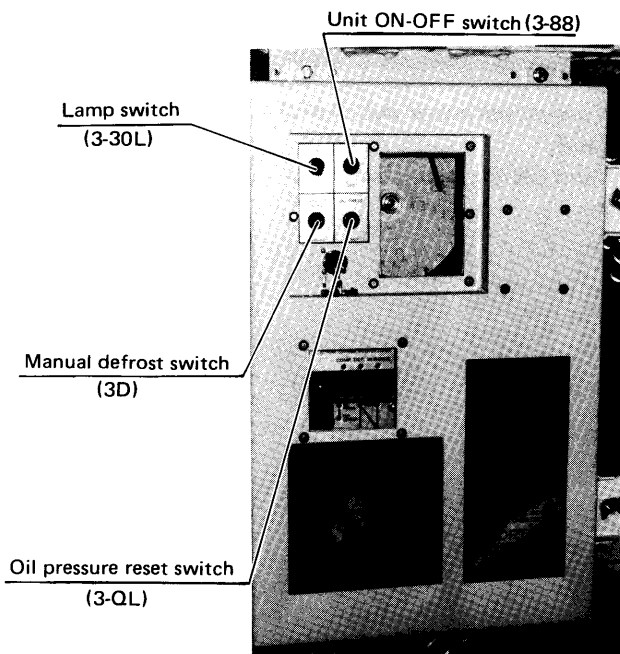


- (3) Setting a piece of recording paper
- Raise the pen by the pen holder, loosen the chart nut, and set a new piece of recording paper.
  - Set the date on the paper to an arrow of present time plate according to the cargo (chilled or frozen).
  - Firmly tighten the chart nut and release the pen according to the cargo (chilled or frozen) so that the recording can be accomplished.

**Note:** To prevent the two pens from recording simultaneously, the interlocking system operates to disable the other pen, when one pen is set.


- (2) Confirming the driving part of recording paper
- Confirming life of a dry element battery  
Press the switch and confirm that the needle of the remaining voltage indicator remains in the blue zone. (The meter functions only when the switch is pressed down)
  - Confirming the function of quartz motor  
After confirming the life of dry element battery, check from the access window the fly wheel inside is rotating.

- (4) Open or close the ventilator.
- Open or close the ventilator according to the cargo. (Be sure to keep it closed during transportation of frozen cargo.)

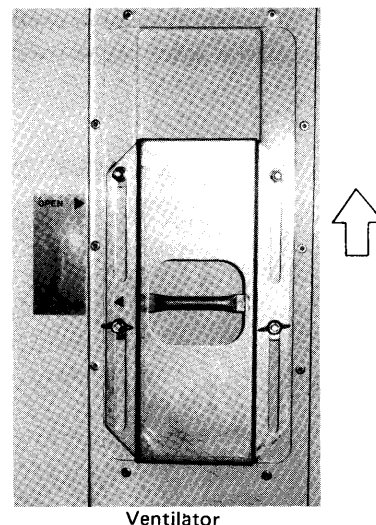

(5) Connect the cooling water piping.

- In the case of water-cooled operation, connect the water piping, and supply water through it.

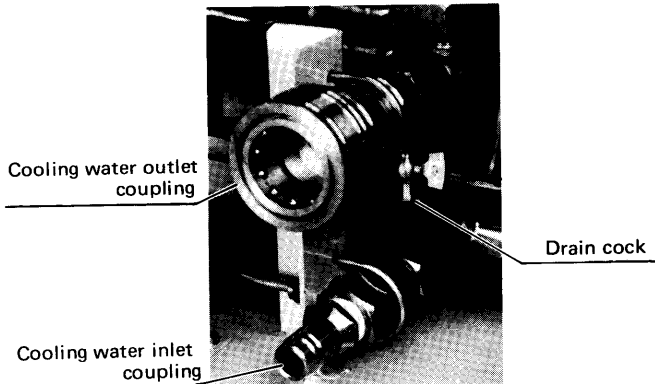

● Connecting method


1. Close the drain cock.
2. Connect the cooling water inlet coupling.
3. Connect the cooling water outlet coupling.
4. Open the drain cock and purge the air.
5. After having completed air purge, close the cock.

● Disconnecting method

1. Disconnect the cooling water outlet coupling.
2. Disconnect the cooling water inlet coupling.
3. Open the cock and drain off.


When the cooling water couplings are connected, insert the coupling on the ship side into the coupling on the unit side until a "click" is heard.

When disconnecting them, pull the coupling on the ship side toward you while pushing the A part of the female coupling in the direction pointed by an arrow mark.

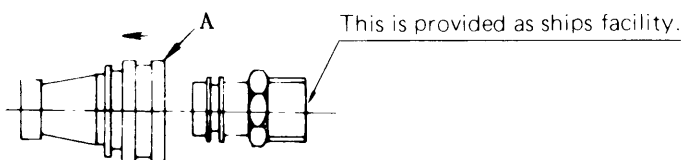


Water connection at outlet side

- (6) Check that all refrigerant stop valves are opened.
- (7) Set the voltage selector according to the supply voltage.

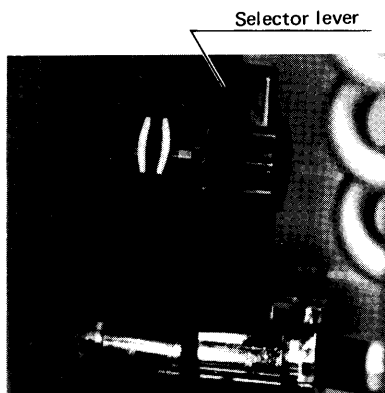


- (8) Plug in the power source which supplies the proper voltage and fasten the plug firmly.

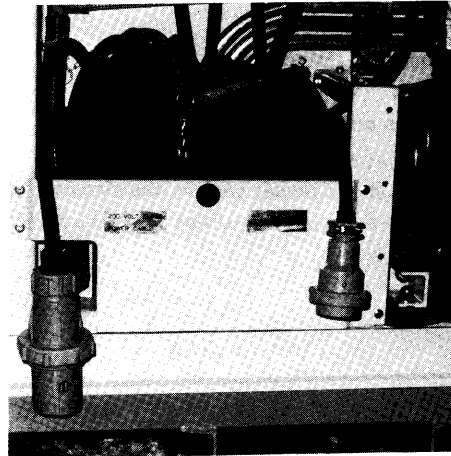

- (9) Turn on the power switch of the facility (outside the unit).
- (10) Turn ON the circuit breakers.

**(11) Temperature setting procedure  
(The electronic controller)**

1. Turn "ON" THE UNIT ON-OFF SWITCH on the control box cover then temperature (°C) is indicated on digital temperature indicator.
2. Turn "SET" THE DIGITAL TEMPERATURE INDICATION SWITCH and present setting temperature is indicated.
3. Remove THE CAP of setpoint selector and set the digital indication temperature to required temperature by turning THE SETPOINT SELECTOR.
4. Tighten THE CAP after temperature setting.

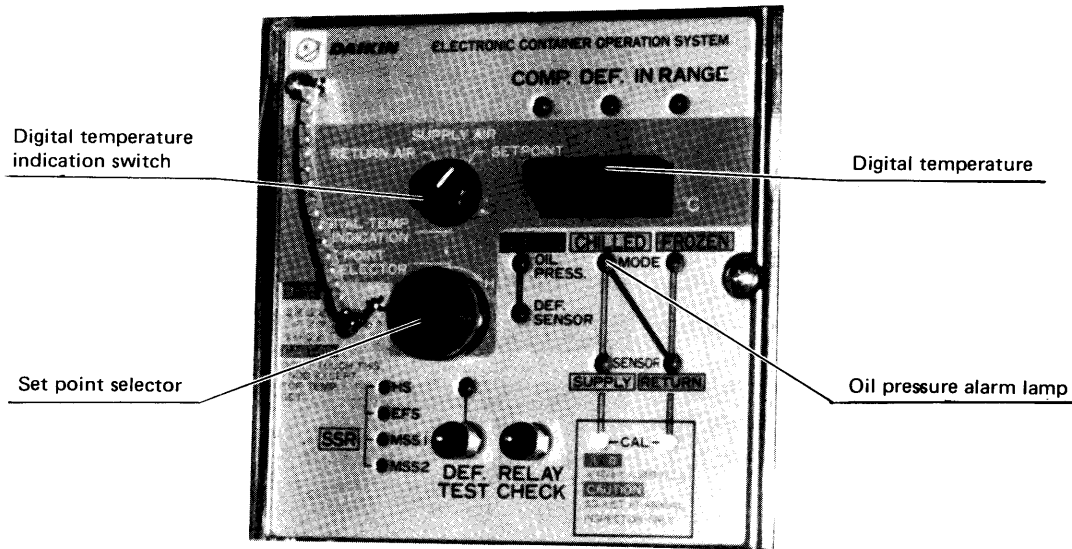

- Notes
1. Do not touch the knob except when setting the temperature.
  2. Turn the cap to remove when setting the temperature.

**(12) Close the cover of the control box.**


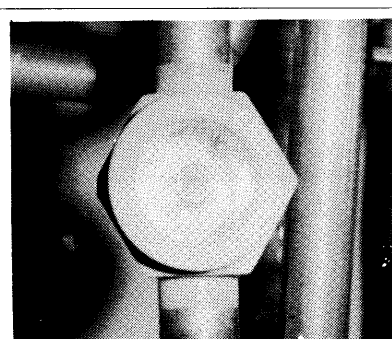
If it is loose, water will leak. Check around the packing and tighten the cover securely.

Note: If the unit stops in about 2 minutes after starting, the oil pressure switch in many cases has been activated. At this time, electronic controller ALARM (OIL PRESS.) lights.

At this time, turn on the oil pressure reset switch (3-QL). The operation is automatically started within 2 minutes. (If the switch is turned on within 2 minutes after the oil pressure switch is energized, the ALARM lamp flickers.) If the unit stops again, repeat the above procedures.



## 2.2 Checking during operation

Checking items (precautions)	Method of check	
1. Check if unusual noise and vibration is produced from compressor, fan and piping etc.	Visual, sensuous and touching.	
2. Check to ensure oil pressure protection switch functions, and the unit does not stop.	Visual (Controller Alarm Display)	
3. Check suction and discharge pressures of the compressor. (For installation of a gauge, refer to "Section 9, page 49".)	Compare observed data with standard ones.	
4. Check for proper oil level of compressor. Check to see the oil is clean. (Oil level may fall for a while after starting, but it rises gradually.)		Visual Oil level should be approx. ¼ to ¾ of its full scale.
5. Check to see if refrigerant is sufficient. (The refrigerant bubbles immediately after starting, but this does not mean that refrigerant is lacking.)		Lack of refrigerant is indicated by bubbles in the moisture indicator.
6. Check if any moisture is present in refrigerant circuit. (The color of moisture indicator may turn to yellow if it has been exposed to gaseous refrigerant for a long time, but this is no indication of trouble.)	Visual The moisture indicator should normally appear green. Yellow color is a sign of trouble.	
7. Check if the recorder operates according to the inside temperature.	Visual	
8. Check operating conditions with the pilot lamps (LED).	Visual	

## 2.3 Maintenance after operation


### (1) Stopping

To stop the unit, perform defrosting operation with the manual defrost switch and immediately turn off the unit ON-OFF switch after the compressor has stopped, (stop the unit with "pump-down" state.)

After pump down, turn off the circuit breakers.

### (2) Stowing the power cable

Turn the plug's opening downward so that sea and rain water cannot enter the plug when stowing it.

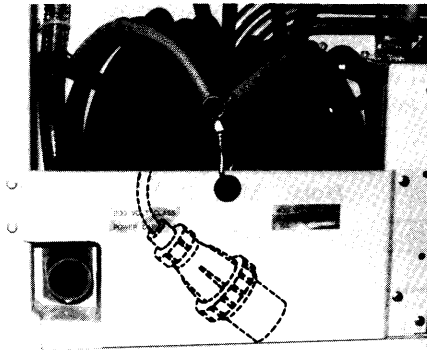

### (3) After water-cooled operation


Remove the water piping, open cocks, and drain off.

### (4) Close the cover of the control box.

### 3. Operating modes and circuits


#### 3.1 Voltage selection system (switching over 200V and 400V class)

- (1) This unit is adaptable to either of two supply voltages (dual rated voltage). Set the voltage selector (multi-contact cam switch) according to the supply voltage by hand. The voltage selector changes wiring of the motors, electric heaters, and the transformer of the control circuits to supply the relevant voltage. For example, the internal wiring of the compressor is changed as follows.

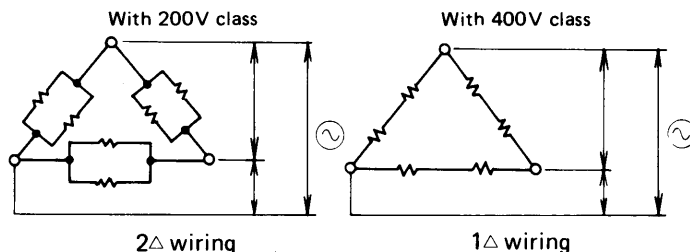


(2) Circuitry

- With 200V class (Set the selector lever to "200V CLASS").  
The contacts marked "⌘" in the sequence chart (except 3-88 and 3-30L) are turned on.  
The circuits for 200V class will be set up with the contacts and the voltage selector relay (2X1.2.3) are energized.

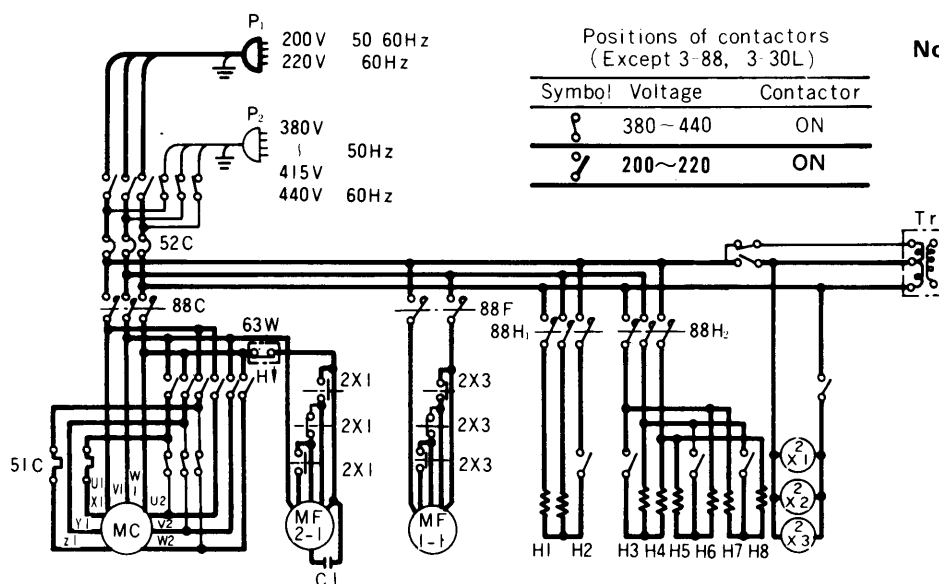

- With 400V class (Set the selector lever to "400V CLASS").  
The contacts marked "⌘" in the sequence diagram are turned on and the circuits for 400V class will be set up (2X1.2.3 are off).

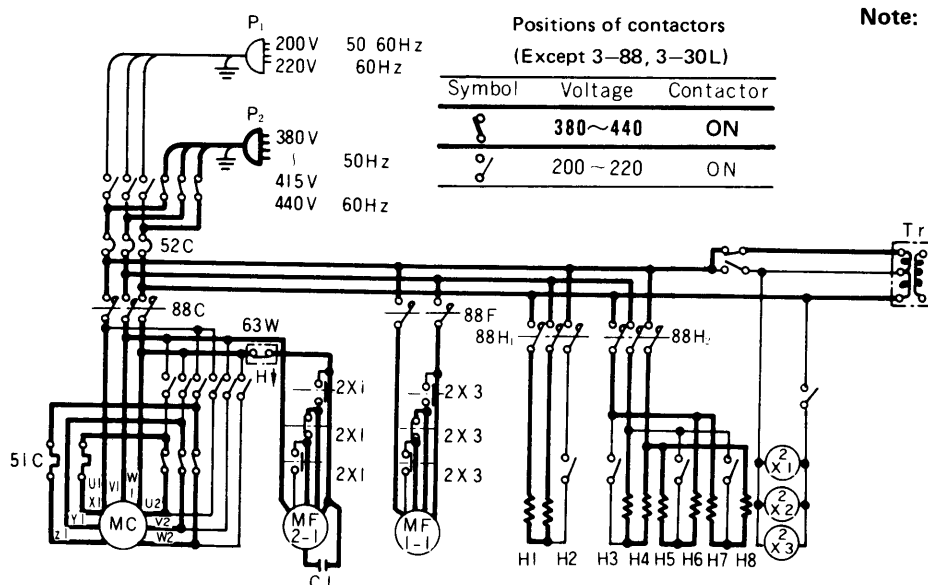


### 3.2 Air cooled and water cooled operation

The unit will operate on either air cooled or water cooled condenser operation.

During transit on land, in depot or on a vessegs deck, the air cooled operation will function, and the operation in ship holds is normally water cooled.


The operation will be changed from air cooled to water cooled automatically by the water pressure switch; i.e. when water pressure at the inlet of the water cooled condenser rises higher than the presetting value, the contact points of the water pressure switch are opened, so the condenser fan motors stop, and the water cooled operation starts.

When the water supply is disconnected. The contacts of the water pressure switch are made and the condenser fan motors rotate.

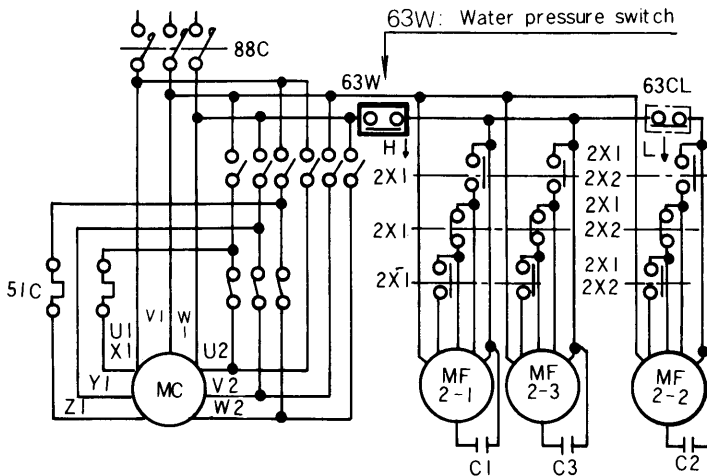


This diagram indicates air-cooled operation mode. When water pressure is applied to the switch, the switch mechanism moves in the direction of H ↓, so the condenser fan motors (MF2-1, 2, 3) stop, and water-cooled operation starts.


### 3.3 Frozen operation

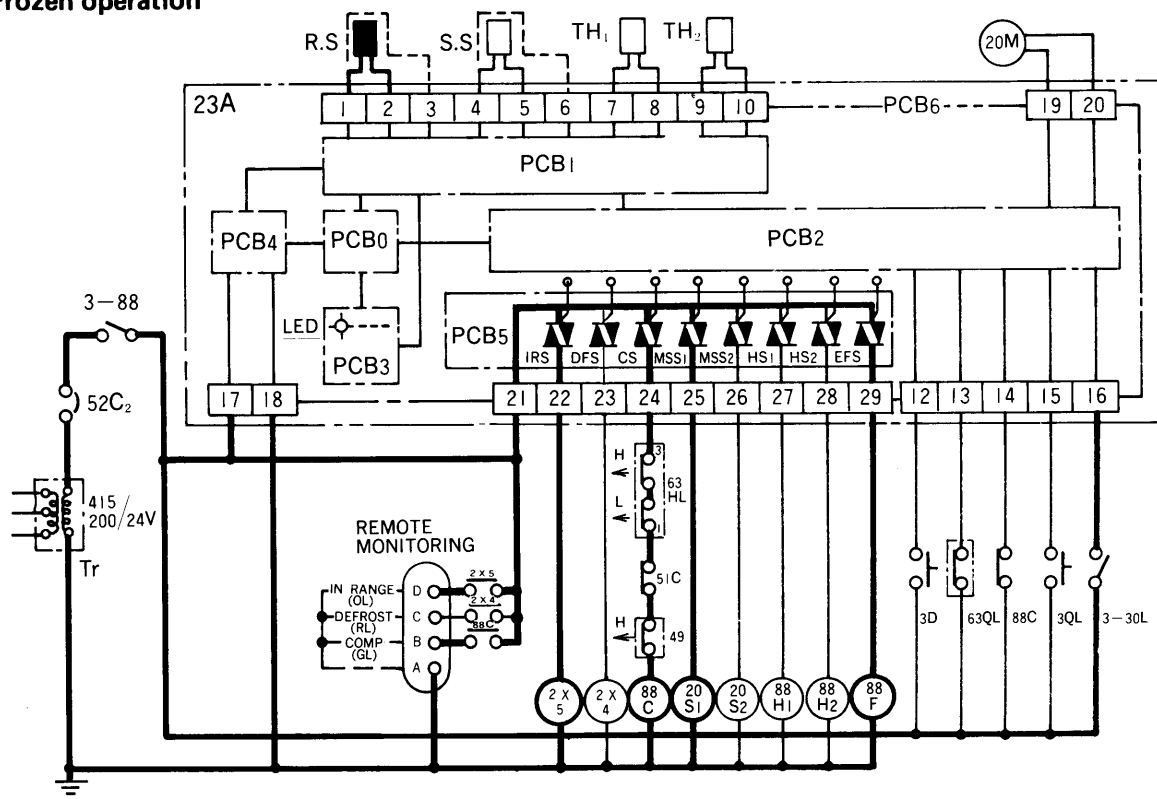


- (1) Switching over frozen and chilled modes  
One of the modes will be automatically selected according to the setting of the setpoint selector.
  - When the setting is above  $-5^{\circ}\text{C}$  : chilled mode
  - When the setting is below  $-5.5^{\circ}\text{C}$  : frozen mode
 Note that in the frozen mode is operated without capacity control.
- (2) During frozen mode, the compressor will be automatically turned on and off, sensing return air temperature to the evaporator.
  - a. Turn on 3-88 (unit ON-OFF switch).
  - b. As relay EPS in 23A is turned on, 88F is energized to start MF1-1 and 1-2 (evaporator fan motors).
  - c. As relay  $\text{MSS}_1$  in 23 A is turned on, solenoid valve  $20\text{S}_1$  is opened. ( $\text{MSS}_2$  is turned off and  $20\text{S}_2$  is closed.)
  - d. When  $20\text{S}_1$  is open, refrigerant flows and low pressure rises. LP of 63HL (dual pressure switch) are turned on.
  - e. With LP on, 88C (compressor relay) gets energized. MC (compressor) and MF2-1, 2 and 3 (air-cooled condenser fan motors) will start and GL (green lamp) will light up. --- The unit enters in the normal operation and inside temperature begins to fall. ---
  - f. When return air temperature to the evaporator falls to  $1.0^{\circ}\text{C}$  above the preset temperature, (preset temperature plus  $1.0^{\circ}\text{C}$ ), IRS (23A) is turned on and OL (orange lamp indicating that inside temperature is with in range) lights up.
  - g. When the temperature falls lower than the preset temperature,  $\text{MSS}_1$  (23A) is turned off  $20\text{S}_1$  closes, and "pump down" starts.
  - h. When the low pressure falls down to  $40\text{cmHgV}$ , LP of 63HL is turned off; 88C becomes unenergized; MC, MF2-1, 2, and 3, etc. stop; and frozen operation stops.

- i. If 20S is closed but still MC does not stop "pump down," and the inside temperature drops  $2^{\circ}\text{C}$  below the preset temperature, CS, IRS (23A) are turned off to deenergize 88C. Then, the compressor is stopped and OL goes out.
- j. When the temperature rises to the preset temperature minus  $1.0^{\circ}\text{C}$ , IRS is turned on and OL lights up.
- k. When the temperature rises to the temperature setting plus  $1^{\circ}\text{C}$ , CS and  $\text{MSS}_1$  are turned on and frozen operation starts through the process of c  $\rightarrow$  d  $\rightarrow$  e described previously. The compressor is normally operated on and off repeatedly by operation of "g, h"  $\leftrightarrow$  "k" (ON/OFF of  $\text{MSS}_1 \rightarrow$  OPEN/CLOSE of  $20\text{S}_1$ )
- l. If the temperature rises further up to the preset temperature plus  $2^{\circ}\text{C}$ , IRS is turned off and OL will go out.

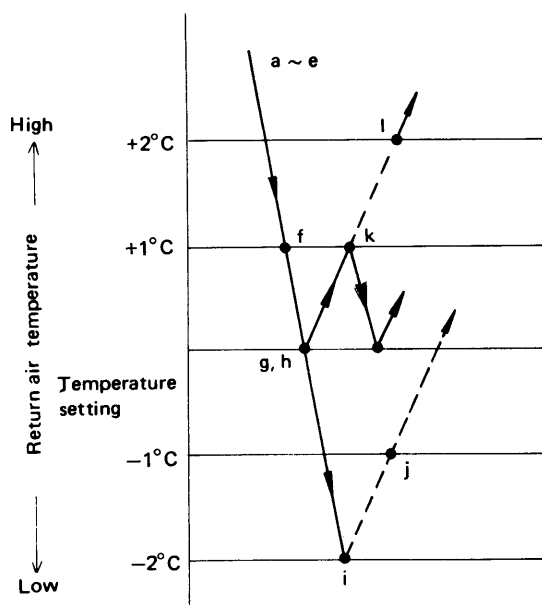

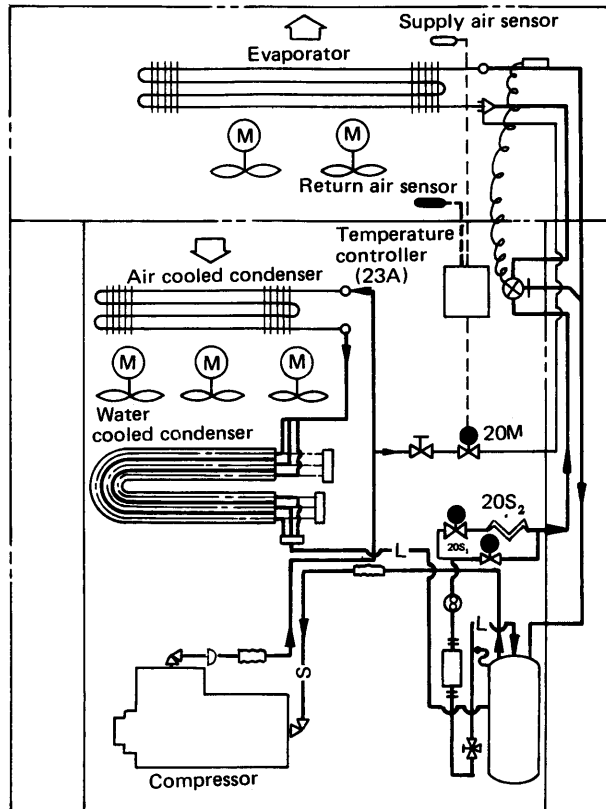


Flow of refrigerant during frozen operation

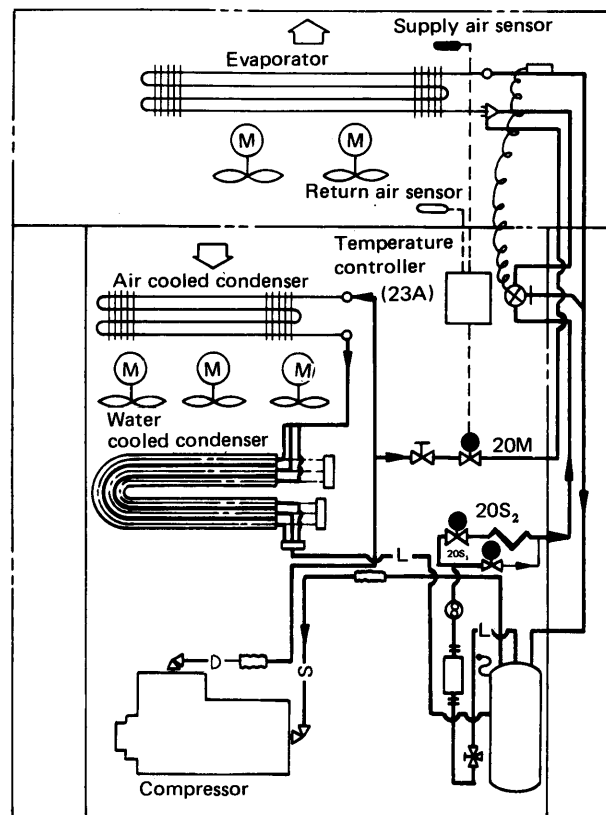


Flow of refrigerant during chilled operation


### 3.4 Chilled operation – capacity control

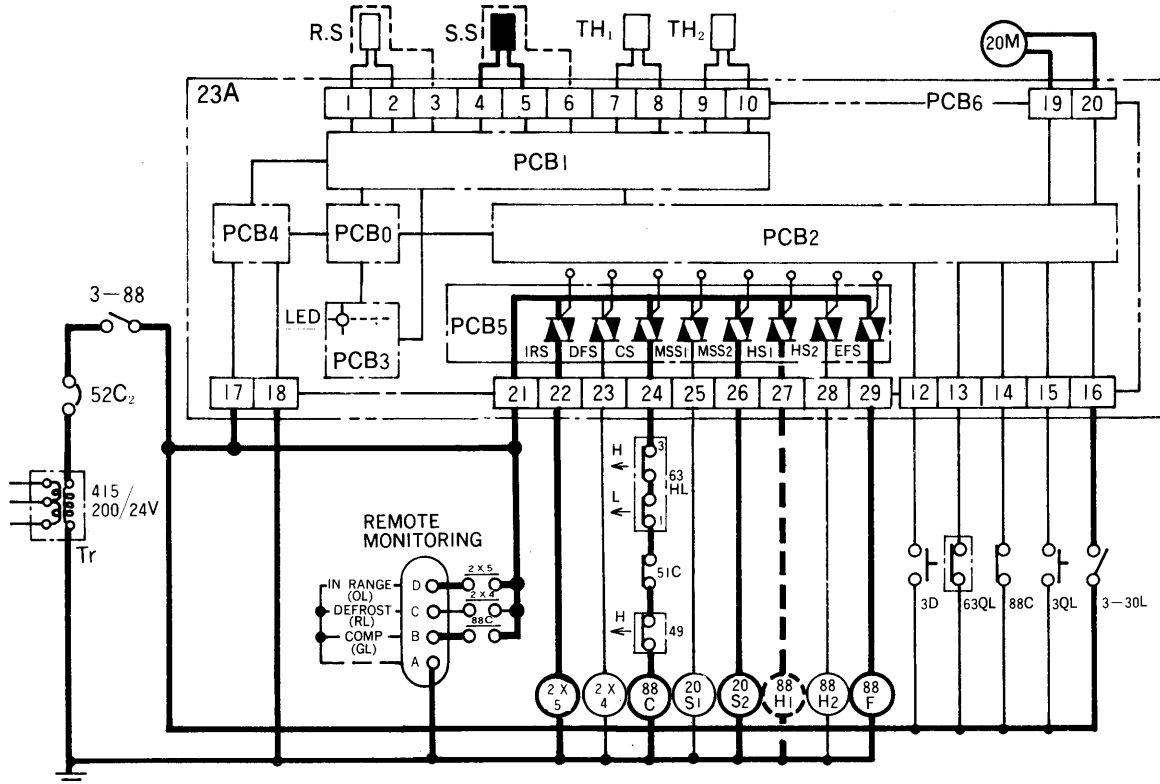

- (1) Chilled operation is performed when the preset temperature is  $-5.0^{\circ}\text{C}$  or higher, and the circuit of the chilled mode is made by 23A automatically.
- (2) Chilled operation is controlled sensing supply air temperature from the evaporator; i.e., the modulating control valve (20M) controls the amount of hot gas to be bypassed continuously while a capillary tube controls the liquid refrigerant.
  - a. The operation is the same with that (step "a" ~ "e") of the frozen mode while supply air temperature falls to the preset temperature plus  $1.0^{\circ}\text{C}$  from the pull down period.
  - b. When the supply air temperature reaches the preset temperature plus  $1.0^{\circ}\text{C}$ , IRS is turned on (OL lights),  $\text{MSS}_1$  is turned off,  $20\text{S}_1$  closes; and, the capillary tube controls the liquid refrigerant. ( $20\text{S}_1$  remains closed after that.)  
The voltage is simultaneously applied to 20M to open it and let the hot gas flow.
  - c. When the hot gas starts flowing, temperature rises temporarily which may cause IRS to be turned off in some cases. However, the operation will enter in stable state after repeating such conditions several times.
  - d. After the temperature has been reached the preset temperature, it takes about an hour for the unit to reach a steady state. (the opening of 20M is nearly fixed; i.e., the flow of bypassing hot gas is nearly constant.) (This interval varies somewhat with the preset and ambient temperatures.) During this time, the valve changes its openings to control the flow of hot gas until the supply air temperature becomes stable.
  - e. Depending on operating conditions (such as when the difference between the ambient and preset temperature is small), IRS is turned off and lamp OL goes out if the supply air temperature becomes  $-2^{\circ}\text{C}$  lower than the preset temperature before stabilizing hot gas bypass volume (low limit alarm).  
At the same time,  $\text{MSS}_2$  is turned off;  $20\text{S}_2$  and 20M are closed, after "pump down", the compressor stops to prevent over-cool.
  - f. If HSI has been turned on during step "e" above, the electric heaters ( $\text{H}_1$  and  $\text{H}_2$ ) may be turned on tentatively, but they will be turned off when the temperature rises.  
(Refer to the section on Heating Operation for the details.)

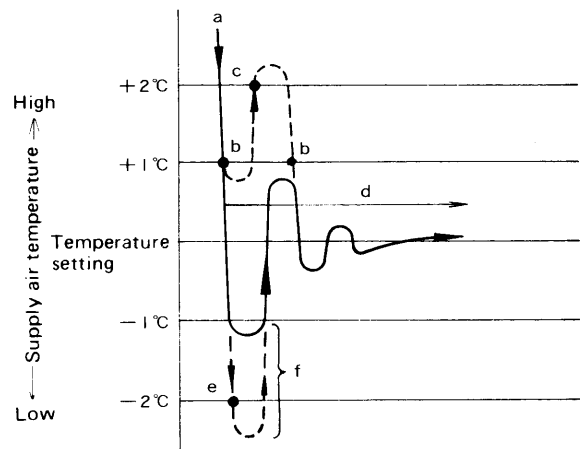

### 3.5 Heating operation

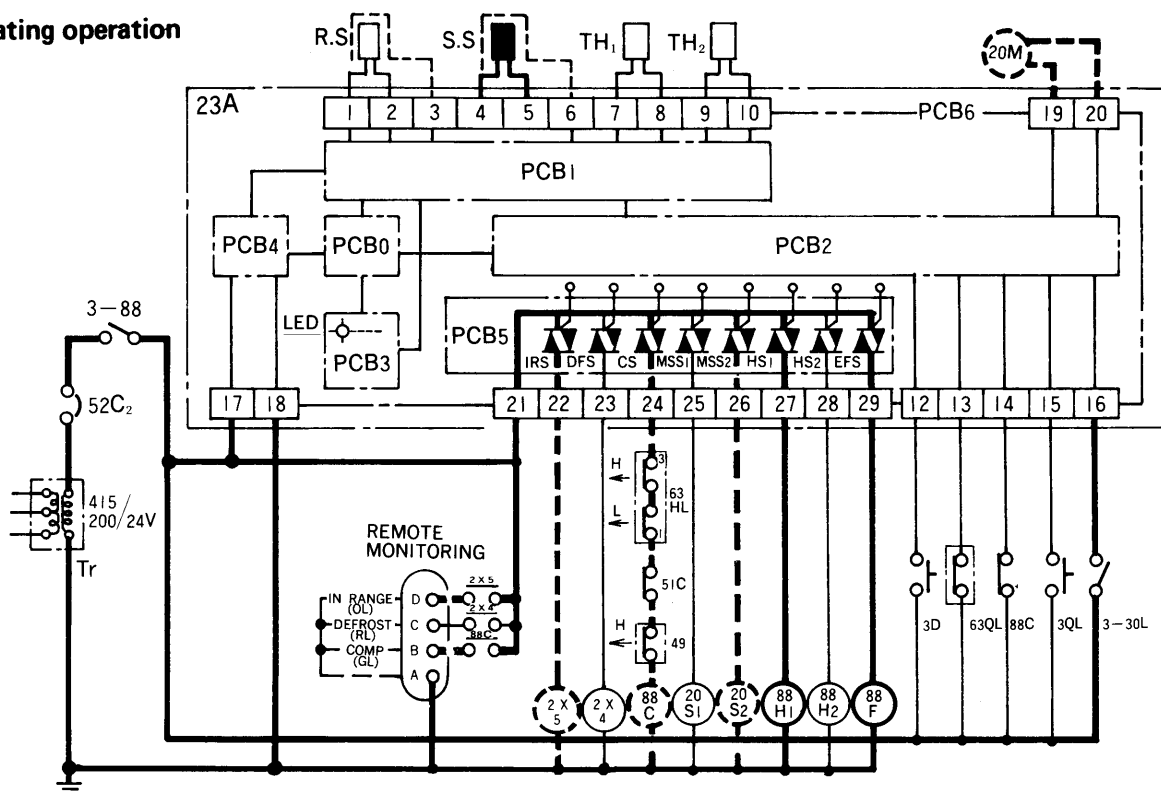


- (1) Heating operation will be performed only when the preset temperature is  $-5^{\circ}\text{C}$  or higher as in the chilled mode. Inside temperature will be controlled, sensing the supply air temperature.
- (2) There are three modes in the heating operation.
  - Pull up — Heated only by electric heaters
  - Steady state — Heated by hot gas bypass and electric heaters (when large heating capacity is needed)
    - Heated only by hot gas bypass (when small heating capacity is enough)

One of these three modes will be automatically selected according to load conditions.

- c. If heating load is small as stated in step "b", the inside temperature will rise:  $\text{HS}_1$  is turned off (the function point of  $\text{HS}_1$  varies depending on PID operation):  $88\text{H}_1$  becomes unenergized: and the heaters ( $\text{H}_1$  and  $\text{H}_2$ ) are turned off, and heating operation only with hot gas bypass is performed. (The circuit is the same as that of chilled operation in the sequence diagram.)


Note: The tripping point of  $\text{HS}_1$  is determined depending on temperature and time by means of P.I.D. (P: proportional action, I: integral action, D: derivative action) of the controller.

- a. Pull up (The circuit indicated with bold lines in the sequence diagram functions)
  - If the supply air temperature is  $2^{\circ}\text{C}$  below the preset temperature, IRS is turned off, 20M closes,  $\text{MSS}_2$  is turned off;  $\text{HS}_1$  is turned on with "pump down" out of operation and electric heater  $\text{H}_{1,2}$  are energized by  $88\text{H}_{1,2}$ .
- b. When the supply air temperature drops to the temperature setting minus  $1^{\circ}\text{C}$ , IRS is turned on and OL LAMP will light up. Simultaneously, 20M opens and  $\text{MSS}_2$  is turned on ( $20\text{S}_2$  opens), the compressor is started, and heating will start with the electric heater and hot gas (The heating circuit is shown with the dotted line on the sequence chart.)

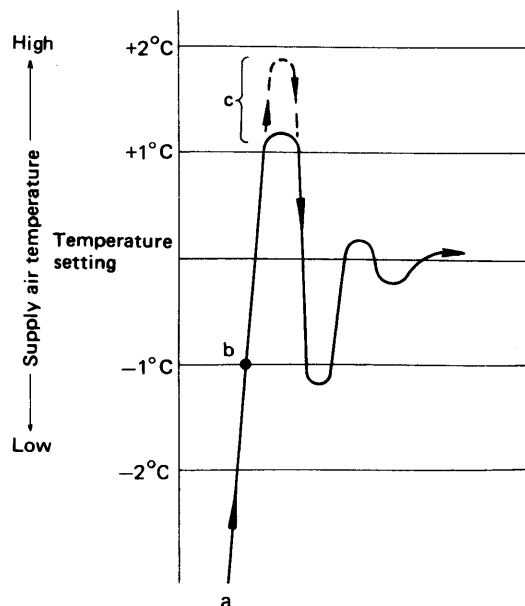




### 3.6 Defrost operation

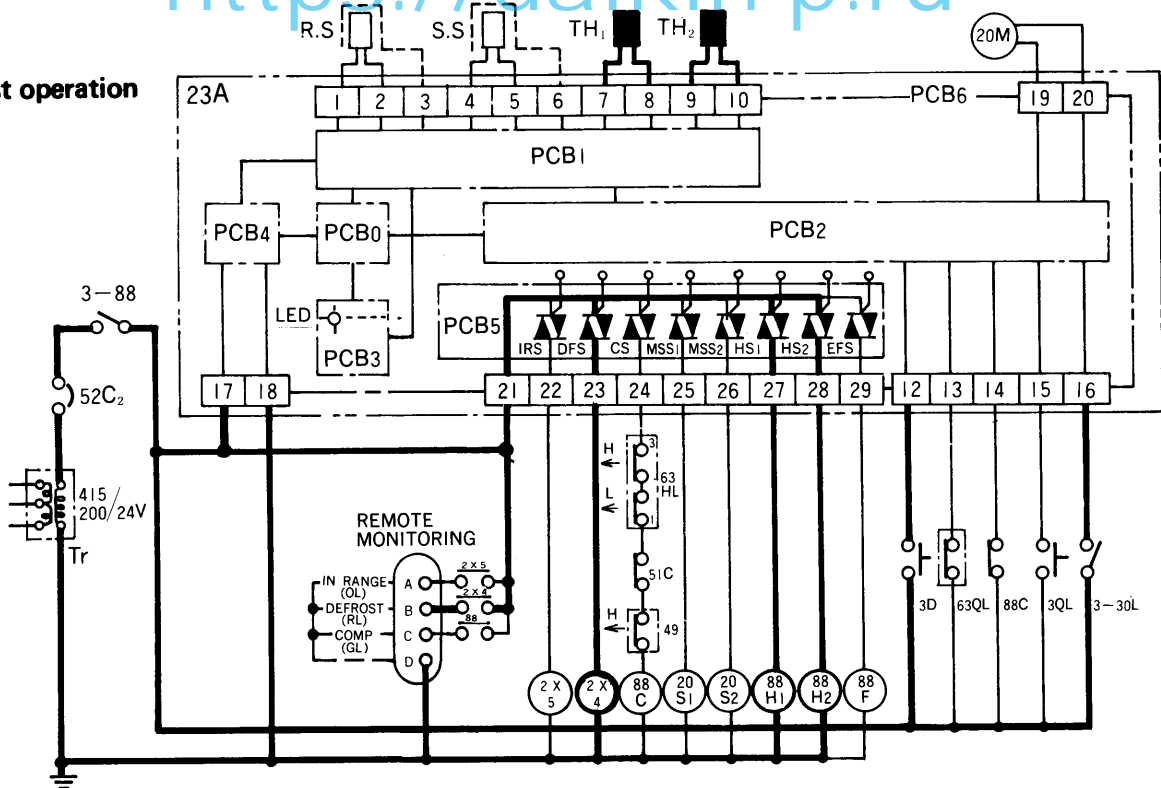

(1) Defrosting operation starts based on the following two conditions.

- Timer (incorporated in controller) counts up; The defrost cycle time is as follows.
  - When inside temperature is above "preset temperature + 2°C" (IRS – OFF): 4 hours
  - When inside temperature is below "preset temperature + 1°C" (IRS – ON): 12 hours
- Manual defrost switch (3D) is turned on. If one of those stated above is on, DFS is turned on and RL (red lamp) lights up.

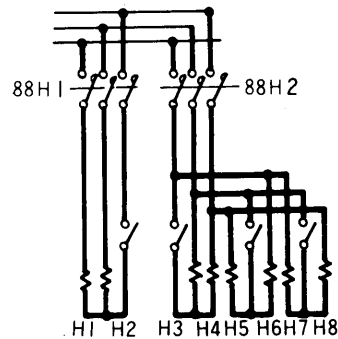

The circuit shows 200V class circuit.

(2) Simultaneously as DFS is turned on:


- 20M is closed. MSS<sub>1,2</sub> are turned off, 20S<sub>1,2</sub> are closed, and "pump down" stops. When 88C is turned off, HS<sub>1,2</sub> are turned on, 88H<sub>1,2</sub> are energized, and the electric heaters are energized. Simultaneously, EFS is turned off, evaporator fan motors MF1-1, 2 stop, and defrost operation starts.

(3) When the evaporator coil temperature rises to 7.5°C after having removed frost, (defrost temperature detects the coil temperature) DFS is turned off. Defrosting operation is terminated.

**Note:** If during defrost operation or heating operation, the temperature rises abnormally, (over 71°C, this is detected by the overheat thermistor) and HS<sub>1,2</sub> are turned off, then the electric heaters are deenergized.

### 3.7 High pressure control

(1) The condensing pressure (high pressure) falls when the ambient temperature falls during air-cooled operation, and the lower pressure also falls accordingly. If operation is still continued in this condition, the low pressure switch will be turned off (LP of 63HL is turned off) and the compressor will stop so that the required refrigeration capacity is not available. To prevent the high pressure from falling, a pressure switch (63CL) (which controls the high pressure) stops a condenser fan (MF2-2) automatically when the high pressure falls to 7 kg/cm<sup>2</sup> (99.6 psi).

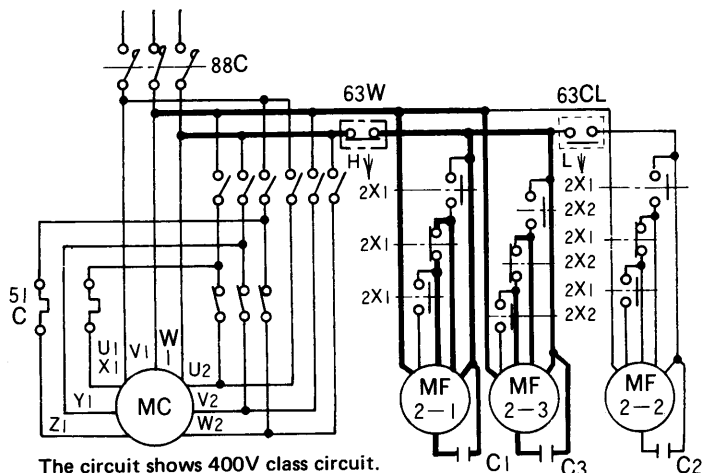



The circuit shows 400V class circuit.

### 3.8 Pilot lamps and monitoring circuit

3 lamps (Light emitting diode) which indicate operating mode are mounted on the front panel of the controller in the control box and can be seen through the window if the cover of the control box is closed.

- **Comp. (Green)** . . .Compressor operating
- **Defrost (Red)** . . .Defrost operating (DFS: ON)
- **In range (Orange)** .IN RANGE (Inside temperature is in range . . . setting temperature  $\pm 2^{\circ}\text{C}$ )

Receptacles for monitoring pilot lamps are also equipped and its connections is shown at below.

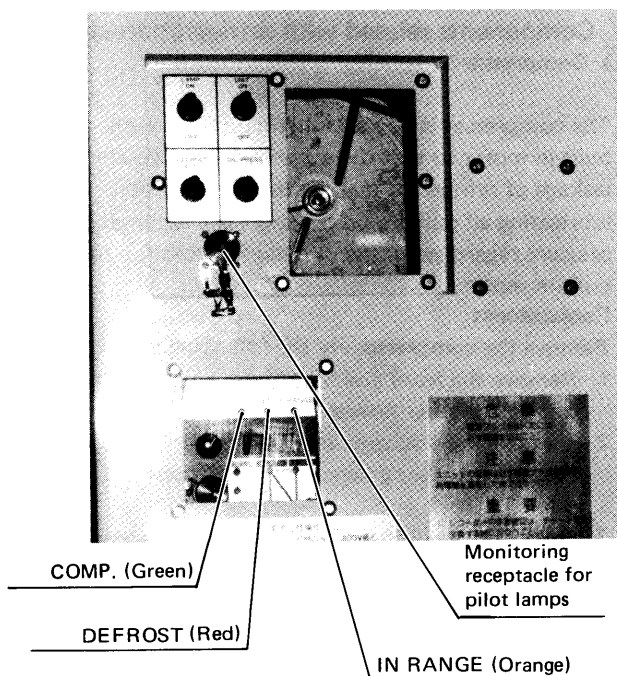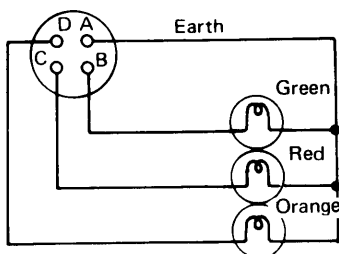

(2) How to judge operation state by pilot lamps and function of the components.

NAME		TEMPERATURE SETTING ABOVE -5°C (+23°F) – AIR COOLED OPERATION					TEMPERATURE SETTING BELOW -5.5°C (+22°F) – AIR COOLED OPERATION			WATER COOLED OPERATION
		COOLING		HEATING		DEFROST	COOLING		DEFROST	
		PULL DOWN	IN RANGE	PULL UP	IN RANGE		PULL DOWN	IN RANGE		
LIGHT	DEFROST – Red	×	×	×	×	○	×	×	○	WATER COOLED CONDITION IS THE SAME AS AIR COOLED EXCEPT WATER PRESS. SWITCH (63W) OPEN CONDENSER FAN MOTOR (MF2) DE-ENERGIZED
	COMP – Green	○	○	×	○	×	○	○	×	
	IN RANGE – Orange	×	○	×	○	×	×	○	×	
MAGNETIC SWITCH	COMPR. COND. FAN MOTOR (88C)	○	○	×	○	×	○	○	×	
	EVAPORATOR FAN MOTOR (88F)	○	○	○	○	×	○	○	×	
	HEATER (88H1)	×	×	○	○	○	×	×	○	
	HEATER (88H2)	×	×	×	×	○	×	×	○	
SOLENOID VALVE (20S1)		○	×	×	×	×	○	○	×	
SOLENOID VALVE (20S2)		○	○	×	○	×	×	×	×	
MODULATING VALVE (20M)		×	○	×	○	×	×	×	×	
COMPRESSOR		○	○	×	○	×	○	○	×	

Notes 1. ○: Energized or ON, ×: De-energized or OFF

## 4. Major components and maintenance

### 4.1 Components related with refrigeration circuit


#### 4.1.1 Compressor

The compressor is of a semi-hermetic type with built-in motor so that there are few places where leakage of refrigerant may occur. The reversible lubricating oil pump used produces the required oil pressure regardless of the direction of rotation of the built-in motor.

##### (a) Replacement

Remove the compressor by the following procedure.

- 1 Remove the front and base plates and protective bar of the cable stowage.
- 2 Remove the discharge stop valve, suction stop valve gauge piping flare nut (compressor side) and cable.
- 3 Remove four bolts (two on each side) fastening the compressor and base.
- 4 Take out the compressor to the front of the unit.

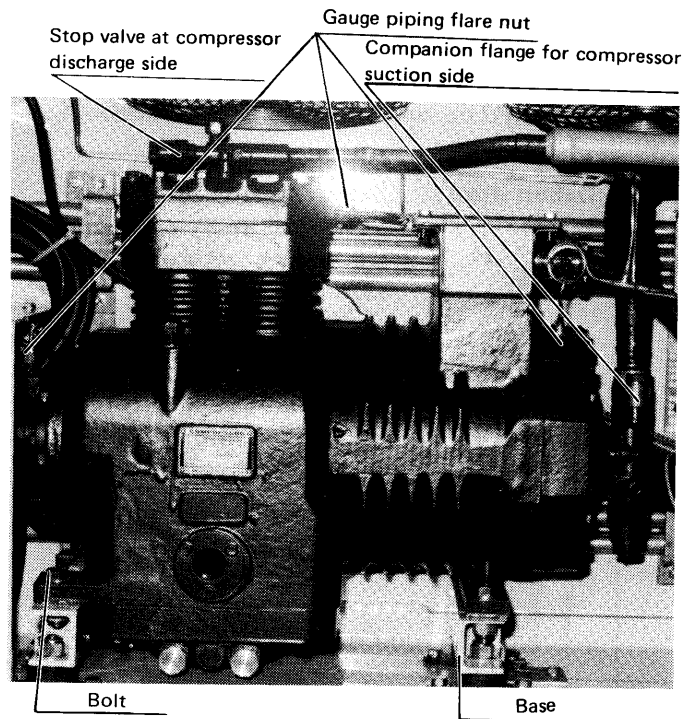

##### (b) Installing procedure


Install the compressor according to reverse procedure given above. When tightening the bolts, refer to the torque values listed.

#### 4.1.2 Air-cooled condenser and evaporator


The "cross fin" coil has special corrugated fins. They are compact and very efficient in producing uniform heat exchange efficiency.

##### (a) Maintenance

Service the air-cooled condenser after removing the air suction grille. Service the evaporator after removing the air return grille or the access panels from outside.

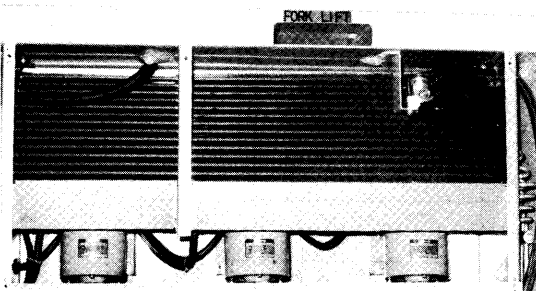

Air cooled condenser

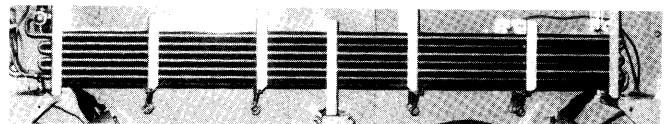


#### 4.1.3 Water-cooled condenser

Of the tube-in-tube type in which cooling water flows in the inner tube while the refrigerant flows between the outside wall and the wall of the inner tube. Since special fins are fitted, the condenser is compact and light.

#### 4.1.4 Accumulator-receiver with heat exchanger


Consists of the accumulator, receiver, and heat exchanger, which are encased in a vertical cylindrical construction; i.e. the heat exchanger passes through the accumulator from its top to the bottom and reaches to the receiver.

This construction reduces heat loss. A fusible safety plug is fitted to the receiver body.

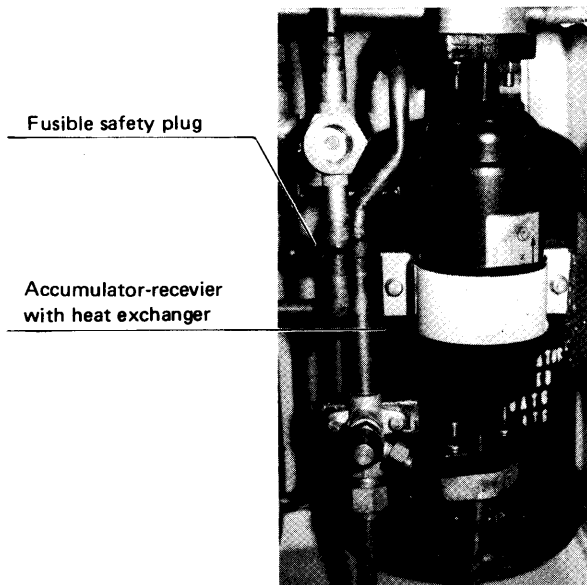

#### (a) Replacement procedure of the fusible safety plug

When pressure rises abnormally in the system, the fusible safety plug melts itself, so if the fusible safety plug is melted, check possible causes thoroughly. When fusible safety plug functions, the centre of the fusible safety plug alloy ② melts, from which the refrigerant escapes. When the flare nut is removed, ① (ball) will come out under pressure and block the passage of the refrigerant outlet, which prevents the refrigerant from escaping and also the air from entering. Thus, refrigerant loss is extremely minimized.

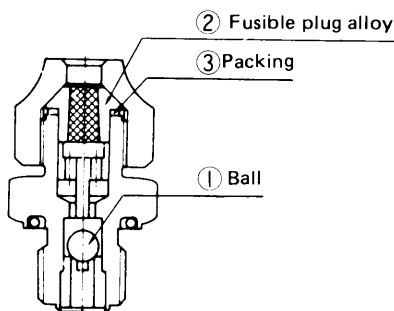

Construction of fusible safety plug

Insert a new ② by means of ③, and tighten the flare nut.

#### 4.1.5 Expansion valve

The externally equalized thermal expansion valve which is fitted before the evaporator and senses over-heat degree of leaving evaporator refrigerant and controls flow of the refrigerant automatically according to operating conditions. The expansion valve with MOP (motor overload protection) is adopted to protect the compressor motor from overload.



 
 
“CAUTION” Whenever adjusting and replacing the expansion valve, the unit should be isolated from the mains supply for safety.

#### (a) Adjusting the expansion valve

There are two methods to adjust the expansion valve; i.e. one is the adjustment based on the suction operation standard and the other is that based on the frost conditions on the compressor.

- (1) Adjustment based on the suction operation pressure
  - 1) Conform that the predesigned volume of the refrigerant has been charged.
  - 2) Attach a pressure gauge to each gauge port and operate the refrigeration unit, maintaining inside temperature at  $-18^{\circ}\text{C}$  ( $-0.4^{\circ}\text{F}$ ). (See connecting of pressure gauge).
  - 3) When inside temperature comes to the preset temperature, compare the suction pressure reading with the standard pressure. (See Standard operation pressure curve)
  - 4) If suction pressure reading differs with the standard pressure, adjust the expansion valve as stated below.
  - 5) After loosening the clamp screw, turn the adjusting screw.
  - 6) Note that pressure will not change after a certain lapse of time.
- (2) The adjustment based on frost stated on the compressor.
  - 1) Refer to the caution for adjustment of expansion valve as above. At this time, inside temperature should be maintained to  $-18^{\circ}\text{C}$  ( $-0.4^{\circ}\text{F}$ ).
  - 2) Regulate the adjusting screw as stated below based on frost state on the suction pipe and the stop valve of the compressor.
  - 3) Whether or not the adjustment required is judged by frost state of the flange on the suction side of the suction valve.
  - 4) However note that frost state differs with ambient air conditions (temperature and humidity).

**Adjusting points for expansion valve**

Adjusting screw	Turning direction		Operation state
Adjusting screw of expansion valve	Clockwise		Suction pressure is higher than the standard pressure (Frost forms on the suction pipe rather than the suction flange of the stop valve). Clockwise rotation of the adjusting screw decreases running pressure.
	Counter-clockwise		Suction pressure is lower than the standard pressure (frost forms on the compressor side rather than the suction flange of the stop valve). Counterclockwise rotation of the adjusting screw increases running pressure.

**(3) Countermeasures after operation**


- 1) Remember the original setting of the expansion valve. If any change is found with the setting after adjustment of the expansion valve, return the adjusting screw to the original position, as trouble occurred caused by other reasons.
- 2) When the adjusting screw is returned to its original position, firstly turn it passing the original position and then return it to the original position.
- 3) After adjustment, be sure to tighten up the clamp screw and cap it to prevent the refrigerant from leaking.
- 4) After completion of the adjustment, operate the unit, keeping inside temperature at  $-18^{\circ}\text{C}$  ( $-0.4^{\circ}\text{F}$ ) and confirm that low pressure does not go down below  $0 \text{ kg/cm}^2 \text{ G}$  ( $0 \text{ PSIG}$ ).



**(b) Replacement**

For replacement of the expansion valve, remove the access panel located on the front of the unit or by removing the evaporator bulkhead inside the container.

- 1) Remove the feeler tube, equalizing pipe flare, and fastening bolts. (To replace the cage alone, there is no need to remove the feeler tube.)
- 2) Remove the power assembly, cage, and packing.
- 3) Be sure to install a new packing when replacing it.

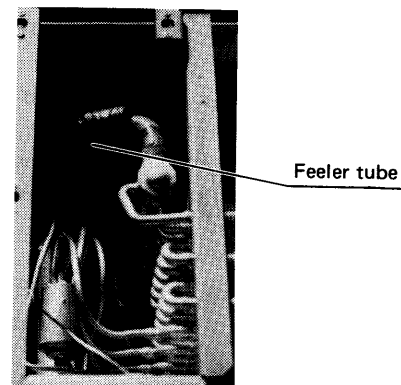


**4.1.6 Liquid/moisture indicator**

This indicator permits checking of flow of the refrigerant and moisture content in the refrigerant.

**(a) Moisture content**

The indicator indicates moisture content by the color at the center of the window.

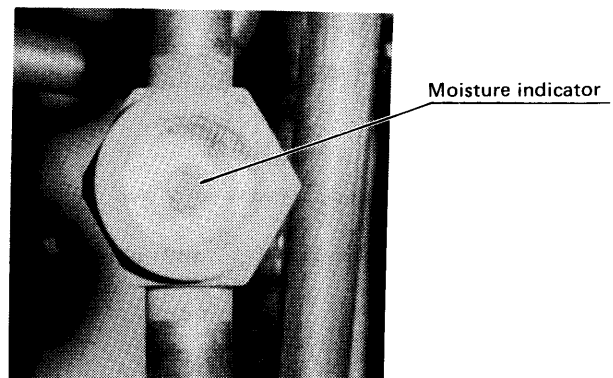

**(b) Flow of the refrigerant**

- When the liquid refrigerant is sealed, bubbles on the sight glass disappear.
- Check

Operation	Indicator state
At start	Bubbles appear but liquid refrigerant is sealed in 30 minutes to an hour after starting.
During operation	Bubbles may appear more or less. [ particularly appear more during capacity control operation ]

If bubbles develop continuously, the refrigerant is possibly running short.

**4.1.7 Dryer**

This removes moisture and dust from the refrigerant while it is circulated. Replace the dryer if it does not remove moisture or is clogged.

When installing the new dryer, follow the directions given on the nameplate and do not make any mistake about the direction of the dryer.


**(a) Replacement**

- 1) In "pump down" state (see Service), close the compressor suction stop valve.
- 2) Remove the flange bolts before and behind the dryer and replace the dryer with a new one as quick as possible. At this time, be careful not to lose the O-ring on the flange.
- 3) Be careful not to get air into the piping on the solenoid valve side while removing the dryer.
- 4) After reattachment of the dryer, open the stop valve a little to vent the air in the dryer from the flare on the solenoid valve side and then close it at once.
- 5) Loosen the flare on the other side, forcedly turn off the low pressure of the dual pressure switch, turn on the master control switch and open the solenoid valve only to vent the air.
- 6) After completion of the work, restore the stop valve to its original state and then inspect the system for gas leakage. Confirm no gas leakage is found.



### 4.1.8 Solenoid valves

There are two solenoid valves (20S<sub>1</sub> and 20S<sub>2</sub>) in the liquid line. They operate as follows according to operating mode.

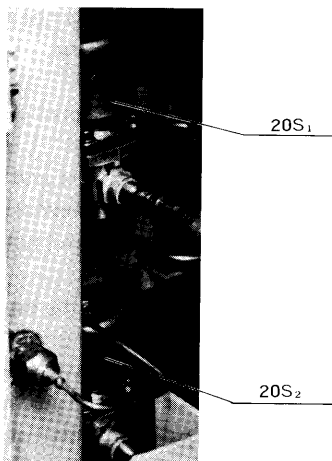


**(a) During frozen mode**

20S<sub>1</sub> is open during operation. When stopping the compressor by the controller, it is closed and stop flow of the refrigerant, performing "pump down".


**(b) During chilled mode**

The two valves are open during "pull down". When the supply air temperature falls to the preset temperature plus 1.0°C, 20S<sub>1</sub> alone is closed by directions of the controller. The refrigerant then flows through the capillary tube via 20S<sub>2</sub> (liquid control). Both 20S<sub>1</sub> and 20S<sub>2</sub> are open when the solenoid is energized and closed when not energized.

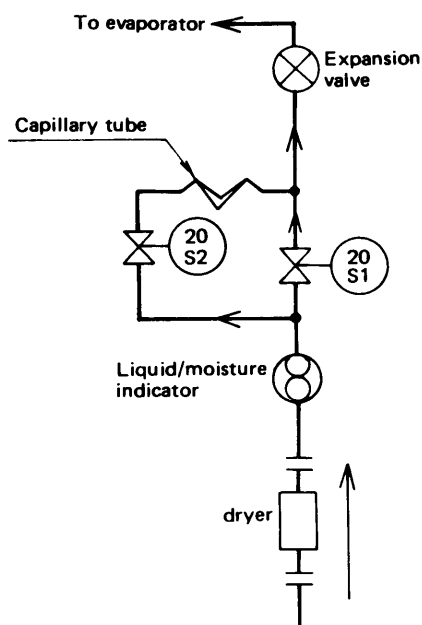

**(c) Disassembly**

- The structure of the solenoid valve is shown at below. (For disassembly, checking, and reassembly, refer to this diagram.)
- When brazing a pipe to the valve, cool the valve body with a wet cloth. (It is not required to disassemble the valve. Remove the coil ass'y from the body.)
- During reassembly, tighten the four bolts x4 with torque of 70–80 kg-cm.

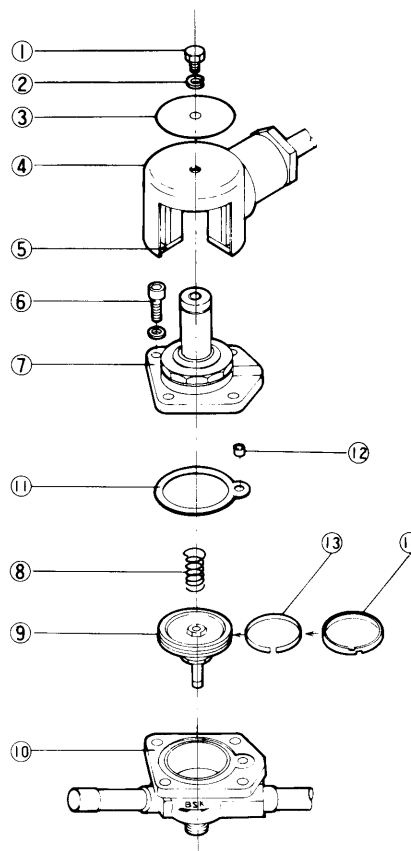

No.	Parts name
①	Set bolt
②	Spring lock washer
③	Name plate
④	Coil ass'y
⑤	Retaining plate
⑥	Set bolt
⑦	Cover ass'y
⑧	Spring
⑨	Piston
⑩	Valve body
⑪	Packing
⑫	Sleeve
⑬	Inner ring
⑭	Piston ring


## 4.2. Components related with the air system

### 4.2.1 Fans and motors


#### (a) Specifications

Fan	Type	Evaporator propeller fan	Condenser propeller fan
	Number of blades	6 pcs.	6 pcs.
	Blade diameter	φ250	φ260
Motor	Type	Single-phase, squirrel-cage induction motor	
	Motor out put (number of poles)	465W (2P)	60W (4P)
	Capacitor	Built-in	Separate
	Bearing	Ball bearing, 6203 contactless type, rubber shield	

#### (b) Installation procedure

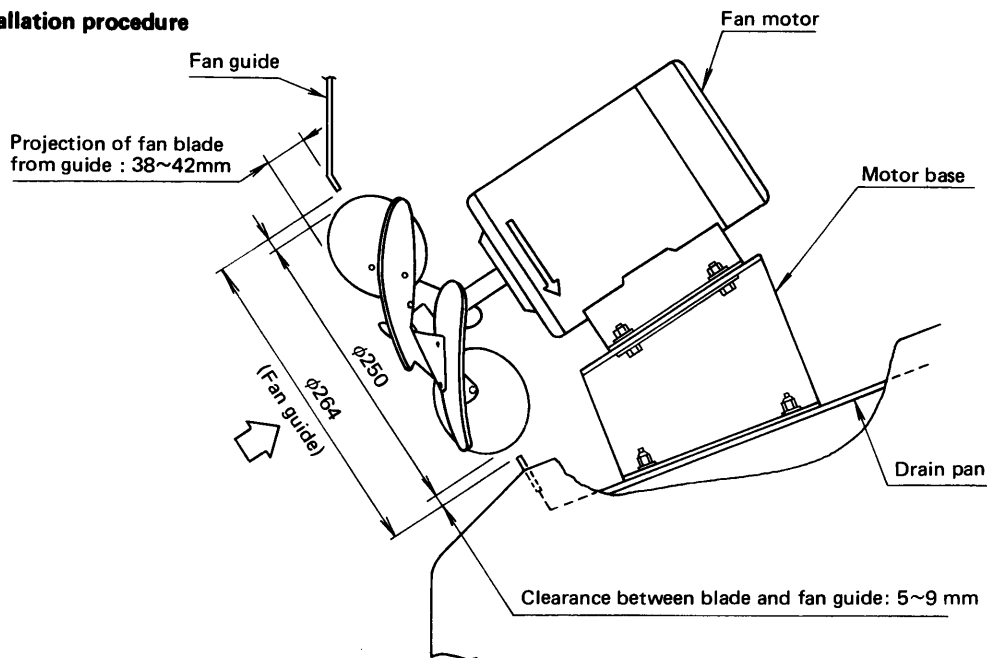

#### Evaporator fan and motor

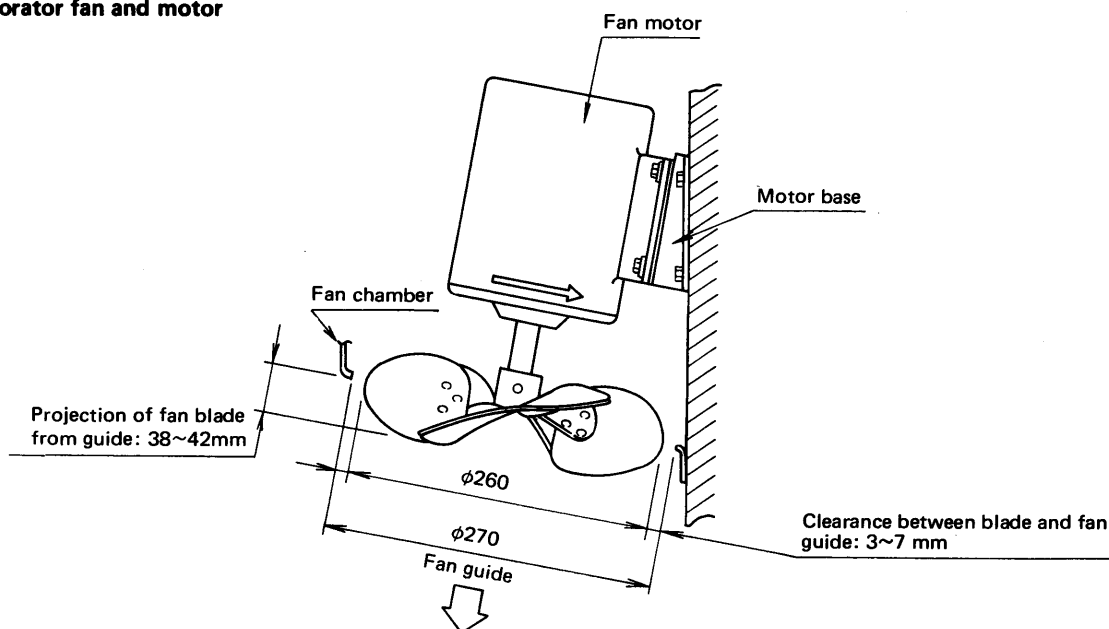


#### Condenser fan and motor





#### 4.2.2 Ventilator

##### (a) View

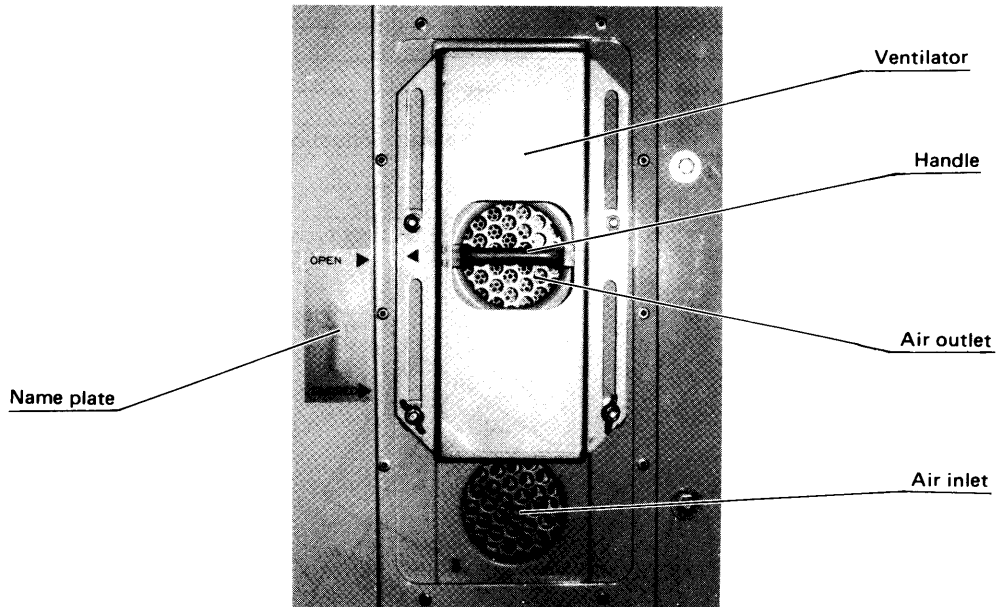

##### (b) Operation

- If ventilation is not needed:  
Set the handle to CLOSED.
- If ventilation is needed:  
Set the handle to OPEN.

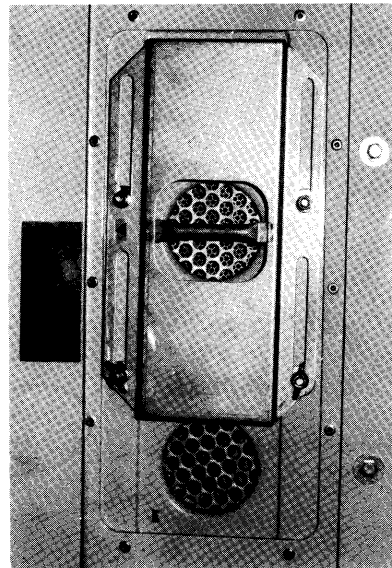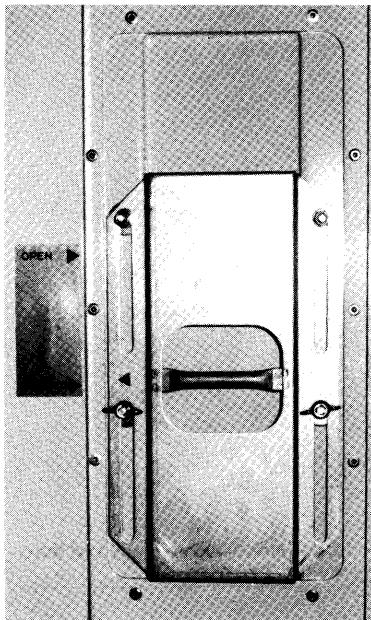

### 4.3 Temperature control system

This unit performs temperature control in three modes.

- I Frozen operation: compressor on-off control: Return air temperature is controlled (return air sensor).
  - II Chilled operation: capacity control by hot gas bypass
  - III Heating operation: capacity control by hot gas bypass and electric heater control.
- } Supply air temperature is controlled (supply air sensor).


Selecting one of these operating modes automatically, the temperature control system controls the inside temperature according to the setting temperature and records it.

- The supply and return sensors will be automatically switched according to the setting temperature.
- The recorder records control temperature during operation. Manually select the pen on the recording side (for frozen or chilled mode operation temperature) according to the mode of operation.

#### 4.3.1 Electronic controller (DUE-DK82-101)

##### (1) Specification

- Power source . . . . . AC24V, 50/60Hz
- Temperature range . . . . . -30 ~ +25°C
- Sensor
  - SS: For supply air temperature control — Platinum resistance
  - RS: For return air temperature control — thermometer element
  - TH<sub>1</sub>: For defrost ter./detection — 0°C 100Ω Thermistor element
  - TH<sub>2</sub>: For prevention of overheat — Thermistor element
- Electronic Timer
  - Defrost timer (out-range) — 4 hr
  - Defrost timer (in-range) — 12 hr
  - Oil Pressure — Alarm detection timer — 110 sec.
  - Restart delay timer — 120 sec.
- Output
  - Solidstate relay for ON/OFF
    - IRS (For in-range), MSS<sub>1, 2</sub> (For solenoid operated valves) — Step thermostat
    - CS (For compressor), HS<sub>1</sub> (For electric heater)
    - DFS (For single defrost), HS<sub>2</sub> (For electric heater)
    - EFS (For evaporator for motor)
  - Valve control voltage adjustment by PID operation
- Display
  - Digital temperature display
    - Supply air temp. — Change the digital temp. indication switch on the display panel.
    - Return air temp.
    - Setting temp.
  - Light emitting diode
    - Operation Displays — For each relay output (HS, EFS, MSS<sub>1, 2</sub>), operation mode/sensor (CHILLED-SUPPLY, FROZEN-RETURN) defrost test. (DEF. TEST)
    - Alarm Displays — Supply air sensor, return air sensor, oil pressure alarm (ALARM-OIL PRESS.) and defrost thermistor (ALARM-DEF. SENSOR)
- Others
  - Defrost timer check function.
  - Supply and return air sensor back up function.
  - Solenoid valve back up function
  - Defrost back up function
  - Relay check function

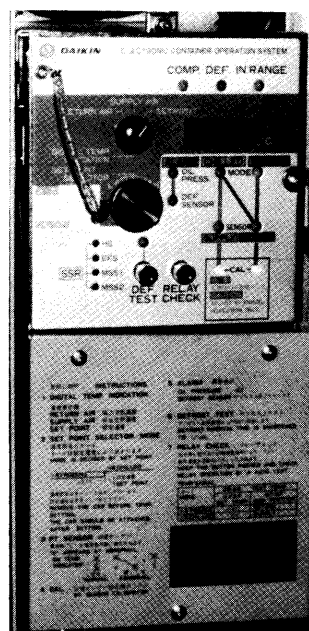

**(2) Operation and display**

**1) Temperature setting**


- a. Turn "ON" the unit ON/OFF switch (3-88) on the control box cover, and the unit will start. Temperature (C°) is displayed digitally.
- b. Set the digital temperature display switch to "SET POINT" position, and the present temperature setting will be shown on the digital display.
- c. Turn the cap and remove it, and turn the set point selector to set the digital temperature display value to the transporting temperature.
- d. Install the cap after the temperature setting.

**IMPORTANT: DO NOT TOUCH THE KNOBS EXCEPT SETTING THE TEMPERATURE!**

**2) Measurement of supply and return air temperatures**

- Set the digital temp. indication switch ("DIGITAL TEMP. INDICATION SWITCH") to "SUPPLY"... supply air temperature display. to "RETURN"... return air temperature display.

**NOTE:** "E" is displayed when the control sensor is abnormal.  
"E" is displayed at "SUPPLY" position when the supply air sensor (S.S) is abnormal.  
"E" is displayed at "RETURN" position when the return air sensor (R.S) is abnormal.

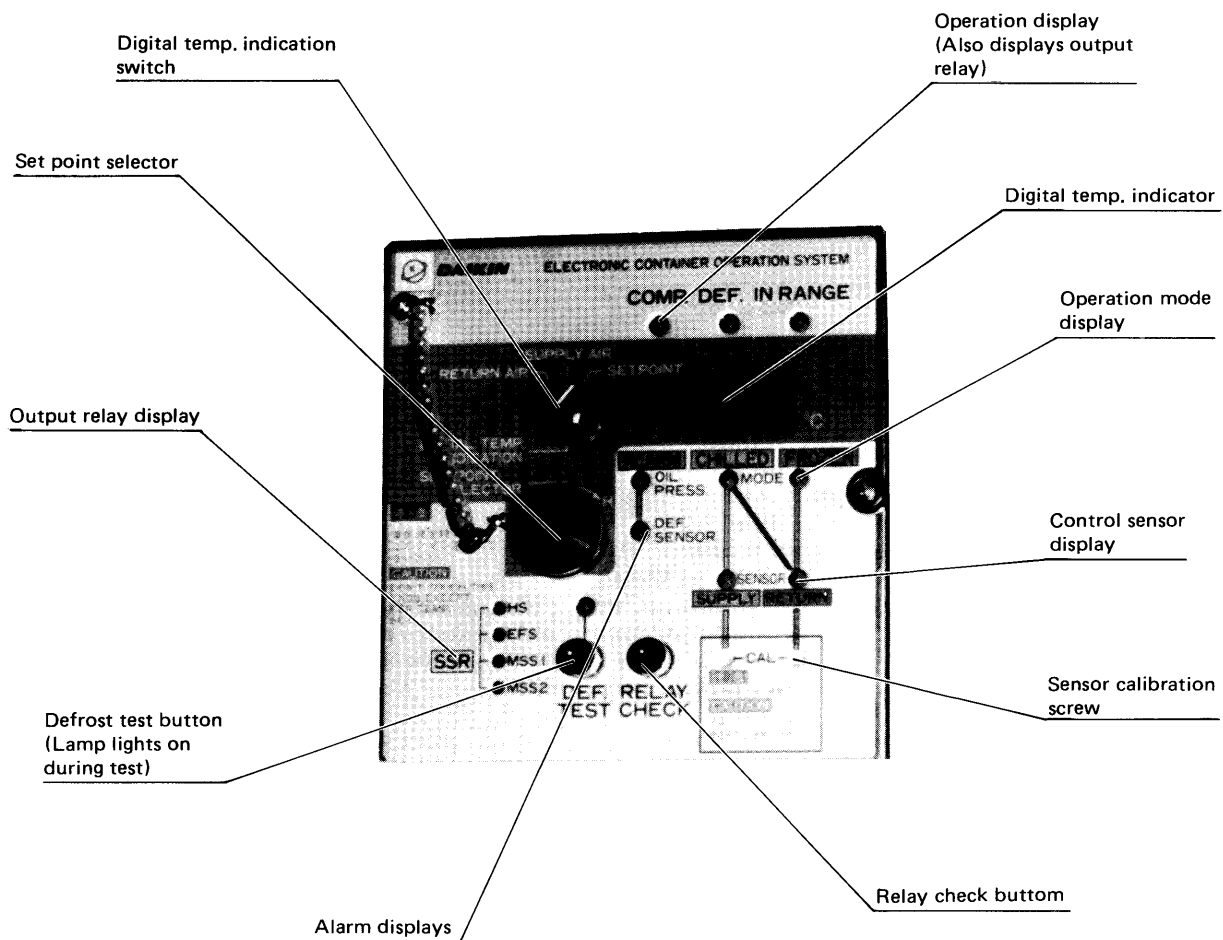


**3) Operation Mode Confirmation**

The operation mode and control sensor are automatically changed by the setting temperature.


**(a) Setting temperature above -5°C (CHILLED MODE)**

- CHILLED MODE lamp and SUPPLY SENSOR lamp (green) light on.
- When attaining to "in-range" (setting temperature +1°C) from pull down (MSS<sub>1</sub> and <sub>2</sub> turn on, modulating valve closes), MSS<sub>1</sub> turns off, capillary tube controls liquid refrigerant and the modulating valve starts opening. Then, capacity control by hot gas bypass starts.

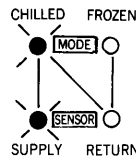

**(b) Setting below -5.5°C (FROZEN MODE)**

- FROZEN MODE and RETURN SENSOR lamp (orange) light on.
- Capacity control stops, and compressor ON/OFF control by full capacity starts.

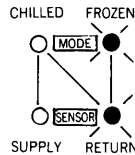

**4) Display function**

**(a) Opening Display**

- Comp. (Green) . . . Compressor operating
- Defrost (Red) . . . Defrost operating (DFS: ON)
- In range (Orange) .INRANGE (inside temperature is in range. . .setting temperature ±2°C.

**(b) Output Relay Operation Display (Red)**

- **SSR**
  - HS . . . .HS<sub>1</sub>: ON (heating operation) or HS<sub>1,2</sub>: ON (defrost operation)
  - EFS . . . .For 88F·ON/OFF
  - MSS<sub>1</sub> . . .For 20S<sub>1</sub>·ON/OFF
  - MSS<sub>2</sub> . . .For 20S<sub>2</sub>·ON/OFF

**(c) Alarm Display**

- **ALARM**
  - OIL PRESS.**
    - . . . When the reset switch is turned on within 120 seconds after oil pressure alarm display signalled abnormal oil pressure, the ALARM lamp flickers.
  - DEF. SENSOR**
    - . . . Displayed short circuit or broken wire of the defrost thermistor.

● **Control Sensor (S.S, R.S) Alarm**

	NORMAL	SUPPLY SENSOR ABNORMAL	RETURN SENSOR ABNORMAL	SUPPLY and RETURN SENSORS ABNORMAL
CHILLED MODE				
FROZEN MODE				

**5) Defrost test**

- Pushing the "DEF. TEST" button and the defrost test lamp (red) and will light up the defrost timer will start counting simultaneously.

NOTE; Do not keep to push the button continuously.

- Defrost starting (after pushing the button)

In-Range (when IRS is on) . .defrost starts (defrost lamp lights) after 43 sec. (12h/1000)

In-Range (when IRS is on) . .defrost starts (defrost lamp lights) after 14 sec. (4H/1000)

- The defrost test lamp lights off ater defrosting.

NOTES 1. Defrost operation will not start even after the complection of time counting of the defrost timer when the temperature sensed by defrost completion thermostat is above 7.5°C. At this time, the defrost test lamp will go out also after the timer count up.

2. Press the defrost test button and the standard timer (7hr or 12 hr) is cleared.



**6) Sensor Caliblation (S.S, R.S)**

NOTE: DO NOT ADJUST EXCEPT DURING PERIODICAL INSPECTION!

- Adjust by turning the sensor calibration screw "CAL".
- Dip the sensor (S.S or R.S) in screw the ice water. Then adjust the digital temperature display valve of "SUPPLY" or "RETURN" air sensor to show 0°C.

**7) Relay (step) check**


- a. Relay function point of the step thermostat can be easily checked. Refer to "Relay Function Pattern" regarding relay function points.
- b. Press the "relay check button", and S.S and R.S are disconnected automatically from the controller and the temperature setting is also changed forcedly changed follows.

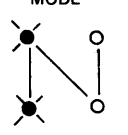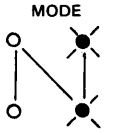Relay check: State before pushing the button	Relay check: During pushing the button		
	Digital temperature display value		
	SET POINT	SUPPLY AIR	RETURN AIR
In CHILLED MODE 	0°C	Auto Swing temperature (see C) is displayed instead of temperature sensed by S.S.	Storage temperature sensed by R.S is displayed.
In FROZEN MODE 	-18°C	Storage temperature sensed by S.S is displayed.	Auto Swing temperature (see C) is displayed instead of temperature sensed by R.S.

**c. Checking methods**

- Set the digital temperature display switch to "SUPPLY AIR" ("RETURN AIR").

Continue to press the relay check button, and digital temperature display swings as shown below centering on 0°C (-18°C), as false variation of inside temperature, and each output relay performs in step (which is confirmed by LED). The digital temperature display value at this time corresponds to the relay function point.

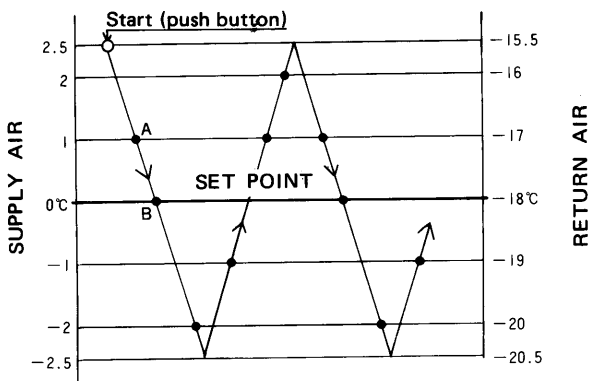

**1. Operation example:**

	CHILLED	FROZEN
Point A	MSS <sub>1</sub> → OFF, IRS → ON	IRS → ON
Point B	—	MSS <sub>1</sub> → OFF

2. Auto Swing varies at the rate of 0.1°C/2 sec.
3. When the relay check button replaced, the unit is returned immediately to the normal control.

**(3) Defrost Function**

**1) Defrost Initiation**

- Manual defrost switch (3D)
- Electronic timer
- Out-range (setting temperature above +2°C) . . . 4 h
- In-range (setting temperature below +1°C) . . .12 h

**2) Defrost Termination**

- Temperature is detected by the defrost thermistor.
- Defrost is terminated above +7.5°C OFF point (ON point is +2.5°C).

**3) "Defrost" Thermistor Back-up Function**

- When the thermistor is not operating well, the -defrosting can almost operate normally.
- Setting temperature ≥ 7.5°C — Not defrosting.
- Setting temperature < 7.5°C — Defrosting is initiated to the defrost initiation signal (in accordance with (a)). Automatically terminated by the 50-minutes timer.

**(4) Sensor Back-up Function**

The following function automatically activates when the control sensor has a broken wire, or is shortcircuited.

**1) CHILLED MODE**

- When the supply air sensor (S.S) is abnormal. Automatically changes to the return air sensor (R.S). Controls the return air temperature +2°C higher than the setting temperature during supply air control with capacity control operation.
- When both supply and return air sensors are abnormal. Automatically stops the compressor.

**2) FROZEN MODE**

- When the return air sensor is abnormal The compressor is operated continuously.

**(5) Solenoid Valve Back-up Function (during FROZEN MODE)**

- When the inside temperature is low than the in-range (-2°C below the setting temperature) without pump-down stop even though the solenoid valve (MSS<sub>1, 2</sub> . . .OFF) is closed, the compressor is immediately stopped. (CS OFF → 88C OFF)
- When this operation is continued, inside temperature is controlled in cycles of:
  - OFF . . . . .setting temperature -2°C
  - ON . . . . .setting temperature +1°C

**(6) Temperature Control Operation**


**1) FROZEN MODE (setting temperature below  $-5.5^{\circ}\text{C}$ , return air sensor)**

- a. Compressor ON/OFF control (control of  $20S_1$  by  $MSS_1$ )
- b. The modulating valve is fully closed, and capacity control is not performed. MV (modulating valve voltage): 0V.
- c.  $MSS_1$ , CS, IRS – Thermo operation

**2) CHILLED MODE (setting temperature above  $-5^{\circ}\text{C}$ , supply air sensor)**

- a. Pull down . . . . . Full capacity operation. Both  $20S_1$  and  $2$  are opened. (ON by  $MSS_1$ )
- b. Pull up . . . . . Heated only by electric heater ( $88H_1$  turned on by  $HS_1$ )
- c. Inside In-range . . . IRS turns on, supply air temperature is controlled continuously by combining the following three operations
  - Liquid control only by  $20S_2$  ( $20S_1$  is closed)
  - Hot gas bypass control by modulating valve (20M) (PID operation)
  - Heating by electric heaters ( $H_1$  and  $H_2$ )
  - PID
    - P . . . . . Proportional operation
    - I . . . . . Integral operation
    - D . . . . . Differential operation
  - The voltage (MV) to the proportional valve and ON/OFF points of  $HS_1$  are controlled in accordance with the differential between the temperature setting and supply air temperature (return air temperature in case SS is abnormal).
  - Modulating valve voltage (MV): 0~20V DC

< Function pattern >

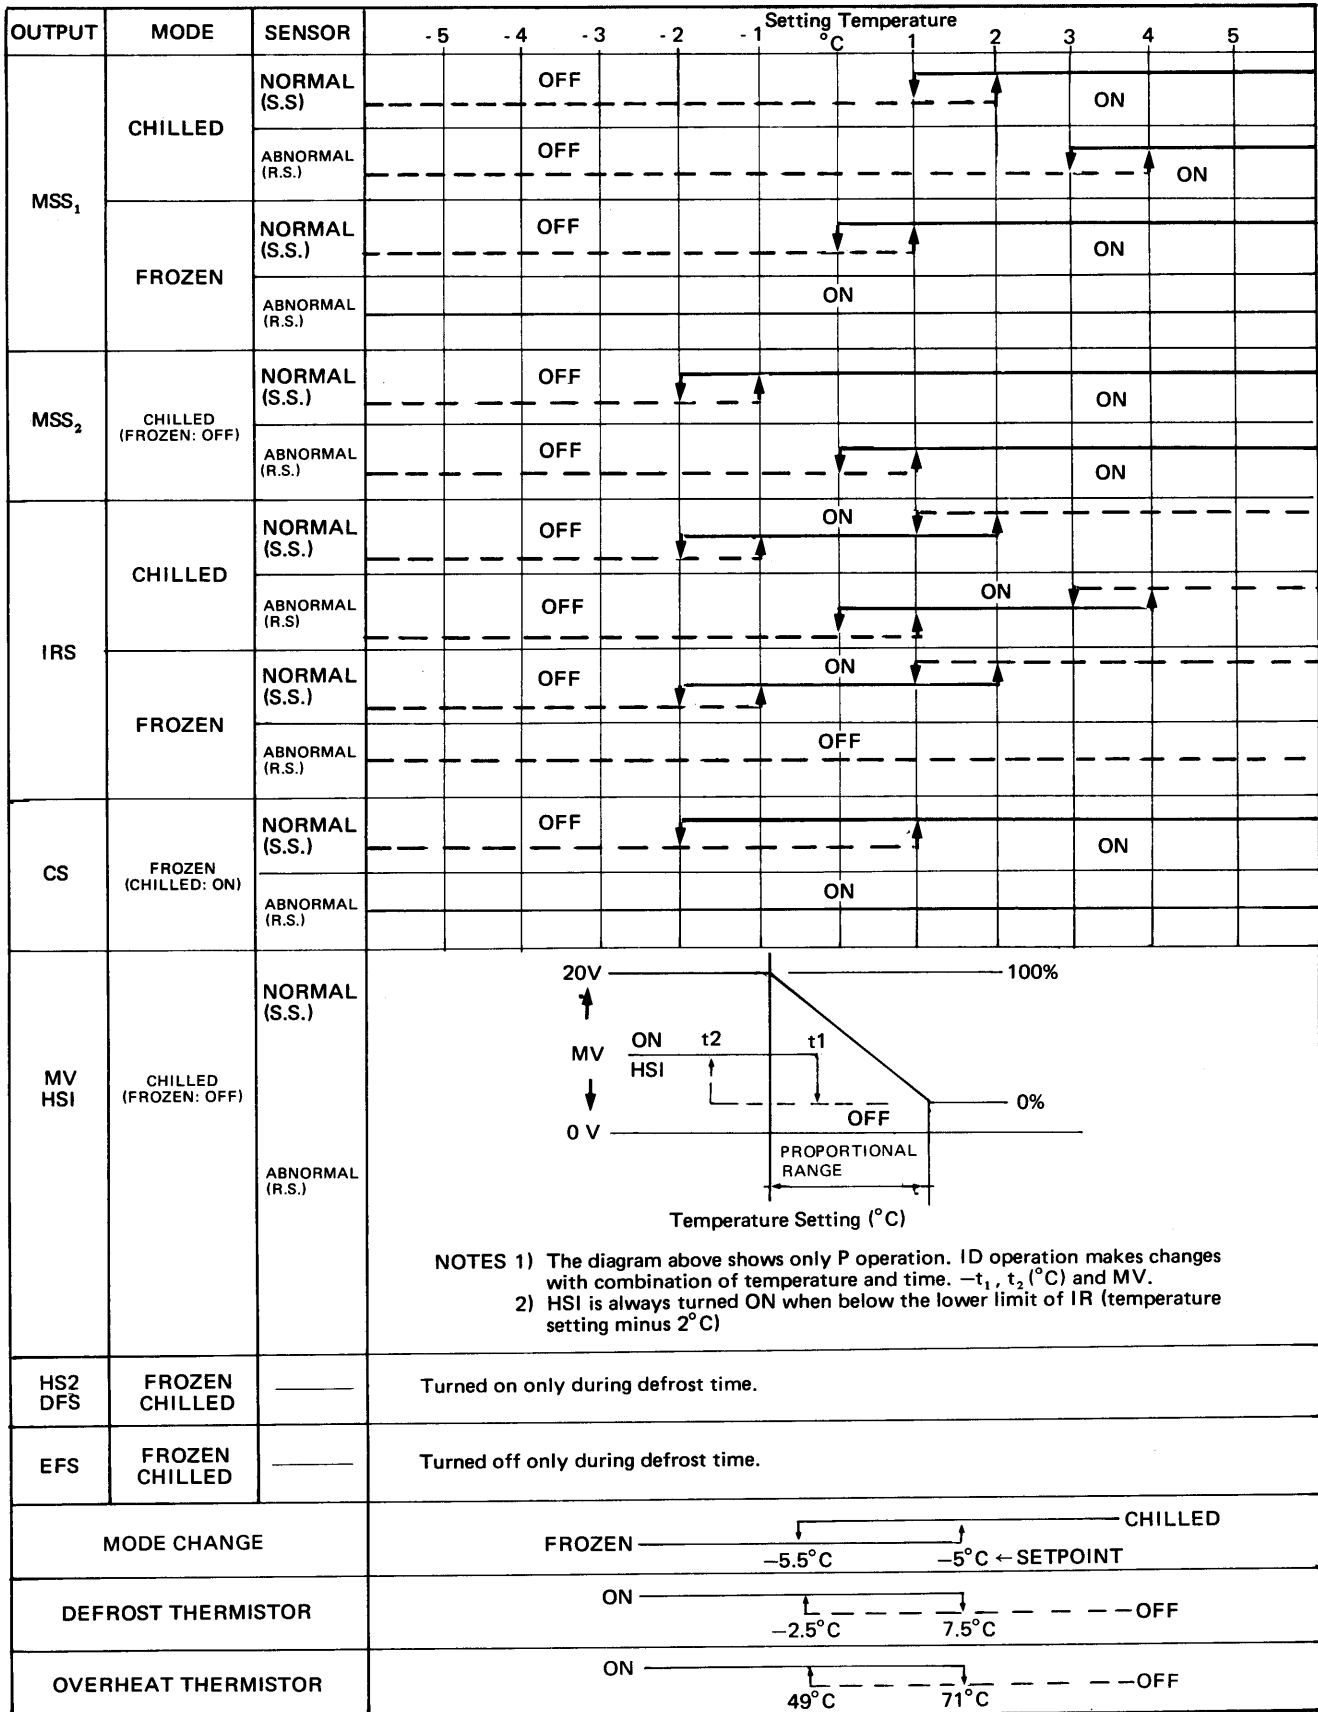

● Supply and return air sensor are abnormal

	MSS 1	MSS 2	IR	CS	MV	HS 1	HS 2	EFS
CHILLED	OFF	OFF	OFF	OFF	0V	OFF	OFF	ON
FROZEN	ON	OFF	OFF	ON	0V	OFF	OFF	ON

**7. Printed Circuit Board (PCB)**

1) PCB functions

a) CPU PCB (PCB-0)

- Consists of CPU, ROM, RAM, display controller, interval timer, and input/output controller.
- Processes all input/output signals.

b) Analog PCB (PCB-1)

- Consists of amplification circuit, fault sensing circuit, A/D converter circuit, and PID setting digital switch.
- Temperature input signals from all sensors are amplified by amplification circuit, enter as analog signals into A/D converter circuit to be converted into digital signals, and transmitted to CPU PCB.
- Analog signals from temperature setting knob and phase control circuit etc. are also converted into digital signals by A/D converter circuit and transmitted to CPU PCB.
- Values set by digital switch are transmitted to CPU PCB.

c) Input/output PCB (PCB-2)

- Consists of buffer circuit, phase control circuit, and amplification circuit.
- Input signal from external contact is received by buffer circuit and transmitted to CPU PCB.
- Transmits phase control signal to analog PCB and CPU PCB for power amplification of phase control signal and applies to modulating valve (20M).

d) Display PCB (PCB-3)

- Consists of light emitting diode, digital display circuit, diode matrix circuit, temperature setting volume, and various switches.
- Receives display signal from CPU PCB to display by means of light emitting diode (LED) or digital display.
- Transmits switch signal on PCB to CPU PCB.
- Transmits analog signals from temperature setting volume and CAL volume to analog PCB.

e) Power source PCB (PCB-4)

- Consists of rectification circuit and constant voltage circuit and supplies power to electronic circuits.

f) SSR PCB (PCB-5)


- Consists of SSR (no contact relay) and photo coupler.
- Isolates output signal from CPU PCB by means of photo coupler and drives SSR.

g) Terminal PCB (PCB-6)

- Consists of terminals to provide external wiring connections with this unit.

2) External wiring (wiring to terminal PCB, PCB-6)

All the external wiring (input and output) to the controller should be connected to the terminal board (PCB-6).

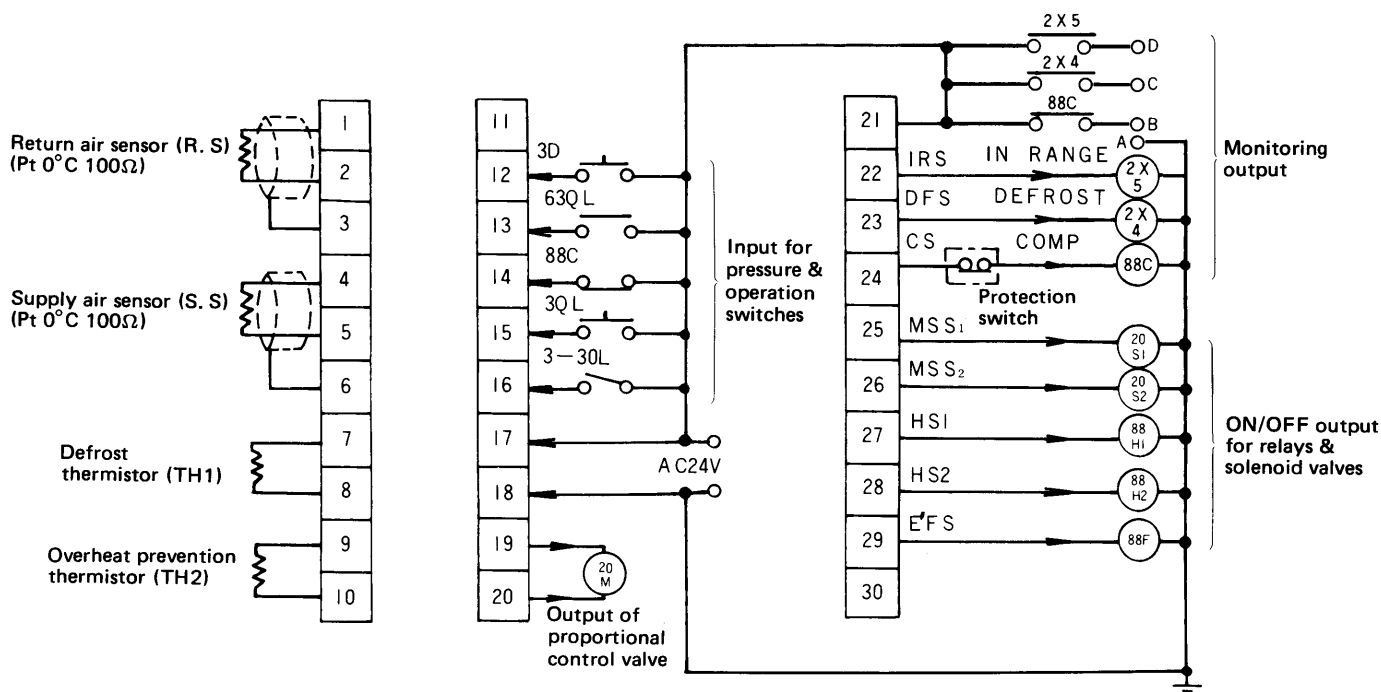

**IMPORTANT:**

- 1) Do not accampfish withstand voltage tests or insulation resistance tests on the controller and operating circuits (AC-24V circuits).
- 2) Do not short circuit between terminals. Those stated in 1) and 2) may cause controller damage.




**8. Inspection method**

**1) Checking thermostat step relay**

Check the thermostat step relay while depressing the relay (step) check button. Refer to item 2-7).

**a. Frozen mode**

- Set the digital temperature display switch to "RETURN AIR".
- Keep the relay check button depressed.
- Temperature setting is fixed at  $-18^{\circ}\text{C}$  and the inside temperature will falsely swing for  $0.1^{\circ}\text{C}/2$  sec. from  $-15.5^{\circ}\text{C} \rightarrow -20.5^{\circ}\text{C} \rightarrow -15.5^{\circ}\text{C} \rightarrow$ , all of which are indicated on the digital display.
- With the temperature setting at  $-18^{\circ}\text{C}$  the step relay of thermostat is turned on and off in accordance with such temperature fluctuation (which is confirmed by LED lamp). The temperature displayed digitally at this time is the function point of the relay.
- Release the relay check button, and the operation becomes normal.

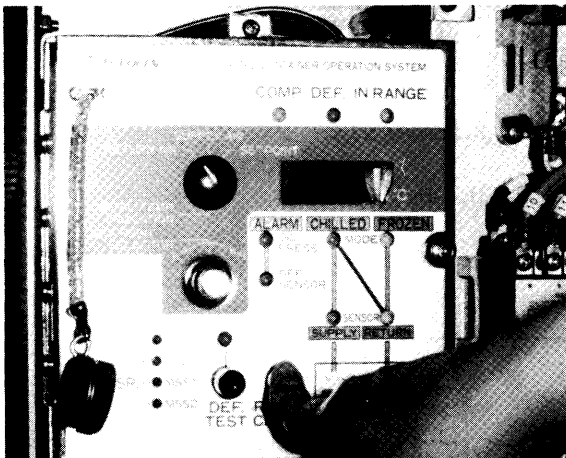

**b. Chilled mode**

- Set the digital temperature indication switch to "SUPPLY AIR".
  - Press the relay check button, and the temperature setting is fixed at  $0^{\circ}\text{C}$  causing the inside temperature to swing falsely from  $+2.5^{\circ}\text{C} \rightarrow 0^{\circ}\text{C} \rightarrow -2.5^{\circ}\text{C} \rightarrow$ .
  - Set the temperature at  $0^{\circ}\text{C}$  and check the relay function point in the same way as the FROZEN mode.
- c.** Refer to the Function Pattern Table of item 6 for relay function points.

**2) Defrost test**

Press "DEF. TEST" button for testing. (Press the button once, and release it.)

--- Refer to item 2-5).


- a.** The test lamp (red) lights after pressing the button and the timer starts counting.

Within In-range (IRS : ON)	} Defrost starts.
.. after 43 sec.	
Outside In-range (IRS : OFF)	} Defrost starts.
.. after 14 sec.	

- b.** Starting of defrost

After the timer finishes counting

DEF. lamp (red) lights	} Compressor	→ HSS1, HSS2 are
MSS1, MSS2 : OFF		
	} pumping-down.	

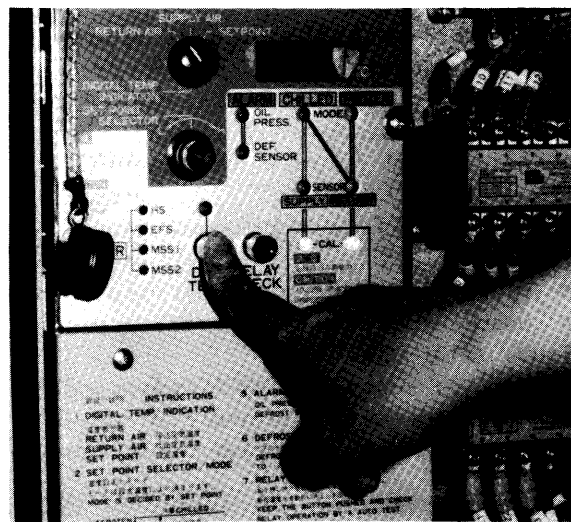

**Notes** 1. This test cannot be effected during defrosting.

2. Defrosting does not continue when the defrost thermistor is OFF (above  $+7.5^{\circ}\text{C}$ ).

3. When the defrost thermistor is faulty (short-circuit or disconnection)

- Either connect between terminal No. 7 and 8 of the terminal PCB (PCB-6) or remove the wire connections for the terminal No. 7. or 8. This lights the ALARM pilot lamp (red) of DEF. SENSOR.

- Press the test button under the above conditions to test defrosting according to the back up function (item 3-3)).

3) Back-up test of sensor (Pt)



- a. Either connect wirings of return air sensor or supply air sensor (between terminal No. 1 and 2 or No. 4 and 5 of the terminal PCB) or remove the wire connections for terminal No. 1 or 2 and No. 4 or 5.

b. Checking faulty display

- Confirm if the digital display shows, the faulty condition of the control sensor. Refer to item 2-4)-(c).
- Confirm if "E" is shown on the digital display. Refer to item 2-2).

4) Checking of oil pressure protecting

- Connect between terminal No. 13 and 17 of the terminal PCB.
- Start the compressor. Oil pressure protecting functions after 110 seconds to stop the compressor (CS and COMP. LED : OFF) and the OIL PRESS. ALARM pilot lamp (red) goes on simultaneously.
- Reset check  
Turn on the hydraulic reset switch (in the control box cover) within 120 seconds after the compressor stopped. The ALARM pilot lamp flickers.  
— This restarts the compressor 120 seconds after it has stopped, and the ALARM pilot lamp goes off.

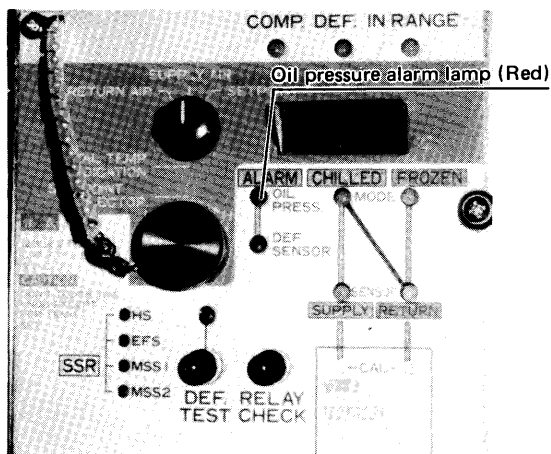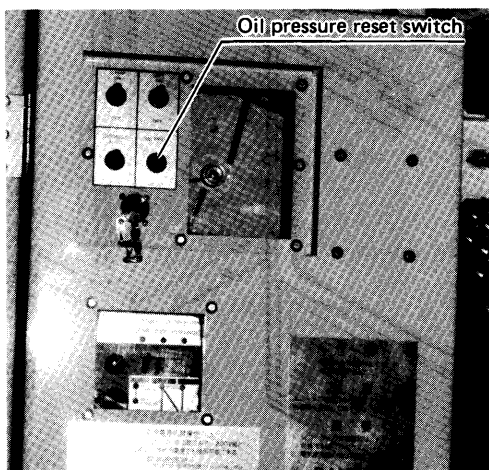

5) Checking the voltage of the modulating valve (MV)

- Set the temperature at  $-5^{\circ}\text{C}$  or above (CHILLED MODE).
- Measure the voltage (DC) between terminal No. 19 –20 of the terminal PCB when the voltage is within In-range against the temperature setting, and confirm if the voltage of the modulating valve is within the range of 0 ~ 20 volts.
- The modulating valve voltage should be 0 volt when the temperature setting is outside the In-range, or in FROZEN mode or DEFROST mode.
- Coil check  
Remove the wire connections for the terminal No. 19, 20 of the terminal PCB and measure the coil resistance of the valve terminal.  
→ Approx. 18 Ohm (at  $25^{\circ}\text{C}$ )

9. Troubles of Controller

1) Phenomena

When a controller is out of order, replace it with a new one.

Note) Confirm if the sensor (Pt) and thermister are functioning normally.

- Remove the wire connections from the controller terminal PCB and measure the resistance between the terminals. (Refer to the temperature vs. resistance characteristics table of item 11)

- a. Digital display and controller do not function when the power is on.
- Check if the voltage (between terminal PCB No. 17 –18) is AC 24V.
  - Check if the external wiring (item 7-2)) is normal.
  - Check if the connector wirings between each PCB are well fixed.
- b. LED does not light with the normal load (solenoid valve, relay, etc.) → Is lamp switch (3-30L : Control box cover) turned ON?
- c. Sensor (Pt) is normal, but output function is abnormal.
- d. Sensor (Pt) is normal, but "E" is displayed and LED display of the sensor goes out.
- e. DEF sensor ALARM is displayed when the defrost completion thermister is normal.
- f. The load does not function with LED displaying.
- g. Voltage (MV) to modulating valve (20M) is not applied by operating within In-range of CHILLED mode).
- h. The controller does not function according to external input (pressure switch, control switch).
- i. Temperature setting can not be changed by turning the set point selector (digital temperature display switch should be at "SET POINT" position.).
- j. Controller's functions are not normal.

**2) Replacement of controller**

In case of controller troubles under mentioned in the above item 1), replace the controller with PCB assembly (PB-0 to 5 except for terminal PCB).

(Replacement procedures)

**(1) Removal of terminal cover.**

Remove the terminal cover by loosening the set screws (3).

**(2) Removal of terminal PCB.**

- Loosen the set screws (4) and remove the terminal PCB from the PCB assembly.
- Slowly remove the four connectors (CN6C—brown, CN6B, D, E—black) which connect the terminal PCB with PCB assembly.

Note) Do not pull the lead wire itself.

**(3) Removal of PCB assembly.**


- Remove the three set screws (one at top, two at bottom) for fixing the body casing.
- Pull out the whole PCB assembly towards you.

**(4) Mounting of new PCB assembly.**

Reverse the above procedures for mounting.

- Slowly insert the PCB assembly into the body casing,
- Connect the connectors in accordance with the guide direction and connector symbols.
- Mount the terminal PCB and terminal cover.


**(5) Inspect according to the item 8 after replacement.**

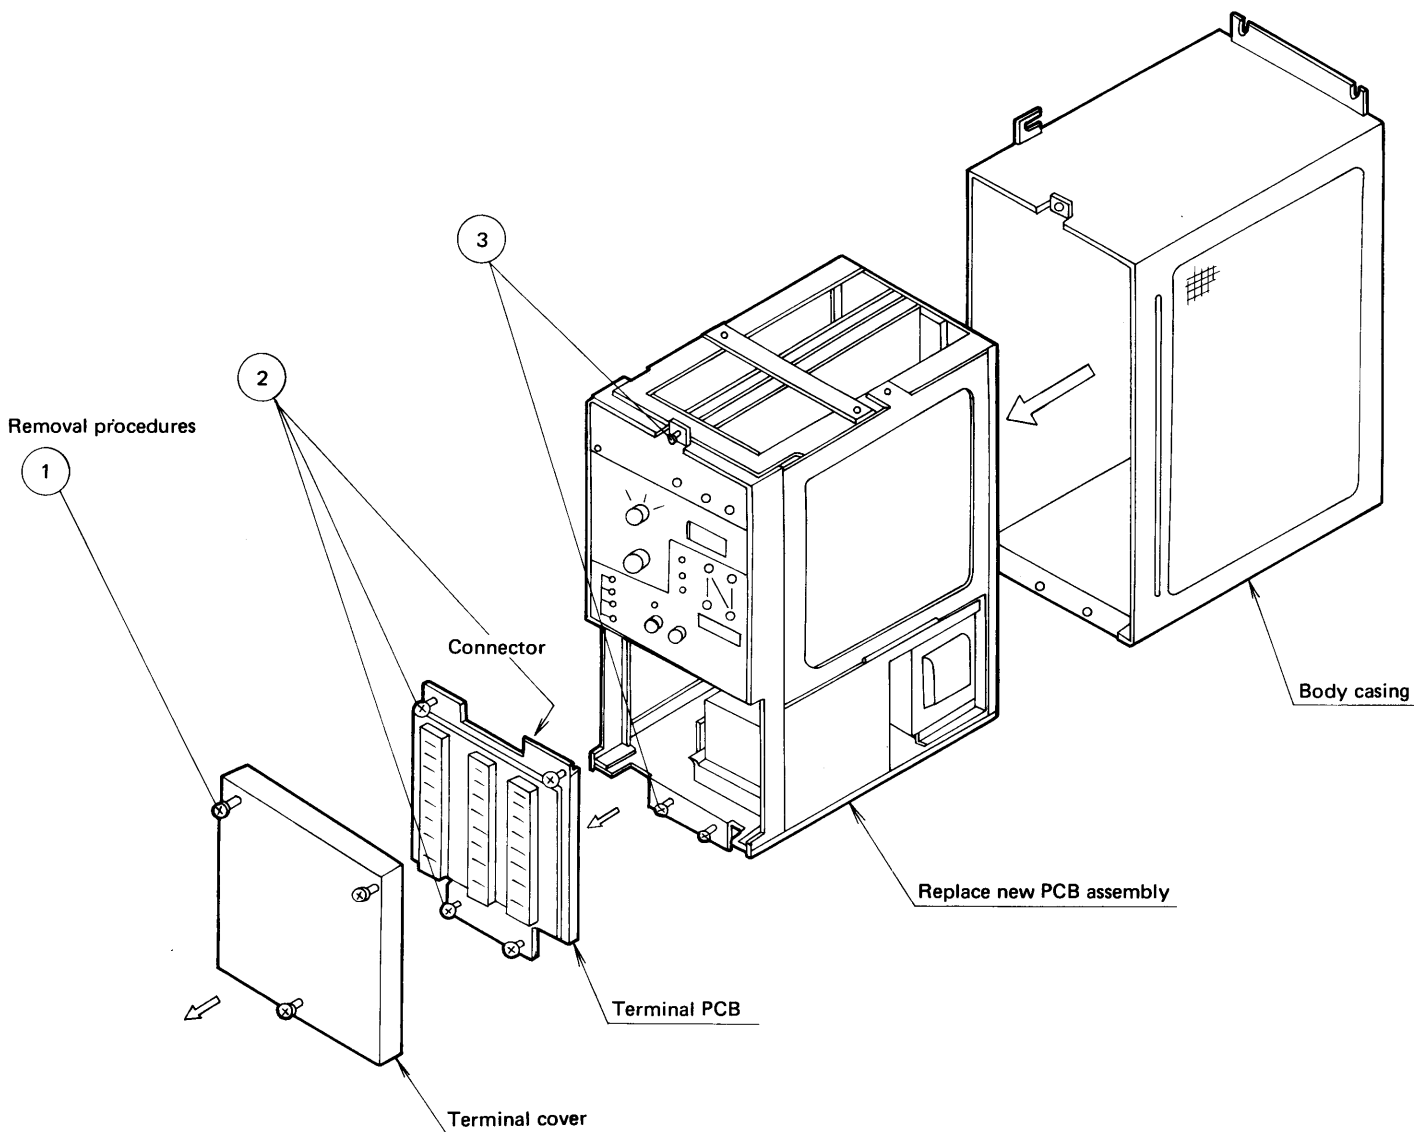

### 10. Operation for emergency.

- 1) Procedures described below are for forced operation in an emergency when a new controller is not available although the controller has been found faulty. Since the defrost system oil pressure switch, etc. May not function properly sometimes depending on the nature of the controller fault controller problems. The controller must be replaced immediately when new one is available.
- 2) FROZEN mode operation (continuous operation of evaporator fan and compressor)
  - a. Remove the connectors (CN6B to E: 4pcs. in total) of the controller terminal PCB (reverse side). Refer to 2) in item 9 for the details.
  - b. Additionally connect short circuit lines (three block lines shown at right) to the terminal PCB.
  - c. Continuous operation is possible after the above procedures have been completed.

Note Protection switches (63HL, 51C, 49) may function to temporarily suspend compressor operation in this mode.

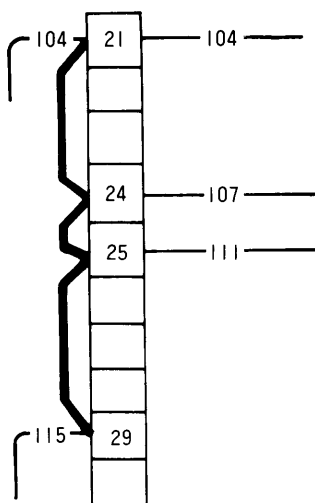

Terminal board on the terminal PCB

### 3) Heater operation


Note Overheat prevention thermostat may not function due to controller problems during heater operation, causing overheating.

Take care to prevent overheating.

#### a. Defrost operation

(Supply power to heaters  $H_1 \sim H_8$ .)

- Remove the connector from terminal PCB as described in item 2).
- Additionally connect short circuit lines (two block lines A and B shown at below) to the terminal PCB.

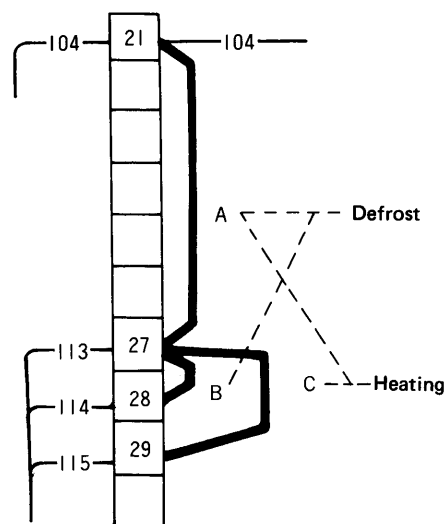

#### IMPORTANT:



To terminate defrosting, the power must be manually tuned OFF or the short circuit lines removed.

#### b. Heater operation (continuous operation of heaters $H_1, H_2$ and evaporator fan)

- Change the short circuit lines to A.B to A.C for the defrost operation in item a.
- To stop heater operation, the power must be manually turned OFF or the short circuit lines removed.

11. Sensor characteristics (temperature vs resistance characteristics)


Control sensor (platinum resistance thermometer element: S.S, R.S)  
Temperature vs resistance characteristics  
Rating: 10 Ohm  $\pm 0.3\%$  (0°C)

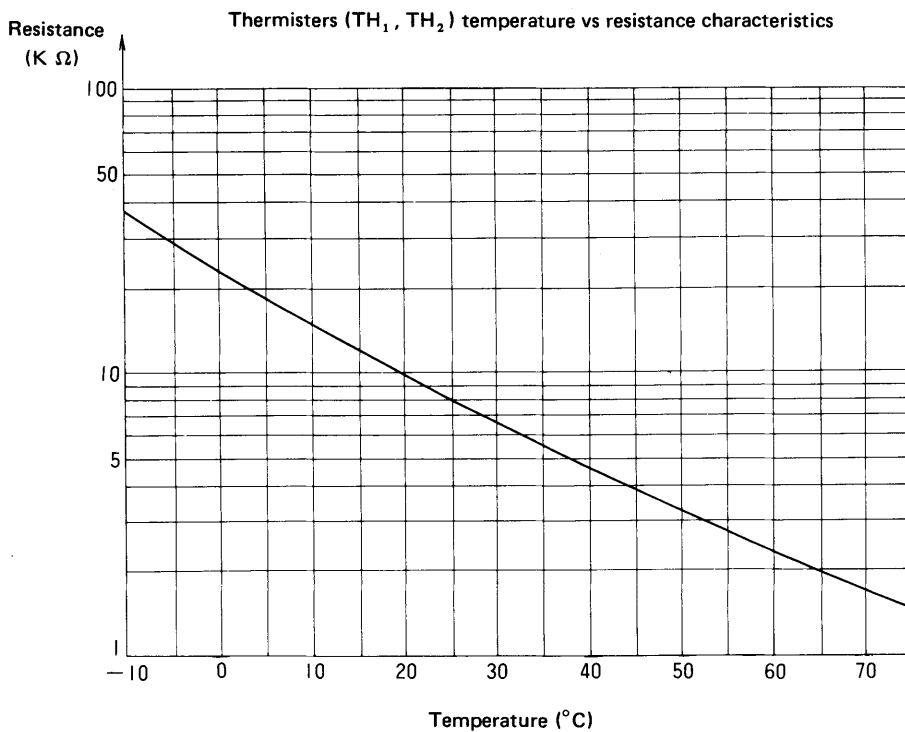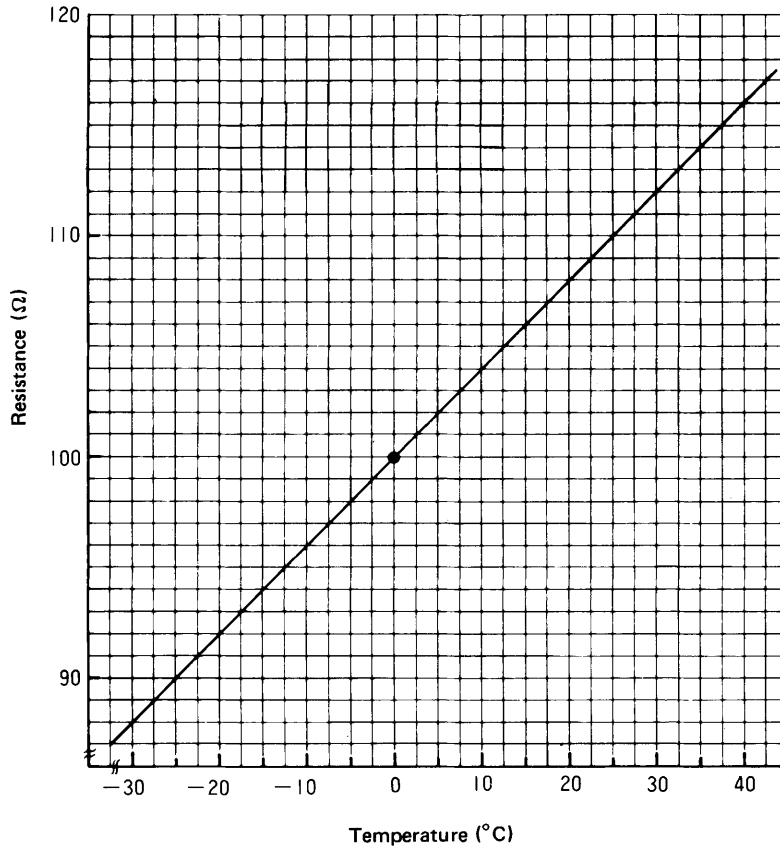

#### 4.3.2 Modulating control valve (20M)

- a. An electromagnetic modulation valve is proportionally operated by the output voltage from the controller. It continuously adjusts the hot gas bypass volume and controls the supply air temperature during the chilled mode.
- b. Valve Position
  - When a current is not input, when in the frozen mode, and during pump down stop . . . closed
  - Coil resistance  $18\Omega$  (25°C)

Modulating control valve

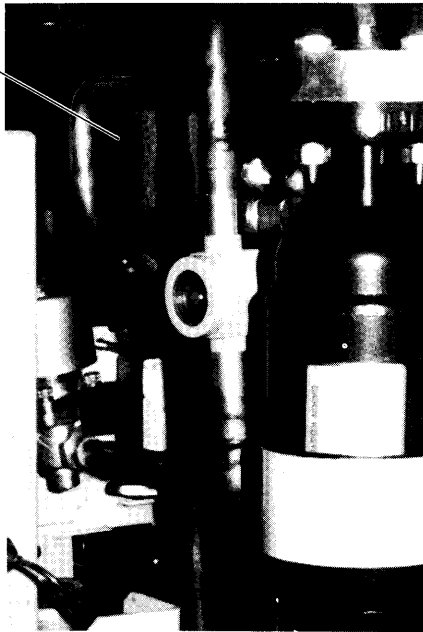

### 4.3.3 Recorder

#### 1. Specifications

Two recording pens are available for recording the supply air temperature (for recording on chilled mode temperature) or return air temperature (for recording on frozen mode temperature). Set the recording pens as follows according to the operation, chilled or frozen.

**Recording pen on chilled mode** for temperature settings above  $-5^{\circ}\text{C}$ .

**Recording pen on frozen mode** for temperature settings below  $-5.5^{\circ}\text{C}$ .


Do not try to use the two recording pens at the same time. When one pen is in position (by lowering the pen arm), the other pen cannot be used due to interlock mechanism.

- Feeler tube Gas sealed
- Recording method Pressure sensing type
- Recording temperature range  $-30 \sim +25^{\circ}\text{C}$  ( $-13 \sim 77^{\circ}\text{F}$ )
- Recording paper Dia. 203 Disk type pressure sensible paper (Graduation  $1/1^{\circ}\text{C}$ )  
(Corresponding to PSD-217C (REV. A) made of PART LOW Co.)
- Driving method for recording paper Timer (Quartz motor + reducing gears) a turn/31 days

Goods corresponding to Dry battery  
(DC 1.5V) JIS C 8501 . . . . .SUM2  
IEC. . . . .R14

Quartz motor driving source:

Life is approx. 1 year (Remaining voltage indicator)

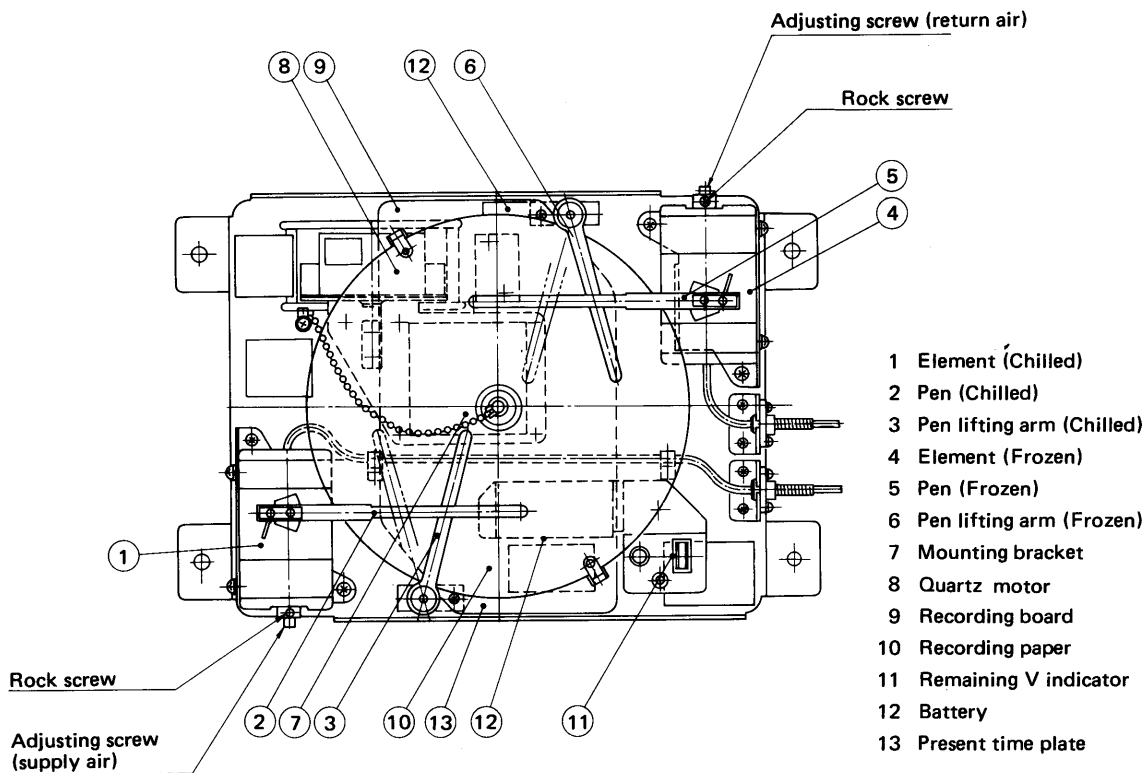

#### 2. Inspection of recorded temperature

##### 1) Recording pen on chilled mode

Operate the controller in chilled mode at  $0^{\circ}\text{C}$  and confirm with the digital temperature display of the controller that the supply air temperature has stabilized at  $0^{\circ}\text{C}$  and further move that the temperature indication of the recording pen on chilled mode is also  $0^{\circ}\text{C}$ .

##### 2) Recording pen on frozen mode

###### a. Inspection operation in chilled mode.

Subsequent to item 1), check the return air temperature on the digital temperature display to confirm that the return air temperature displayed agrees with the temperature indication of the recording pen on frozen mode.

###### b. Inspection operation in frozen mode

Run the controller in the frozen mode at temperature setting of  $-18^{\circ}\text{C}$  and confirm that the compressor starts and stops at least several times and that the return air temperature is uniformly held at  $-18^{\circ}\text{C}$ . Then confirm that the recording pen on frozen mode indicates  $-18^{\circ}\text{C}$  when the solenoid valve  $20S_1$  is closed ( $MSS_1$  of controller is OFF.).


### 3. Adjustments

- 1) Make adjustments subsequent to the inspection in item (2).
- 2) Turn the temperature setting screw (A) to adjust the temperature. Loosen the lock screw (B) and turn the setting screw (A) clockwise to temporarily raise the temperature setting by approximately 5°C.

Then turn the setting screw (A) counterclockwise to lower the temperature setting of the pen until the temperature is adjusted to 0°C or -18°C.

Tighten the lock screw (B) after the adjustment.

- Note
- 1 One turn of the setting screw (A) changes the temperature setting by approx. 5°C (9°F).
  - 2 Be careful that the temperature setting may be altered by tightening the lock screw (B).

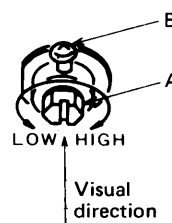

### 4. Replacement of parts


#### 1) Battery

##### a) Replacement interval

- When the indicator is out side the blue zone after checking the residual voltage of the battery. (When the indicator is above the dotted lines, i. e., within the white zone shown in the right figure, the battery has approximately one-month life.)

##### b) Replacement method

- Remove the recording panel and insert the new battery making certain that the battery polarity is correct. Use SUM-2 or IEC R14 of JIS C8501 batteries or the equivalent (DC1.5V dry cell).
- After replacement, confirm that the pointer of the residual voltage indicator is within the blue zone and that the quartz motor functions properly.

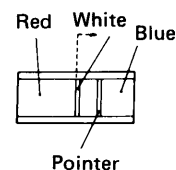

Residual voltage indicator



#### 2) Residual voltage indicator battery

##### a) Replacement interval


- In case oscillation of the needle is unstable when the push switch is pressed down for confirmation of remaining voltage.
- In case the remaining voltage indicator needle is within the white zone or in the red zone, although a new battery is set in.

##### b) Replacement method

- Remove the recording panel by loosening the screw.
- Remove the residual voltage indicator battery from the body, and replace it with a new one.
- When replacing the battery make certain that the terminal wirings are connected red to red and black to black.
- After replacement confirm that the pointer is within the blue zone and that the quartz motor functions properly.

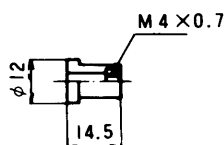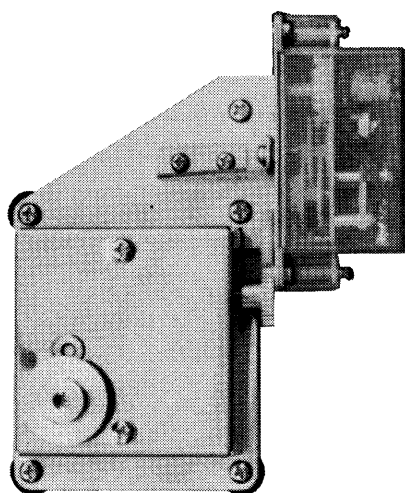

Accessory (anti-vibration rubber : 5 pcs)

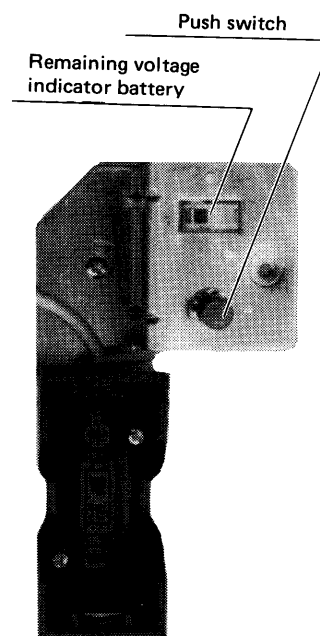



**3) Timer (quartz motor speed reducing gear)**

**a) Replacement interval**

- When the quartz motor does not function even though residual voltage battery is normal.
- When the timer delays over three hours a day.

**b) Replacement method**

- Remove the recording panel to remove the wiring. Loosen the screws (5 pcs) to remove the timer, and replace the timer with a new one.
- When replacing the timer, also replace the anti-vibration rubbers (5 pcs). The red wire is for (+) and the black wire for (-), therefore, connect the red terminal with red and the black with black. Tighten the anti-vibration rubbers with torque of 4 ~ 5 kg-cm.
- Confirm that the quartz motor functions correctly after replacement.


**4) Thermal feeler bulb**

**a) Replacement interval**

- After the pen has been adjusted and the controller has been operated within the temperature range of  $-18$  to  $+10^{\circ}\text{C}$  ( $-0.4$  to  $50^{\circ}\text{F}$ ), with the inside temperature stabilized at the temperature setting: When the temperature indication under the above conditions deviates by more than  $2^{\circ}\text{C}$  ( $4^{\circ}\text{F}$ ) against the temperature setting. (When the temperature indication is substantially less than the temperature of the thermal feeler bulb, gas leakage may be suspected.)

**b) Replacement method**

- Loosen the screw and remove the thermal feeler bulb – element. Replace it with a new one.
- After replacement, inspect and adjust.

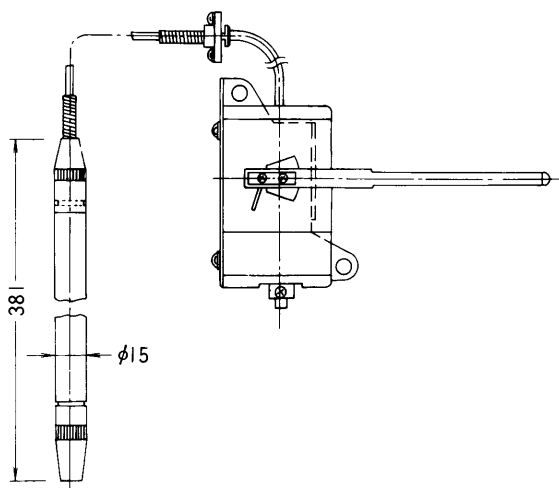


Thermal feeler bulb – element { For frozen mode . . . . .DKM-AA001  
For chilled mode . . . . .DKM-AA002

#### 4.4 Description on electrical and functional parts.

##### 4.4.1 Dual pressure switch (63HL)

This stops the compressor when the pressure has risen or fallen excessively in the unit. The high pressure may rise above preset of HP if the condenser fan fails or cooling water does not circulate properly, etc. The low pressure may fall below preset of LP if "pump down" has been performed because the refrigeration circuit is blocked or the solenoid valves are closed. In these cases, the switch stops compressor.

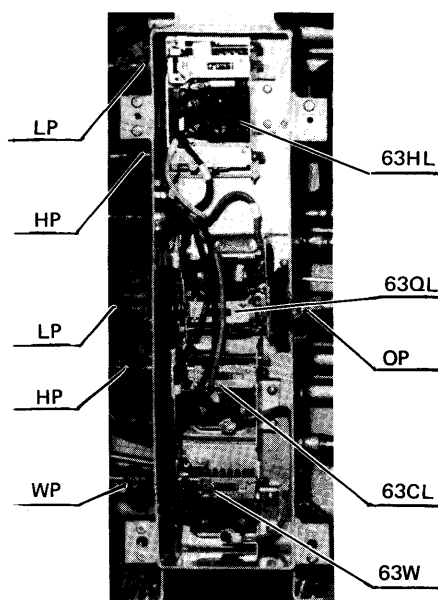

 

 
 


Pressure switch box


LP : Low pressure  
 HP : High pressure  
 OP : Oil pressure  
 WP : Water pressure

##### (a) Adjustment method

Adjust the switch by turning the adjusting screw as described below;

Adjusting points of dual pressure switch


	Adjusting screw	Rotary direction		Function
High pressure side	Setting of adjusting screw	Clockwise		Setting (OFF value) becomes high, and pressure at the stopping of the refrigeration unit becomes high.
		Counter-clockwise		Setting (OFF value) becomes low, and pressure at the stopping of the refrigeration unit becomes low.
Low pressure side	Setting of adjusting screw	Clockwise		Setting (ON value) becomes low, and pressure at the starting of the refrigeration unit becomes low.
		Counter-clockwise		Setting (ON value) becomes high, and pressure at the starting of the refrigeration unit becomes high.
	Setting of adjusting screw for differential	Clockwise		Pressure difference between ON and OFF becomes large and difference between pressure on the starting and on the stopping becomes large.
		Counter-clockwise		Pressure difference between ON and OFF becomes closer and difference between pressure on the starting and on the stopping becomes closer.

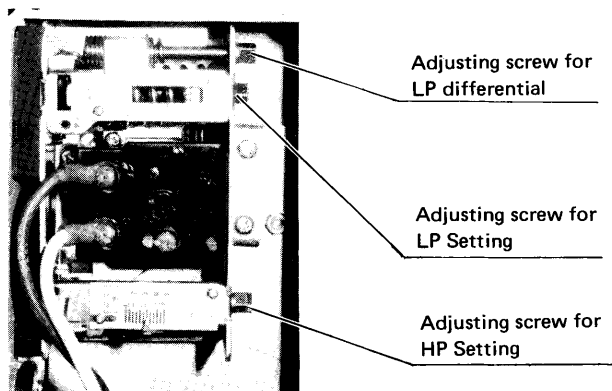

- Notes:**
- 1) If it is necessary to adjust the adjusting screw for differential, be sure to adjust pressure setting first and then adjust differential.
  - 2) After adjusting the adjusting screw, apply chemical to the bolt head to prevent the bolt from being loosened vibration.

**4.4.2 High pressure control pressure switch (63CL)**

If the ambient temperature is low during air cooled operation, two out of three condenser fans are turned off so that the high pressure should not fall. (As for more details, refer to "high pressure control")

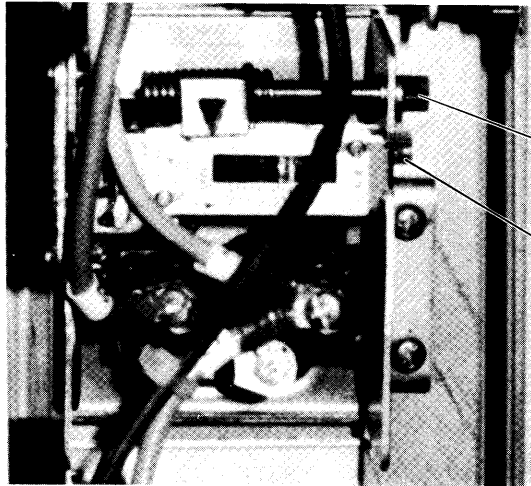





Adjusting screw for differential

Adjusting screw for setting

**(a) Adjusting method**

 Adjust the adjusting screw as staged below.

Adjusting points for high pressure control switch

Adjusting screw	Turning direction		Function
Adjusting screw for setting	Clockwise		Setting value (ON value) becomes low and fan speed increases
	Counter-clockwise		Setting value (ON value) becomes high and fan speed decreases
Adjusting screw for differential	Clockwise		Pressure difference between ON and OFF becomes large and stopping period of certain fans is prolonged.
	Counter-clockwise		Pressure difference between ON and OFF becomes small, and stopping period of certain fans is shortened.

- Notes:**
- 1) In case it is necessary to adjust the adjusting screw for differential, be sure to adjust setting first and then differential.
  - 2) After adjustment of the adjusting screws, be sure to apply the following chemical to the bolt heads to prevent them from loosening by vibration.

### 4.4.3 Oil pressure switch (63QL)

When oil pressure continues to drop, this switch sends a warning signal to the controller and stops the compressor automatically.

Oil pressure (difference between oil pressure and low pressure) falls due to oil pump failure, clogging and oil foaming.


The compressor may be burnt because of oil shortage.

#### (a.) Operation

When the compressor is started, the oil pressure (differential pressure) rises, and the differential pressure contacts of 63QL are opened. However, if the oil pressure fails to rise for over 110 seconds after starting the compressor, the contacts are closed and the timer operates to stop the compressor.

#### (b.) Resetting

When the reset switch on the control box is turned on after 120 seconds from the stopping of the compressor, the compressor starts immediately. If the reset switch is turned on immediately after the stopping, the compressor will start after 120 seconds.

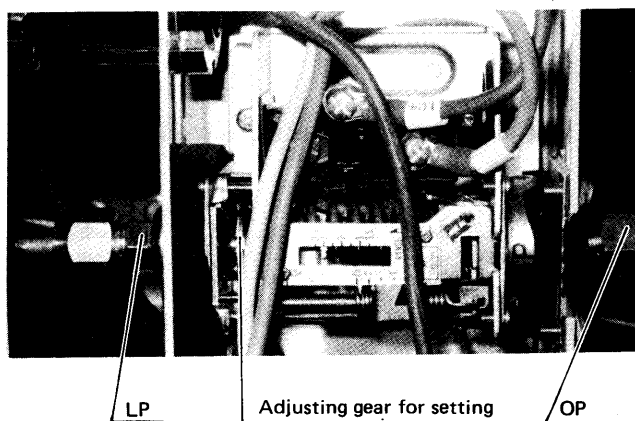



Oil pressure switch

#### (c) Adjustment method

Adjust the oil pressure switch by turning the adjusting gear as described below.


Adjusting points for oil pressure switch

Adjusting gear	Turning direction		Function
Adjusting gear for settings	Clockwise		Functional pressure (differential) becomes low and heater circuit is disconnected with low pressure difference.
	Counter-clockwise		Functional pressure (differential) becomes high and heater circuit is disconnected with high pressure difference.

**Note:** The following turning directions are viewed from the low pressure connection side.

**4.4.4 Water pressure switch (63W)**

This switches over air and water cooled modes. If cooling water flows and water pressure rises above a preset water pressure at the inlet, the contact is turned off to stop the condenser fan motor and water cooled operation will start.

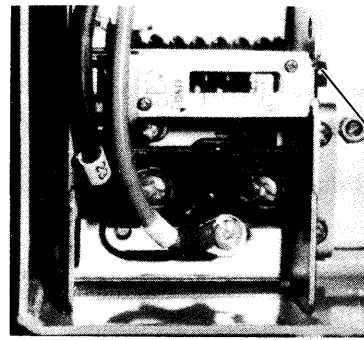

Adjusting screw for setting

**(a) Adjusting method**

Turn the adjusting screw as stated below.

Adjusting points of water pressure switch

Adjusting screw	Turning direction		Function
	Clockwise	Counter-clockwise	
Adjusting screw for setting	Clockwise		Setting (OFF value) becomes low, and fans stops quicker.
	Counter-clockwise		Setting (OFF value) becomes high, and fan is delayed in stopping.

**Note:** After the adjustment, be sure to apply loctite to the bolt head to prevent it from being loosened due to operation vibration.

**4.4.5 Defrost thermistor (TH<sub>1</sub>)**


This senses ambient temperature around the thermistor and detects the defrost termination.

OFF: 7.5°C  
ON : 2.5°C


**4.4.6 Over heat thermistor (TH<sub>2</sub>)**

This prevents the electric heaters from overheating. If the heaters are overheating, the ambient temperature around the thermistor rises. It detects the overheat, and the controller cuts off the heaters.

OFF: 71°C  
ON : 49°C

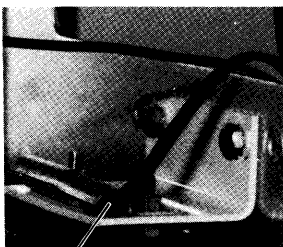

defrost thermistor

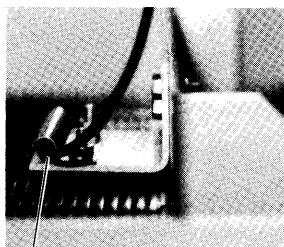

overheat thermistor

#### 4.4.7 Electric heaters


Two kinds of electric heaters are used.

##### (a) Sheathed heaters (220V AC, 0.65 kW x 6)

These are fitted at the bottom of the evaporator.


H<sub>1</sub> through H<sub>6</sub> are used for defrosting. H<sub>1</sub> and H<sub>2</sub> are used as auxiliary heaters during heating operation.

To replace them, lift the fittings up and remove them together with the base plate.

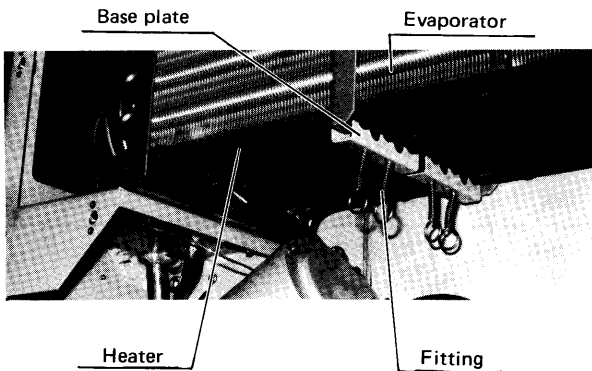

##### (b) Molded heaters (220V AC, 12W x 2)


These are fitted at the left and right of the drain pan to prevent the drain port from freezing (H<sub>7</sub> and H<sub>8</sub>).

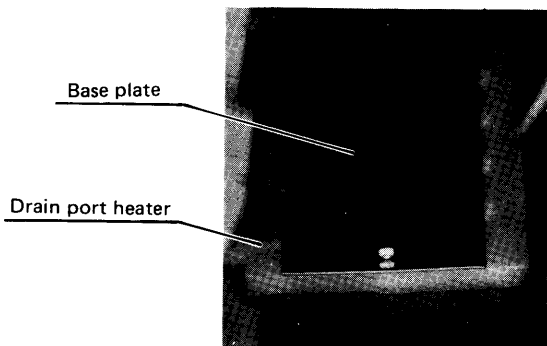

## 5. Set values of functional parts

Part name	Mark	Function	Set value	
Oil pressure switch WNS-C106Q	63QL	OFF ON	1.0kg/cm <sup>2</sup> 0.5kg/cm <sup>2</sup>	
Dual pressure switch DNS-D306Q	63HL	Low pressure OFF ON High pressure OFF ON	40cmHgV 0.2kg/cm <sup>2</sup> 20kg/cm <sup>2</sup> 16.5kg/cm <sup>2</sup>	
High pressure control switch SNS-C130Q11	63CL	OFF ON	7kg/cm <sup>2</sup> 12.5kg/cm <sup>2</sup>	
Water pressure switch SNS-C106Q6	63W	OFF ON	1.0kg/cm <sup>2</sup> 0.4kg/cm <sup>2</sup>	
Electronic controller	Overheat thermistor	TH2	OFF ON	71°C (160°F) 49°C (120°F)
	Defrost thermistor	TH1	OFF ON	7.5°C (45.5°F) 2.5°C (36.5°F)
	Defrost timer		ON	4 hr (out-range) 12 hr (in-range)
Overcurrent relay CR-20-NP <sub>2</sub> S <sub>4</sub>	51C	OFF	10.0A	
Circuit breaker (main circuit) MK-53	52C1	OFF	32A	
Circuit breaker (control circuit) CP 31	52C2	OFF	7A	
Thermal protector KLIXON 9700L-01-11 (cond. fan motor) 9700K-01-11 (evap. fan motor)		OFF	120°C (248°F)	
Thermal protector KLIXON 7895 (compressor)	49	OFF	105°C (221°F)	

6. Operating pressure and running current

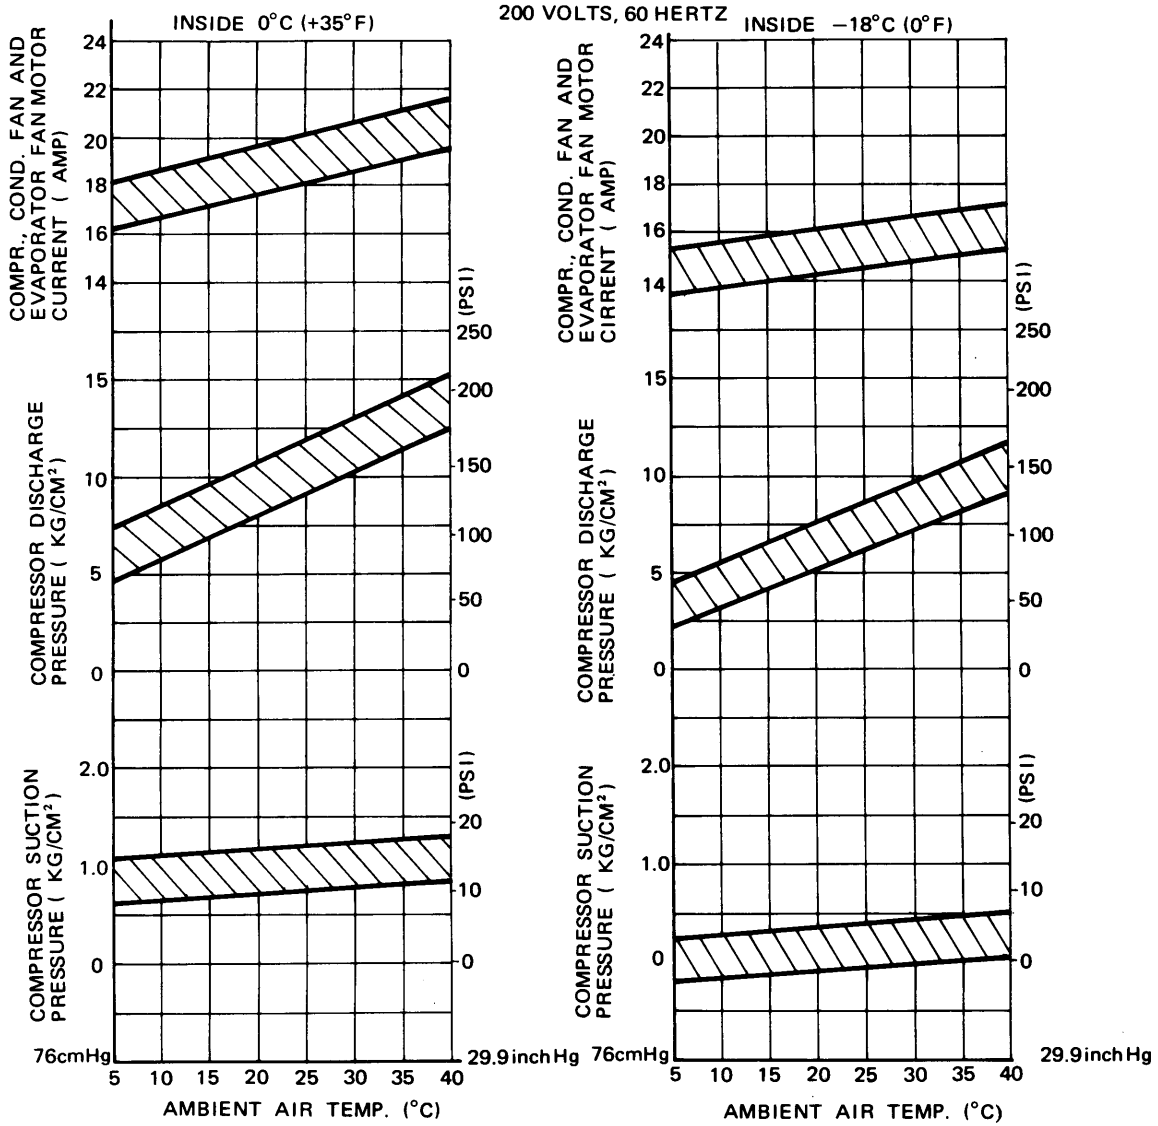

< For reference >

	Item	Unit	Value
1	Heater current – during defrosting Measure at primary side of 88H <sub>2</sub>	A	10.5 (AC 220V)
2	Running current of condenser fan motor	A	0.7 (AC 220V)
3	Running current of evaporator fan motor	A	3.0 (AC 220V)
4	Compressor	kg·cm/lb. ft	240 ± 20/17.3 ± 1.4
	Compressor stop valve flange		140 ± 15/10.1 ± 1.1
	Fan motor		70 ± 7/5.0 ± 0.5
	Solenoid valve		75 ± 5/5.4 ± 0.4
	Expansion valve		140 ± 10/10.1 ± 0.7



## 7. Troubles and countermeasures

If the unit does not work properly, inspect it in accordance with "Troubles and countermeasures" to find cause of trouble and repair it.

### Troubles and countermeasures

State	Phenomena	Functioning places	Cause	Countermeasures	
I. Operation inoperative	A: Condenser evaporator fans and compressor are inoperative.	a. No trouble with unit	Current interruption Power source is disconnected.	Trace cause Connect power source plug to power source.	
		b. Circuit breaker function (main circuit)	It functions due to over current.	Trace causes and replace.	
		c. Circuit breaker function (control circuit)	It functions due to over current.	Trace causes and replace.	
	B: Evaporator fans operate but condenser fans and compressor are inoperative.	a. No trouble with unit		The unit halts by function of the temperature recording controller or in heating operation.	Readjust temp. setting as designed.
				Setpoint selector is high	
		b. Oil pressure control		It is not reset yet.	Repair trouble and turn reset switch to on.
		c. Solenoid valve does not function.		Coil is cut out.	Replace it.
		d. Controller malfunctions.		Sensor is damaged or other reasons.	Replace it.
	II. Operation stops soon	A: Condenser fans and compressor stop, keeping evaporator fans in operation.	a. Oil pressure switch is functioning.	Oil pressure will not rise. Oil is short or oil pump is out of order.	Additional oil charge, or repair oil pump.
			b. No trouble with unit	Controller functions and stops unit.	
B: Condenser fans and compressor operate on and off repeatedly with evaporator fans in operation.		a. Pressure switch functions. High pressure side		Excessive charge of refrigerant.	Discharge refrigerant.
				Air in system	Air purge
				Insufficient air flow for air cooled operation.	Clean or remove obstacles clogged.
				Condenser or passage clogged.	
				Fan blade damaged.	Repair or replace.
				Fan motor does not rotate.	Replace it.
				Capacitor inoperative.	
				Fan motor thermostat has functioned.	Trace causes.
				Insufficient water volume for cooling operation.	
				Condenser is clogged with scale.	
Lower pressure side				Insufficient refrigerant charge.	Additional charge, seek leaking positions and repair.
				Dryer clogging	Replace
				Moisture chokes	Exchange dryer.
	Gas leakage from feeler tube of expansions valve.			Exchange it.	
	b. Over-current relay or compressor protection thermostat has functioned.		Excessive large current due to over-load operation.	Trace causes.	

State	Phenomena	Functioning places	Cause	Countermeasures
III. Inside temp. is low than temperature setting	A: Compressor inoperative.	a. Solenoid valve will not close.	Blocked with dust.	Replace it.
		b. Controller does not function.	Sensor is disconnected	Replace it.
		c. Sensor is installed wrongly.		Reattach it.
IV. Inside temperature does not drop	B: Hotgas bypass does not work	Modulating control valve does not open	Blocked with dust Controller is defective	Repair or replace Replace modulating valve or controller
		A: Inside temperature does not reach to preset temperature (Fans and compressor work)	a. Modulating control valve does not close. b. Capillary tube is defective	Blocked with dust Repair or replace
V. Inside temperature is not stable	A: Inside temperature is not stable during chilling and heating operations (Fans and compressor work properly)	a. Opening of modulating control valve (valve control voltage) is not stable	Controller is improperly adjusted	Adjust or replace
VI. Heating	A: Heater is inoperative.	a. No trouble with unit	Setting of set point selector is under $-5.0^{\circ}\text{C}$	
		b. Overheat thermistor	Insufficient evaporator air volume	
VII. Defrosting operation	Defrosting and refrigerating operation are repeated in a short period of time.	a. Defrost timer incorrectly set or faulty.	Improper adjustment	Readjustment

## 8. PTI (Pre Trip Inspection)

To keep the unit in good operating condition, check adjust or repair the unit when necessary. The following is the checking items of PTI (an example of container refrigeration unit checklist).

### Container refrigeration unit inspection card



Installed ship name				Date of Inspection	
Container No.				Place of Inspection	
Loaded cargo		Loaded or none		Unit Model No.	
Customer's staff				Unit No.	
Service staff				Compressor No.	
Check	No.	Check point		Check method	Reference value
Check before operation	1	External appearance of important parts of container (doors, equipment mount, damaged points)		Visual	
	2	Cleaning interior and exterior of container		Visual	
	3	Checking the smudge of the unit (air-cooled condenser, evaporator)		Visual	
	4	Checking "through" points inside and outside unit		Visual	
	5	The refrigeration circuit for leakage of gas and oil (mainly at joints)		Halide torch, Visual	Flame reaction should be bluish purple
	6	Checking external appearance of power cable and plug		Visual	
	7	Cleaning drain hose		Visual	Shall be free from clogging
	8	Mounted condition of electric heaters		Visual	Make sure that leads are not in contact with heaters
	9	Checking exterior of over heat thermistor		Visual	Shall have no damaged part
	10	Tightened condition of cable glands and monitoring receptacle		Retighten with tool	Make sure that they are firmly tightened
	11	Bolts for compressor, fans, and motors, etc. for fastening state		Retighten with tool	Make sure that they are firmly tightened
	12	Clearance between fan and fan guide		Visual	Evaporator fan : 5~9 mm Condenser fan : 3~7 mm
	13	Sealing at control box, and PS box, etc.		Visual	Packing and sealing should be intact
	14	Wire terminals for loosening correction		Visual, driver	
	Check during operation	15	Contact and/or coil of magnetic contactor for burning		Visual
16		Unit insulation resistance	Compressor circuit <input type="checkbox"/> MΩ	DC 500V megger	2MΩ or more
			Electric heater circuit <input type="checkbox"/> MΩ		
			Evaporator fan circuit <input type="checkbox"/> MΩ		
17		Checking operation of oil pressure switch	CUT OUT <input type="checkbox"/> kg/cm <sup>2</sup> CUT IN <input type="checkbox"/> kg/cm <sup>2</sup>	Tension gauge Timer	1.0 kg/cm <sup>2</sup> 0.5 kg/cm <sup>2</sup>
18		Supply voltage		Check line voltage at primary side of circuit breaker (main circuit)	Within ±10% of related voltage
19		Checking condenser and evaporator fan motors for vibration and noise		Touch and listen	
20		Checking amount of circulating refrigerant		Check liquid indicator	Make sure that it is sealed
21		Checking for water in refrigerant		Check liquid indicator	Green
22		Checking compressor oil level (operating condition)		Check compressor oil level gauge	⊖ (oil level 1/4 - 3/4)
23		Confirm function of the recorder and the battery		Visual	
24		Checking operation of controller and pilot lamps		Check pilot lamps (controller)	
25		Checking manual defrosting operation		Manual defrost switch	
26	Electric heater operation and current R <input type="checkbox"/> S <input type="checkbox"/> T <input type="checkbox"/>		Clamp meter		
27	Checking operation of defrost thermistor thermostat (Completing temperature) <input type="checkbox"/> °C		Mount thermistor to defrost thermistor mounting position	OFF 7.5±2° C	
28	Unit operating current R <input type="checkbox"/> S <input type="checkbox"/> T <input type="checkbox"/>		Clamp meter	-18° C <input type="checkbox"/> V <input type="checkbox"/> Hz	

Check	No.	Check point	Check method	Reference value		
Check during operation	29	Checking operation of dual pressure switch	H-CUT OUT <input type="text"/> kg/cm <sup>2</sup>	Blind air inlet	20 kg/cm <sup>2</sup>	
		L-CUT OUT <input type="text"/> mm HgV	Accomplish pump down by use of the stop valve at the accumulator receiver outlet	400 mmHgV		
		L-CUT IN <input type="text"/> kg/cm <sup>2</sup>		0.2 kg/cm <sup>2</sup>		
	30	Checking operation of water pressure switch	Checking switchover from water-cooled to air-cooled operation	Disconnect water coupling	Condenser fan motor shall operate	
		Checking switchover from air-cooled to water-cooled operation	Connect water coupling and supply water	Condenser fan motor shall stop		
	31	Checking voltage selector	Checking 400V class operation	Place voltage selector lever upward		
			Checking 200V class operation	Place voltage selector lever downward		
	32	Inside temperature °C	<input type="text"/>	0°C	-18°C	Automatic operation at -18°C
		Ambient temperature °C	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> in one cycle
		LP kg/cm <sup>2</sup>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> COMP OFF <input type="text"/> M
HP kg/cm <sup>2</sup>		<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/> COMP ON <input type="text"/> M	
Operating time		Immediately after operation	Operation starting 0°C <input type="text"/> Hr <input type="text"/> M	Operation starting -18°C <input type="text"/> Hr <input type="text"/> M	Automatic operation at -18°C <input type="text"/> Hr <input type="text"/> M	
Operation starting time		<input type="text"/> <input type="text"/>				
Check after operation	33	Checking automatic defrosting	Defrost time <input type="text"/> M	Push the "DEFROST TEST" button	defrost starts { out-range : 14 sec. after in-range : 43 sec.	
	34	Place new chart				
	35	Close caps for control box and PS box, etc.				
	36	Write down details of service on history cards				

## 9. How to maintenance

### 9.1 Handling method of the stop valve



#### (1) Place of the stop valve and its kind

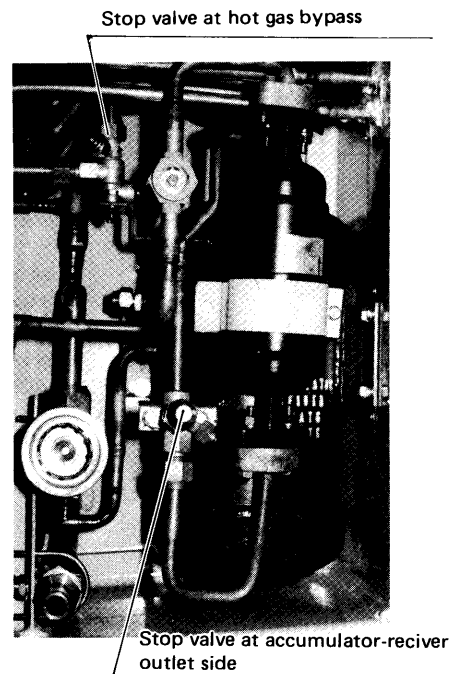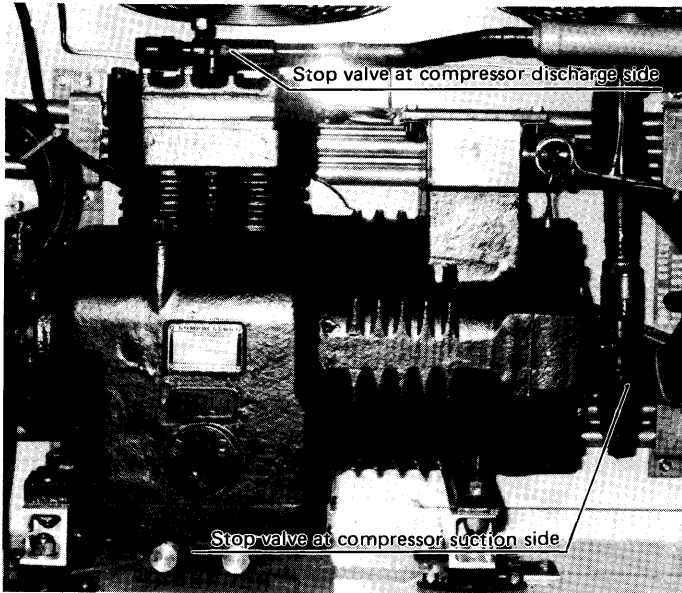

#### (2) Structure of stop valve


1 Stop valve at compressor discharge side (VSH10VAP-5S)

2 Stop valve at compressor suction side (VSH22XBP)

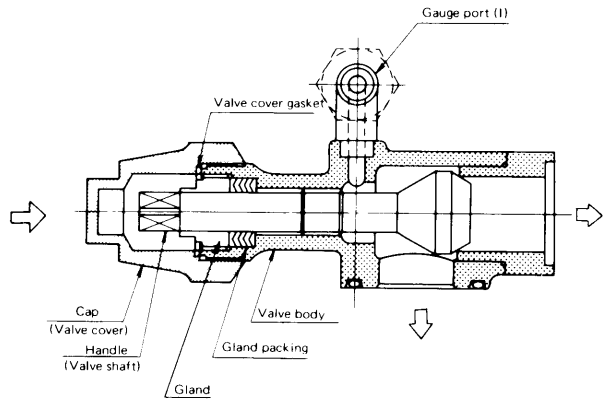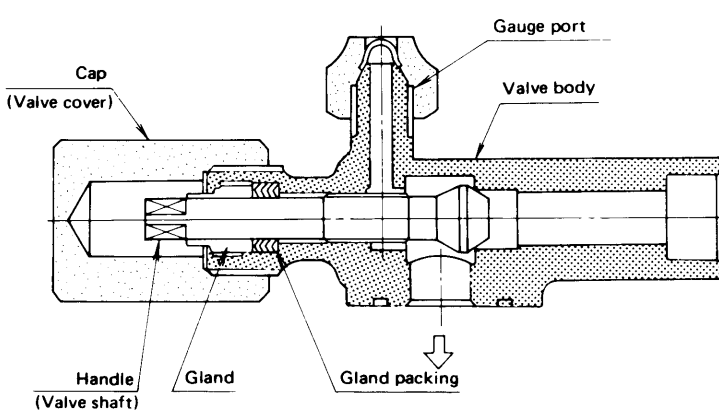


3. Stop valve at accumulator-receiver with heat exchanger outlet side


Stop valve at hot gas bypass (VSV10CBP-4S-4F)

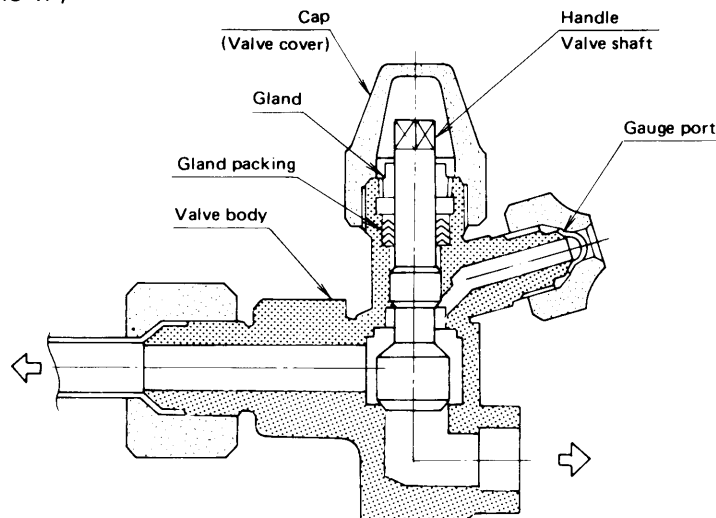

**(3) Handling method**

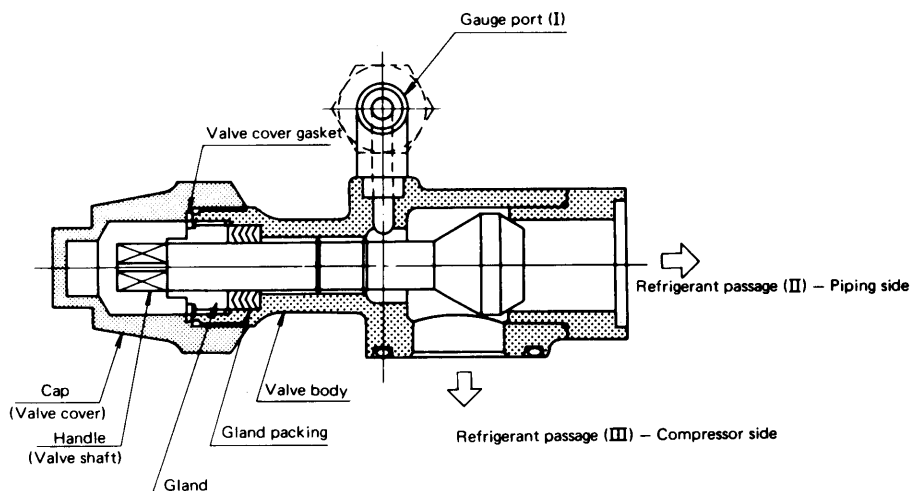


- 1) Remove the valve cap. At this time, be careful not to lose the gasket.
- 2) Loosen the gland in a way the refrigerant is not extracted.
- 3) Fully close the handle . . . . .The refrigerant passage I is connected to III (Front seat)
- 4) Fully release the handle . . . . .The refrigerant passage II is connected to III (Back seat)
- 5) Set the handle at the neutral position . . . . .The refrigerant passage I is connected to II and III.
- 6) The refrigerant passage differs with the procedure mentioned in 3, 4, or 5. So select the best passage by necessity.
- 7) Operate the handle, tighten the gland and place the valve cap as it was after completion of the work. At this time, do not forget to attach the gasket.

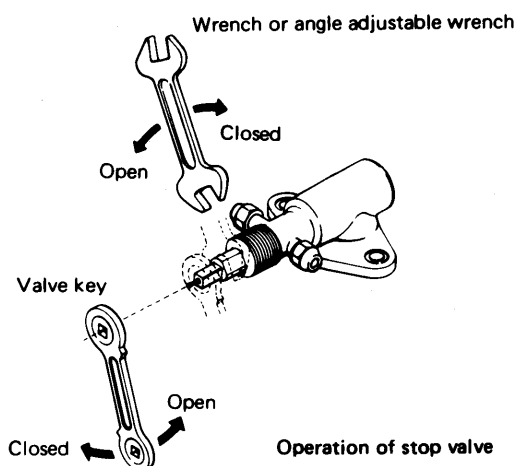

**9.2 Attaching or removing points of pressure gauge**


**(1) Attaching a general pressure gauge**

- 1) After opening the compressor suction valve and the accumulator-receiver valve fully (back seat), connect a pipe to the gauge port.
- 2) Loosen a little the flare nut on the pressure gauge side and tighten the handle of the stop valve a little (Middle seat) and return it at once. Thus the air is purged.
- 3) After purging the air, accurately tighten up the flare nut on the pressure gauge side.
- 4) Close the handle of the stop valve a little, and confirm that the needle of the gauge rises.
- 5) Be certain that the needle of the pressure gauge does not oscillate during the operation of the unit. If it oscillates, do not close the gauge port fully and open the handle of the stop valve a little.
- 6) In case the pressure gauge is attached to the low pressure side, if the low pressure is lower than the atmospheric pressure, the air is drawn in the piping during the air purging. So install the pressure gauge after confirming that low pressure is higher than the atmospheric pressure.
- 7) Operate the unit and confirm that the unit is stopped without pump down.

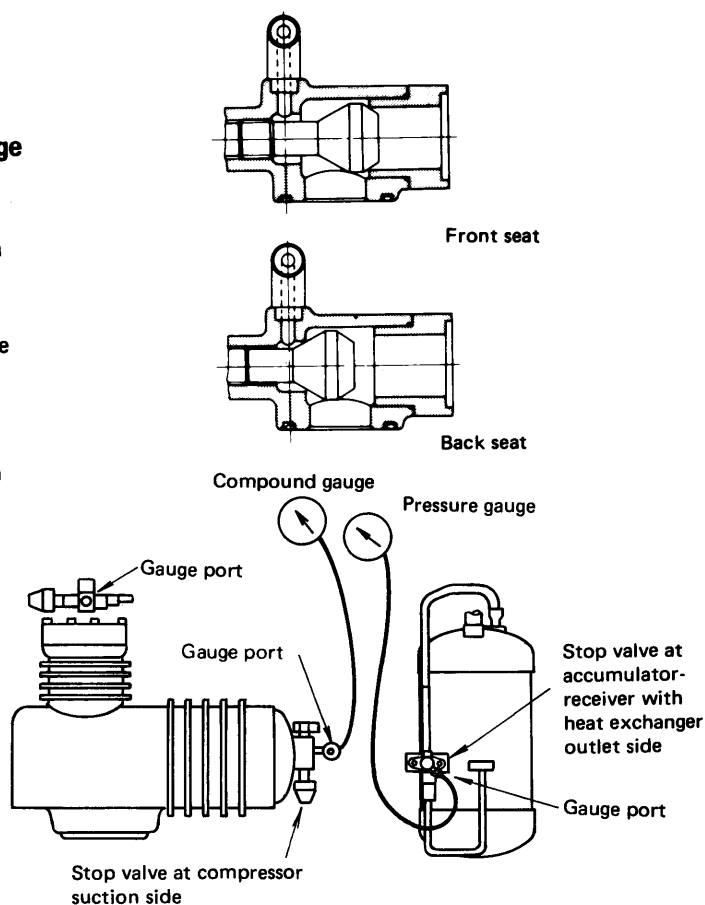


**(2) Attaching the gauge manifold**

- 1) With regard to mounting points, note the same caution as that for general pressure gauges.
- 2) Open the cocks which are attached to the both sides of the gauge manifold when mounting. Loosen the blind cover of the centre hose, and close the gauge port for the compressor suction valve and the accumulator-receiver outlet valve. (Back seat)
- 3) Attach the flare nut of the hose of the manifold on the high pressure side tightly and the on the low pressure side loosely.
- 4) Loosen the accumulator-receiver outlet valve and vent the air from the hose on the low pressure side and the centre hose and then once again keep the stop valve in the back seat state. After that tighten up the flare nut on the low pressure side.
- 5) After closing the cocks of the gauge manifold, keep the cock of the compressor suction valve and accumulator-receiver outlet valve at the neutral seat and measure pressure.

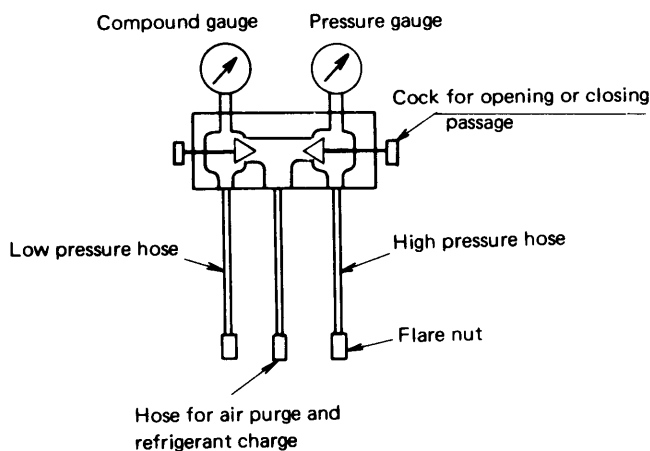

Structure of gauge manifold

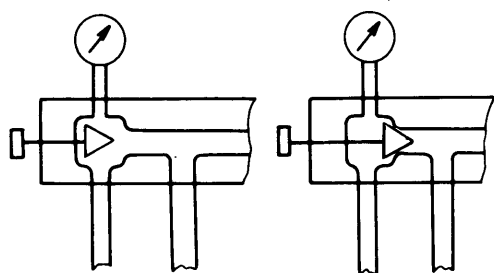

Opening state

Closing state

Opening and closing states of gauge manifold

- (3) Removing the pressure gauge and the gauge manifold, as stated below.

When the high pressure hose is removed, note that the liquid refrigerant in the hose may jet out, which is very dangerous.

- 1) Hold the handle of the stop valve in the back seat state, and close the gauge port.
- 2) Open the cock (in case of gauge manifolds) or the flare nuts (in case of general pressure gauges) a little to extract the refrigerant from the hose.

At this time, do not open it suddenly so as not to joint out liquid refrigerant.

- 3) After extracting the refrigerant from the hose, remove the pipe connection for the gauge piping.
- 4) Place the blind cover on the gauge port of the stop valve, accurately tighten up the flare nut and confirm no refrigerant leaks.


**Note:** Since the blind cover is very small, be careful not to lose it.

**9.3 Pump down**

Pump down means that the refrigerant in the refrigeration circuit is liquidized and collected in the Accumulator-receiver with heat exchanger. This work is required to repair the refrigeration circuit for minimizing leaking volume of the refrigerant and risks due to pressure rising.

< Working procedure >

- 1) Install pressure gauges to the high pressure side the low pressure side.
- 2) Operate the refrigeration unit (either on water cooled or air cooled operation)
- 3) Close the accumulator-receiver outlet valve.
- 4) Stop the operation when reading of the low pressure gauge becomes 0.1 kg/cm<sup>2</sup> and close the compressor discharge valve.
- 5) After a short while, read the low pressure gauge. If pressure rises, open the compressor discharge valve and repeat the same procedure.
- 6) Repeat the same procedure two or three times, and the refrigerant is collected in the accumulator-receiver with heat exchanger. If no pressure gauge is attached, the unit is stopped by the low pressure setting of the dual pressure switch.

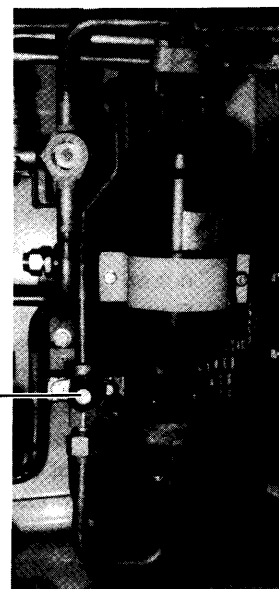

Stop valve at accumulator-receiver with heat exchange outlet side

## 9.4 Charging and purging the refrigerant

### (1) Purging non-condensable gas

If non-condensable gas such as air exists in the refrigeration circuit, it is collected by the accumulator-receiver with heat exchanger, which raise pressure in the accumulator-receiver with heat exchanger abnormally high and reduces heat transferring ratio of the condenser surface. It is, therefore, very important to extract non-condensable gas.

If discharge pressure is abnormally high (even though cooling water volume is increased, in case of water cooled operation) and will not return to the normal pressure, inspect if non-condensable gas such as air exists in the following method.

- Stop the compressor, close the accumulator-receiver outlet valve and wait until leaving and entering cooling air (or water) of the air (water) cooled condenser become equal. If there is any difference between saturated pressure corresponding to cooling air (water) and condensing pressure, non-condensable gas exists.

In this case, purge non-condensable gas as stated below.

- 1) Accomplish pump down
- 2) Condense the refrigerant as much as possible, and then discharge it from the gauge port of the compressor discharge valve.
- 3) Discharge the condensed refrigerant repeatedly reading the pressure gauge until condensing pressure becomes saturated pressure.

### (2) Refrigerant purge

There are two methods of refrigerant purge; i.e. one is for collecting the refrigerant extracted in a cylinder and the other is for discharging it to the atmosphere.

#### (a) Collecting the refrigerant in a cylinder

- 1) Prepare an empty cylinder which has been dried by forming vacuum inside and weigh it.
- 2) The cylinder is connected to the gauge port of the Accumu-receiver with heat exchanger by piping with the cylinder cock closed, and then loosen the flare nut on the cylinder side a little to vent the air from the piping.
- 3) Operate the refrigeration unit to pump down the refrigerant.
- 4) After completion of pump down, open the gauge port of the accumulator-receiver with heat exchanger and then open the cock of the cylinder to collect the liquid refrigerant into the cylinder.
- 5) After collecting the refrigerant, close the gauge port and the cock and then remove the piping.
- 6) Be certain that the refrigerant has been collected in the cylinder by weighing it.
- 7) As for the refrigerant remaining in the refrigeration circuit, extract it to the atmosphere.

#### (b) Extracting the refrigerant to the atmosphere

- 1) Open the gauge port on the suction side of the compressor to extract the gaseous refrigerant to the atmosphere.
- 2) Do not open the compressor discharge valve or the gauge port of the accumulator-receiver with heat

exchanger, otherwise the refrigerant oil and the liquid refrigerant are discharged, which may result in shortage of oil or getting chillblains.


- 3) Do not extract the refrigerant in a closed room and also confirm there is no fire around it. Although the refrigerant is non-toxic, there may be fear of suffocation. In addition, if the refrigerant contacts with fire, it yields phosgene gas (toxic gas).

### (3) Vacuum drying and charging refrigerant and refrigeration oil

If all the refrigerant has leaked out and the air is intermixed in the refrigeration circuit, repair a cause of trouble and do vacuum drying. Then charge the predesigned volume of refrigerant. In case the refrigerant oil is replaced, do the same.



(Required tools)

1. Refrigerant cylinder (20 kg) for R-12 ( $\text{CCl}_2\text{F}_2$ ) with mouth piece
  2. Refrigeration oil (20l can) SUNISO 3GS-DI
  3.  $\phi 6.4$  CuT (with two flare nuts)
  4. Pressure gauge ( $20 \text{ kg/cm}^2$ ), compound gauge ( $10 \text{ kg/cm}^2 \times 75 \text{ cmHg}$ ) } or gauge manifold
  5. Weighing scale (Up to 50 kg)
  6. Tools
  7. Vacuum pump
- (a) In case the refrigerant is replenished without exchanging the refrigeration oil.
- 1) Connect the vacuum pump to the gauge ports of the compressor suction and discharge valves, form vacuum down to 76 cmHg, hold the stop valve in the back seat state and then remove the vacuum pump, leaving the vacuum state in the refrigeration circuit. However, when air enters in the refrigeration circuit, form the vacuum in the circuit down to 76 cmHg and leave it for more than 2 hours (vacuum drying).

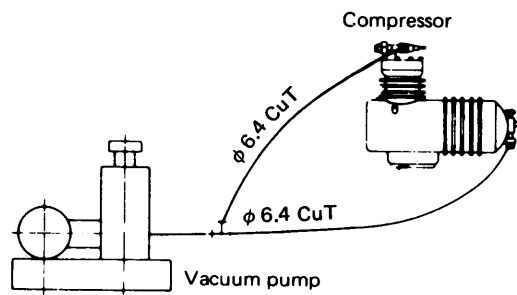




- 2) To evacuate the refrigeration circuit between the solenoid valve and expansion valve, reduce pressure of the circuit below the preset level of the low pressure switch lower the presetting level of the set point selector, operate the refrigeration unit, and open the solenoid valve for evacuation. At this time (vacuum drying), the compressor remains idle since the low pressure switch is off, and the solenoid valve alone open.

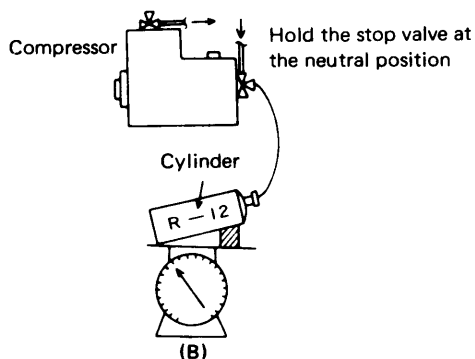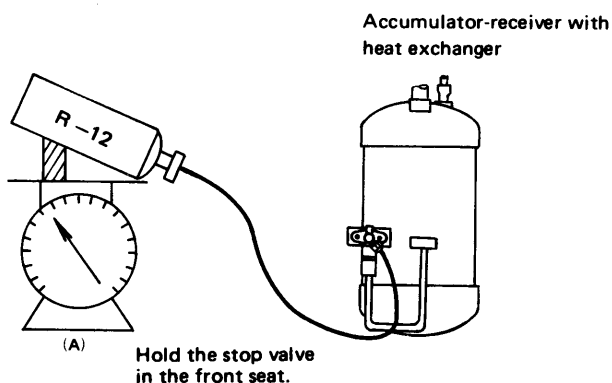

- 3) Place a refrigerant cylinder on the weighting scale, and record its weight.
- 4) In case the refrigerant is charged in the liquid state, do it as shown in the above figure (A). Prevent the liquid refrigerant collected in the accumulator-receiver with heat exchanger from flowing to the low pressure side. If the refrigerant is hardly charged, operate the compressor to charge it.
- 5) In case the refrigerant is charged in the gaseous state, do it as shown in the above figure (B). If the refrigerant is hardly charged, operate the compressor to charge it.
- 6) Charge the predesigned volume of the refrigerant in the above stated methods either in 4 or 5.
- 7) After completion of refrigerant charge, hold the stop valve in the back seat state and confirm that if the predesigned volume of the refrigerant has been charged by operating the refrigeration unit.

- (b) Charging the refrigerant as well after replenishment of refrigerant oil

- 1) Extract the refrigerant oil. → Firstly discard all the gas so that pressure in the refrigerant circuit becomes 0. Then loosen the drain plug at the bottom of the compressor to extract all the oil. At this time, firstly open the oil charge plug and then the drain plug to prevent the oil from jetting out.

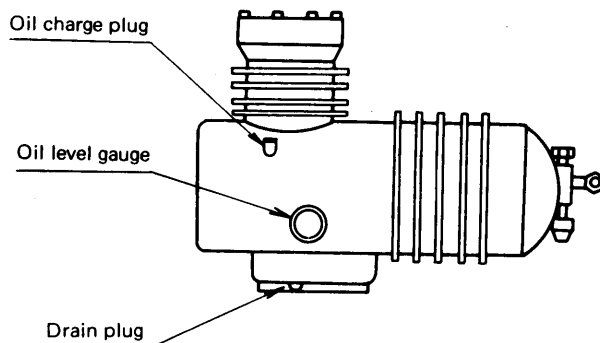

- 2) Tighten up the drain plug.
- 3) Charge the predesigned volume of the oil from the charge plug of the compressor.
- 4) Accomplish vacuum drying and refrigerant charge stated in (1).
- 5) Be sure to stop the compressor while this work is accomplished.
- 6) When the refrigeration oil is discarded, be sure to remove the oil level gauge for cleaning.
- 7) Recommendable refrigeration oil is SUNISO 3GS-DI. SUNISO 3GS – DI is superior to SUNISO 3GS in heat resistance. Maker of SUNISO 3GS – DI is SUN OIL CO., LTD. (U.S.A.)
- 8) Do not mix two refrigeration oils.
- 9) Do not use oil which is left opened to the atmosphere for a long time, as it may contain water. In case oil still remains in the oil can after charging, be sure to cap it.
- (c) In case only the refrigeration oil is exchanged.
- 1) Operate the refrigeration unit to pump down the refrigerant by use of the stop valve at the outlet of the accume-receiver with heat exchanger and stop it when low pressure becomes  $0.1 \text{ kg/cm}^2$ .
- 2) Tighten up the discharge valve of the compressor.
- 3) Open the gauge port on the suction side to extract the refrigerant on the low pressure side.
- 4) Charge the oil from the oil charge plug. At this time, form the vaccum gradually to hasten oil charge.
- 5) Restore the stop valve to its original state.

<https://daikin-p.ru>

**DAIKIN KOGYO CO., LTD.**



Tokyo Branch: Shinjuku Sumitomo Bldg 6-1, 2-chome Nishi-Shinjuku Shinjuku-ku Tokyo Japan

Post No. 160-91 Tel. (03) 347-8257

Telex: 32540

Cable ADDRESS: TKYDAIKINOKAY